

Contents

24 - Mixture preparation - injection	1
1 Safety precautions	1
1.1 Safety precautions when working on the fuel supply system	1
1.2 Safety precautions when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the subframe	2
1.5 Safety precautions when working on the cooling system	2
1.6 Safety precautions when working on the ignition system	2
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 Foreign particles in engine	4
2.3 Contact corrosion	4
2.4 Routing and attachment of pipes, hoses and wiring	5
2.5 Installing radiators and condensers	5
3 Injection system	6
3.1 Test data	6
3.2 Overview of fitting locations - injection system	6
3.3 Exploded view - air cleaner	16
3.4 Removing and installing air filter element	18
3.5 Removing and installing air cleaner housing	20
3.6 Installing air hoses and hose clips	23
3.7 Intake manifold (top section) - exploded view	31
3.8 Removing and installing throttle valve module J338 / J544	33
3.9 Removing and installing intake manifold (top section)	34
3.10 Exploded view - intake manifold (bottom section), fuel rail and injectors	36
3.11 Removing and installing intake manifold (bottom section) with fuel rail	38
3.12 Removing and installing fuel pressure sender G247 / G624	42
3.13 Removing and installing injectors	42
3.14 Checking fuel pressure and residual pressure (up to high-pressure pump)	45
3.15 Exploded view - high-pressure pump	48
3.16 Removing and installing high-pressure pipe	49
3.17 Removing and installing high-pressure pump	51
3.18 Overview - Lambda probes	52
3.19 Removing and installing Lambda probes G39 / G108 / G130 / G131	54
4 Engine control units	56
4.1 Wiring and component check with test box V.A.G 1598/42	56
4.2 Removing and installing engine control units J623 / J624	58
28 - Ignition system	61
1 General notes and safety precautions	61
1.1 General notes on ignition system	61
1.2 Safety precautions	61
2 Servicing ignition system	63
2.1 Test data	63
2.2 Exploded view - ignition system	63
2.3 Removing and installing ignition coils (cylinders 1 ... 5)	64
2.4 Removing and installing ignition coils (cylinders 6 ... 9)	65
2.5 Removing and installing ignition coil (cylinder 10)	66
2.6 Removing and installing knock sensors G61 / G66 / G198 / G199	71
2.7 Removing and installing Hall senders G40 / G163 / G300 / G301	71
2.8 Removing and installing engine speed sender G28	72