

## Contents

<b>24 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 Safety precautions	1
1.2 Rules for cleanliness and instructions for working on fuel system	2
1.3 Important: Required procedure prior to opening high-pressure injection system	3
1.4 Checking vacuum system	4
<b>2 Injection system</b>	<b>6</b>
2.1 Technical data	6
2.2 Overview of fitting locations	6
2.3 Exploded view - air cleaner	14
2.4 Removing and installing air filter element (left and right)	16
2.5 Removing and installing air cleaner housing (left and right)	18
2.6 Removing and installing air mass meter G70 (cylinder bank 1)	19
2.7 Removing and installing air mass meter 2 G246 (cylinder bank 2)	22
2.8 Exploded view - intake manifold	23
2.9 Removing and installing intake manifold	26
2.10 Exploded view - injectors and fuel rail	34
2.11 Exploded view - high-pressure pump	37
2.12 Removing and installing high-pressure pump	39
2.13 Removing and installing injectors	41
2.14 Checking fuel pressure and residual pressure (up to high-pressure pump)	45
2.15 Overview - Lambda probes	49
2.16 Removing and installing Lambda probe G39 and Lambda probe 3 G285	52
2.17 Removing and installing Lambda probes G108 , G130 , G131 , G286 , G287 , G288	53
<b>3 Engine control units</b>	<b>56</b>
3.1 Wiring and component check with test box V.A.G 1598/42	56
3.2 Removing and installing engine control unit J623 (master)	58
3.3 Removing and installing engine control unit 2 J624 (slave)	61
<b>28 - Ignition system</b>	<b>65</b>
<b>1 General notes and safety precautions</b>	<b>65</b>
1.1 General notes on ignition system	65
1.2 Safety precautions	65
<b>2 Servicing ignition system</b>	<b>67</b>
2.1 Test data	67
2.2 Exploded view - ignition system	67
2.3 Removing and installing ignition coils with output stages - cylinders 1 ... 5	68
2.4 Removing and installing ignition coils with output stages - cylinders 6 ... 10	71
2.5 Removing and installing knock sensors	73