

Contents

00 - Technical data	1
1 Technical data	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel system	3
3.2 Procedure before opening high-pressure section of injection system	3
3.3 Working on the cooling system	4
3.4 Using testers and measuring instruments during a road test	4
3.5 Working on the exhaust system	4
4 General repair instructions	5
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	5
4.2 Checking fuel system for leaks	5
4.3 Foreign particles in engine	5
4.4 Contact corrosion!	5
4.5 Routing and attachment of pipes, hoses and wiring	6
4.6 Checking vacuum system	6
4.7 Installing radiators, condensers and charge air coolers	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Securing engine to assembly stand	23
1.3 Installing engine	24
2 Overview of fitting locations	29
13 - Crankshaft group	30
1 Dismantling and assembling engine	30
1.1 Poly V-belt - exploded view	30
1.2 Routing of poly V-belt	32
1.3 Removing and installing poly V-belt	32
1.4 Removing and installing crankshaft pulley	33
1.5 Removing and installing bracket for ancillaries	34
2 Sealing flanges and flywheel/drive plate - exploded view	38
2.1 Renewing crankshaft oil seal - pulley end	39
2.2 Removing and installing sealing flange (front)	42
2.3 Removing and installing dual mass flywheel/ drive plate	46
3 Crankshaft - exploded view	50
3.1 Extracting and driving in needle bearing for crankshaft	52
3.2 Crankshaft dimensions	53
3.3 Removing and installing chain sprocket	54
4 Pistons and conrods - exploded view	56
4.1 Piston and cylinder dimensions	58
15 - Cylinder head, valve gear	59
1 Toothed belt drive	59
1.1 Toothed belt drive - exploded view	59
1.2 Removing and installing toothed belt	61
2 Cylinder head	67
2.1 Cylinder head - exploded view	67
2.2 Removing and installing camshaft control valve 1 N205	69
2.3 Removing and installing cylinder head cover	71

2.4	Removing and installing cylinder head	73
3	Checking compression	83
4	Valve gear	86
4.1	Valve gear - exploded view	86
4.2	Removing and installing camshaft adjuster	88
4.3	Removing and installing camshafts	92
4.4	Renewing valve stem oil seals with cylinder head installed	94
4.5	Renewing valve stem oil seals with cylinder head removed	98
4.6	Checking valve guides	102
4.7	Renewing exhaust camshaft oil seal	103
17 - Lubrication		108
1	Removing and installing parts of lubrication system	108
1.1	Part I: Sump - exploded view	108
1.2	Part II: Balance shaft assembly with oil pump - exploded view	109
1.3	Removing and installing sump	111
1.4	Removing and installing balance shaft assembly with oil pump	118
2	Oil filter bracket - exploded view	124
2.1	Draining oil filter housing	125
2.2	Checking oil pressure and oil pressure switch	126
2.3	Removing and installing engine oil cooler	128
2.4	Removing and installing oil filter bracket	130
19 - Cooling		135
1	Removing and installing parts of cooling system	135
1.1	Connection diagram for coolant hoses (vehicles without auxiliary heater)	135
1.2	Connection diagram for coolant hoses (vehicles with auxiliary heater)	137
1.3	Draining and filling cooling system	138
1.4	Thermostat - exploded view	143
1.5	Removing and installing thermostat	143
1.6	Removing and installing coolant pump	147
1.7	Removing and installing coolant pipes (at side)	149
1.8	Removing and installing radiator	152
1.9	Removing and installing radiator cowl	156
1.10	Removing and installing radiator fan	157
1.11	Renewing radiator fan motor	158
1.12	Checking cooling system for leaks	158
21 - Turbocharging/supercharging		161
1	Turbocharger	161
1.1	Fitting hose connections with plug-in connectors	161
1.2	Turbocharger - exploded view	162
1.3	Removing and installing turbocharger	166
1.4	Checking vacuum unit for turbocharger	171
1.5	Removing and installing vacuum unit for turbocharger	173
1.6	Adjusting vacuum unit for turbocharger	173
1.7	Charge air cooling - exploded view	178
1.8	Removing and installing charge air cooler	179
1.9	Removing and installing charge pressure sender G31	180
26 - Exhaust system		181
1	Removing and installing parts of exhaust system	181
1.1	Silencers - exploded view	181
1.2	Separating centre and rear silencers	183
1.3	Removing and installing front exhaust pipe	185
1.4	Removing and installing catalytic converter	186

1.5	Stress-free alignment of exhaust system	188
1.6	Checking exhaust system for leaks	190