

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1</b> <b>Technical data</b>	<b>1</b>
<b>1.1</b> <b>Engine number</b>	1
<b>1.2</b> <b>Engine data</b>	2
<b>2</b> <b>Safety precautions</b>	<b>3</b>
<b>2.1</b> <b>Working on the fuel system</b>	3
<b>2.2</b> <b>Procedure before opening high-pressure section of injection system</b>	3
<b>2.3</b> <b>Working on the cooling system</b>	4
<b>2.4</b> <b>Using testers and measuring instruments during a road test</b>	4
<b>2.5</b> <b>Working on the exhaust system</b>	4
<b>3</b> <b>General repair instructions</b>	<b>5</b>
<b>3.1</b> <b>Rules for cleanliness when working on fuel supply system, injection system and turbocharger</b>	5
<b>3.2</b> <b>Checking fuel system for leaks</b>	5
<b>3.3</b> <b>Foreign particles in engine</b>	5
<b>3.4</b> <b>Contact corrosion!</b>	5
<b>3.5</b> <b>Routing and attachment of pipes, hoses and wiring</b>	6
<b>3.6</b> <b>Checking vacuum system</b>	6
<b>3.7</b> <b>Installing radiators and condensers</b>	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1</b> <b>Removing and installing engine</b>	<b>8</b>
<b>1.1</b> <b>Removing and installing engine</b>	8
<b>1.2</b> <b>Removing engine</b>	9
<b>1.3</b> <b>Separating engine and gearbox</b>	26
<b>1.4</b> <b>Securing engine to assembly stand</b>	30
<b>1.5</b> <b>Installing engine</b>	32
<b>13 - Crankshaft group</b>	<b>38</b>
<b>1</b> <b>Servicing work on pulley end</b>	<b>38</b>
<b>1.1</b> <b>Poly V-belt drive for power steering pump, alternator and air conditioner compressor - exploded view</b>	38
<b>1.2</b> <b>Removing and installing poly V-belt</b>	39
<b>1.3</b> <b>Removing and installing tensioner for poly V-belt</b>	40
<b>1.4</b> <b>Removing and installing vibration damper</b>	42
<b>2</b> <b>Removing and installing sealing flange, damper unit / flywheel</b>	<b>44</b>
<b>2.1</b> <b>Renewing crankshaft oil seal (pulley end)</b>	45
<b>2.2</b> <b>Removing and installing sealing flange (front)</b>	47
<b>2.3</b> <b>Removing and installing sealing flange (rear)</b>	50
<b>2.4</b> <b>Removing and installing flywheel</b>	52
<b>3</b> <b>Removing and installing crankshaft</b>	<b>54</b>
<b>3.1</b> <b>Crankshaft dimensions</b>	57
<b>3.2</b> <b>Measuring axial clearance</b>	57
<b>3.3</b> <b>Measuring radial clearance</b>	57
<b>3.4</b> <b>Removing and installing drive chain sprocket for oil pump</b>	58
<b>4</b> <b>Dismantling and assembling pistons and conrods</b>	<b>60</b>
<b>4.1</b> <b>Piston and cylinder dimensions</b>	63
<b>4.2</b> <b>Measuring radial clearance of conrods</b>	63
<b>15 - Cylinder head, valve gear</b>	<b>64</b>
<b>1</b> <b>Toothed belt drive</b>	<b>64</b>
<b>1.1</b> <b>Toothed belt covers - exploded view</b>	64
<b>1.2</b> <b>Toothed belt drive - exploded view</b>	65



1.3	Removing and installing toothed belt . . . . .	67
<b>2</b>	<b>Removing and installing cylinder head . . . . .</b>	<b>78</b>
2.1	Cylinder head - exploded view . . . . .	78
2.2	Removing and installing cylinder head cover (left-side) . . . . .	80
2.3	Removing and installing cylinder head cover (right-side) . . . . .	82
2.4	Removing cylinder head (left-side) . . . . .	85
2.5	Removing cylinder head (right-side) . . . . .	89
2.6	Installing cylinder head . . . . .	93
2.7	Checking compression . . . . .	95
<b>3</b>	<b>Removing and installing intake manifold . . . . .</b>	<b>100</b>
3.1	Intake manifold - exploded view . . . . .	100
3.2	Removing and installing intake manifold . . . . .	100
<b>4</b>	<b>Servicing valve gear . . . . .</b>	<b>106</b>
4.1	Valve gear - exploded view . . . . .	106
4.2	Camshaft adjustment - exploded view . . . . .	108
4.3	Measuring axial clearance of camshafts . . . . .	110
4.4	Renewing camshaft oil seals . . . . .	110
4.5	Removing and installing camshafts and camshaft adjusters . . . . .	112
4.6	Checking hydraulic bucket tappets . . . . .	119
4.7	Renewing valve stem oil seals with cylinder head installed . . . . .	120
4.8	Renewing valve stem oil seals with cylinder head removed . . . . .	124
4.9	Checking valve guides . . . . .	128
4.10	Checking valves . . . . .	129
4.11	Machining valve seats . . . . .	129
<b>17 - Lubrication</b>	<b>131</b>	
<b>1</b>	<b>Removing and installing parts of lubrication system . . . . .</b>	<b>131</b>
1.1	Sump (bottom section), oil pump - exploded view . . . . .	131
1.2	Removing and installing sump (bottom section) . . . . .	132
1.3	Removing and installing oil pump . . . . .	135
1.4	Sump (top section), oil filter - exploded view . . . . .	139
1.5	Removing and installing sump (top section) . . . . .	141
1.6	Removing and installing drive chain and chain tensioner for oil pump . . . . .	148
1.7	Oil retention valve and spray nozzle valve - exploded view . . . . .	149
1.8	Checking oil pressure and oil pressure switch . . . . .	150
1.9	Engine oil . . . . .	152
1.10	Checking oil level . . . . .	152
<b>19 - Cooling</b>	<b>154</b>	
<b>1</b>	<b>Removing and installing parts of cooling system . . . . .</b>	<b>154</b>
1.1	Diagram of coolant hose connections . . . . .	154
1.2	Draining and filling cooling system . . . . .	156
1.3	Coolant pump and thermostat . . . . .	161
1.4	Removing and installing coolant pump . . . . .	162
1.5	Removing, installing and checking thermostat . . . . .	163
1.6	Coolant pipes - exploded view . . . . .	166
1.7	Removing and installing coolant pipe (front) . . . . .	167
1.8	Removing and installing coolant pipe (right-side) . . . . .	170
1.9	Removing and installing coolant pipe (rear) . . . . .	170
1.10	Removing and installing radiator . . . . .	172
1.11	Removing and installing radiator cowl . . . . .	176
1.12	Removing and installing radiator fan . . . . .	177
1.13	Checking cooling system for leaks . . . . .	177
<b>26 - Exhaust system</b>	<b>179</b>	

---

---

<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>179</b>
1.1	Exhaust system - exploded view	179
1.2	Separating centre and rear silencers	182
1.3	Removing and installing front exhaust pipe (left-side) with catalytic converter	183
1.4	Removing and installing front exhaust pipe (right-side) with catalytic converter	188
1.5	Exhaust manifold - exploded view	191
1.6	Removing and installing exhaust manifold (left-side)	193
1.7	Removing and installing exhaust manifold (right-side)	193
1.8	Stress-free alignment of exhaust system	195
1.9	Checking exhaust system for leaks	197
<b>2</b>	<b>Servicing secondary air system</b>	<b>198</b>
2.1	Principle and function	198
2.2	Removing and installing secondary air pump motor V101	201
2.3	Checking combination valves for secondary air system for correct operation and leakage	201
2.4	Removing and installing combination valve for secondary air system (left-side)	203
2.5	Removing and installing combination valve for secondary air system (right-side)	205