

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel system	3
3.2 Procedure before opening high-pressure section of injection system	4
3.3 Working on the cooling system	4
3.4 Working on vehicles with start/stop system	4
3.5 Using testers and measuring instruments during a road test	5
3.6 Working on the exhaust system	5
4 General repair instructions	6
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger/supercharger	6
4.2 Checking fuel system for leaks	6
4.3 Foreign particles in engine	7
4.4 Contact corrosion!	7
4.5 Routing and attachment of pipes, hoses and wiring	7
4.6 Installing radiators and condensers	7
4.7 Checking vacuum system	7
10 - Removing and installing engine	9
1 Removing engine	9
2 Separating engine from automatic gearbox 09L	28
3 Securing engine to engine and gearbox support	35
4 Installing engine	38
5 Assembly mountings	45
5.1 Exploded view - assembly mountings	45
5.2 Removing and installing engine mounting (left-side)	46
5.3 Removing and installing engine mounting (right-side)	49
5.4 Removing and installing torque reaction support	52
13 - Crankshaft group	54
1 Cylinder block (pulley end)	54
1.1 Exploded view - poly V-belt drive for supercharger	54
1.2 Removing and installing poly V-belt for supercharger	55
1.3 Removing and installing poly V-belt tensioner for supercharger	57
1.4 Exploded view - poly V-belt drive	57
1.5 Removing and installing poly V-belt	60
1.6 Removing and installing tensioner for poly V-belt	61
1.7 Removing and installing vibration damper	62
1.8 Renewing sealing flange (pulley end) with crankshaft oil seal	63
2 Cylinder block (gearbox end)	67
2.1 Exploded view - drive plate, vehicles with automatic gearbox 09L	67
2.2 Removing and installing drive plate - vehicles with automatic gearbox 09L	68
2.3 Renewing crankshaft oil seal (gearbox end)	68
3 Crankshaft	71
3.1 Exploded view - crankshaft	71
3.2 Crankshaft dimensions	74
3.3 Measuring axial clearance of crankshaft	74
3.4 Measuring radial clearance of crankshaft	75
4 Pistons and conrods	76



4.1	Exploded view - pistons and conrods	76
4.2	Piston and cylinder dimensions	79
4.3	Measuring radial clearance of conrods	79
15	Cylinder head, valve gear	80
1	Chain drive	80
1.1	Exploded view - timing chain covers	80
1.2	Removing and installing timing chain covers (left and right)	82
1.3	Removing and installing timing chain cover (bottom)	85
1.4	Exploded view - camshaft timing chains	89
1.5	Removing timing chains from camshafts	92
1.6	Removing and installing camshaft timing chains	101
1.7	Exploded view - drive chain for valve gear	103
1.8	Removing and installing drive chain for valve gear	104
1.9	Exploded view - drive chain for auxiliary drives	105
1.10	Removing and installing drive chain for auxiliary drives	106
1.11	Exploded view - balance shaft	109
1.12	Removing and installing balance shaft	110
2	Cylinder head	113
2.1	Exploded view - cylinder head	113
2.2	Removing and installing cylinder head cover (left-side)	116
2.3	Removing and installing cylinder head cover (right-side)	117
2.4	Removing and installing cylinder heads	117
2.5	Checking compression	125
3	Servicing valve gear	128
3.1	Exploded view - valve gear	128
3.2	Measuring axial clearance of camshafts	131
3.3	Measuring radial clearance of camshafts	132
3.4	Removing and installing camshafts	132
3.5	Checking hydraulic valve compensation elements	138
3.6	Renewing valve stem oil seals with cylinder head installed	140
3.7	Renewing valve stem oil seals with cylinder head removed	143
3.8	Valve dimensions	147
3.9	Checking valve guides	147
3.10	Checking valves	148
17	Lubrication	149
1	Sump (bottom section), sump (top section), oil pump, engine oil cooler	149
1.1	Exploded view - sump (bottom section), sump (top section), oil pump, engine oil cooler	149
1.2	Removing and installing oil level and oil temperature sender G266	153
1.3	Removing and installing sump (bottom section)	153
1.4	Removing and installing oil pump	155
1.5	Removing and installing sump (top section)	155
1.6	Removing and installing engine oil cooler	158
2	Oil filter housing, oil pressure switch	161
2.1	Exploded view - oil filter housing, oil pressure switch	161
2.2	Removing and installing oil filter housing	162
2.3	Checking oil pressure switch F22 / oil pressure switch for reduced oil pressure F378	164
2.4	Removing and installing oil pressure switch F22	164
2.5	Removing and installing oil pressure switch for reduced oil pressure F378	166
2.6	Removing and installing valve for oil pressure control N428	167
2.7	Checking oil pressure	168
3	Oil retention valves, oil separator	170
3.1	Exploded view - oil retention valves, oil separator	170
3.2	Removing and installing crankcase breather hoses - not on USA models	171

3.3	Removing and installing cover with oil separator	172
3.4	Engine oil	172
3.5	Checking oil level	172
19	- Cooling	173
1	Cooling system	173
1.1	Connection diagram - coolant hoses	173
1.2	Draining and filling cooling system	177
1.3	Checking cooling system for leaks	184
2	Coolant pump and thermostat	187
2.1	Exploded view - coolant pump, thermostat and connection	187
2.2	Removing and installing coolant pump	188
2.3	Removing and installing thermostat	189
2.4	Checking thermostat	190
3	Coolant pipes and charge air cooling pump V188	191
3.1	Exploded view - coolant pipes	191
3.2	Removing and installing coolant temperature sender G62	193
3.3	Removing and installing coolant pipes (left-side)	194
3.4	Removing and installing coolant pipes (front left)	197
3.5	Removing and installing coolant pipe (front)	199
3.6	Removing and installing coolant pipe (top)	203
3.7	Removing and installing coolant pipes on supercharger	205
3.8	Removing and installing charge air cooling pump V188	207
3.9	Exploded view - continued coolant circulation pump V51	208
3.10	Removing and installing continued coolant circulation pump V51	209
4	Radiator and radiator fans	211
4.1	Exploded view - radiator and radiator fans	211
4.2	Removing and installing radiator	212
4.3	Removing and installing water radiator for charge air cooling circuit	217
4.4	Removing and installing radiator cowl	220
4.5	Removing and installing radiator fans V7 / V177	222
21	- Turbocharging/supercharging	223
1	Supercharger	223
1.1	Exploded view - supercharger	223
1.2	Removing and installing charge pressure sender G31 / G447	225
1.3	Removing and installing supercharger	226
1.4	Exploded view - charge air coolers	230
1.5	Securing supercharger to engine and gearbox support for assembly work	231
1.6	Securing supercharger to engine and gearbox support for leak test	233
1.7	Removing and installing charge air cooler	234
1.8	Exploded view - drive unit	237
1.9	Removing and installing drive unit and damper spring	238
1.10	Checking supercharger for leaks	240
26	- Exhaust system	243
1	Silencers	243
1.1	Exploded view - silencers	243
1.2	Removing and installing front exhaust pipe (left-side) with catalytic converter	246
1.3	Removing and installing front exhaust pipe (right-side) with catalytic converter	248
1.4	Separating centre and rear silencers	251
1.5	Renewing tailpipe	252
1.6	Stress-free alignment of exhaust system	252
1.7	Aligning tailpipes	253
1.8	Checking exhaust system for leaks	254



2	Exhaust manifolds	255
2.1	Exploded view - exhaust manifold	255
2.2	Removing and installing exhaust manifold (left-side)	256
2.3	Removing and installing exhaust manifold (right-side)	258
3	Secondary air system	260
3.1	Exploded view - secondary air system	260
3.2	Removing and installing secondary air pump motor V101	261
3.3	Checking combination valves for secondary air system for correct operation and leakage	262
3.4	Removing and installing combination valve for secondary air system (left-side)	263
3.5	Removing and installing combination valve for secondary air system (right-side)	264
3.6	Removing and installing sender 1 for secondary air pressure G609	265