

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel supply system	3
3.2 Working on the cooling system	4
3.3 Using testers and measuring instruments during a road test	4
3.4 Working on the exhaust system	4
4 Repair instructions	5
4.1 Rules for cleanliness	5
4.2 Checking fuel system for leaks	5
4.3 Foreign particles in engine	5
4.4 Contact corrosion	6
4.5 Routing and attachment of pipes, hoses and wiring	6
4.6 Installing radiators and condensers	6
10 - Removing and installing engine	7
1 Removing engine	7
2 Separating engine and gearbox	27
3 Securing engine to engine and gearbox support	34
4 Installing engine	36
5 Assembly mountings	43
5.1 Assembly mountings - exploded view	43
5.2 Removing and installing engine mounting (left-side)	44
5.3 Removing and installing engine mounting (right-side)	47
5.4 Removing and installing torque reaction support	51
13 - Crankshaft group	53
1 Cylinder block (pulley end)	53
1.1 Poly V-belt drive - exploded view	53
1.2 Removing and installing poly V-belt	54
1.3 Removing and installing tensioner for poly V-belt	55
1.4 Removing and installing vibration damper	56
1.5 Renewing crankshaft oil seal (pulley end)	56
2 Cylinder block (gearbox end)	59
2.1 Drive plate - exploded view	59
2.2 Removing and installing drive plate	59
2.3 Renewing crankshaft oil seal (gearbox end)	60
3 Crankshaft	63
3.1 Crankshaft - exploded view	63
3.2 Allocation of main bearing shells for new crankshafts	66
3.3 Allocation of main bearing shells on used and machined crankshafts	68
3.4 Crankshaft dimensions	68
3.5 Measuring axial clearance	68
3.6 Measuring radial clearance	69
4 Pistons and conrods	71
4.1 Pistons and conrods - exploded view	71
4.2 Removing and installing pistons	73
4.3 Measuring radial clearance of conrods	74
4.4 Checking pistons and cylinder bores	74



15 - Cylinder head, valve gear	76
1 Chain drive	76
1.1 Timing chain covers - exploded view	76
1.2 Removing and installing timing chain covers (left and right)	78
1.3 Removing and installing timing chain cover (bottom)	81
1.4 Camshaft timing chains - exploded view	86
1.5 Removing camshaft timing chains from camshafts	90
1.6 Removing and installing camshaft timing chains	97
1.7 Drive chain for valve gear - exploded view	100
1.8 Removing and installing drive chain for valve gear	102
1.9 Drive chain for auxiliary drives - exploded view	104
1.10 Removing and installing drive chain for auxiliary drives	105
1.11 Auxiliary drives - exploded view	107
1.12 Renewing oil seals for auxiliary drives	108
1.13 Removing and installing spur gear drive	110
2 Cylinder head	115
2.1 Cylinder head - exploded view	115
2.2 Removing and installing cylinder head cover (left-side)	117
2.3 Removing and installing cylinder head cover (right-side)	119
2.4 Removing and installing cylinder head	121
2.5 Checking compression pressure	128
3 Valve gear	133
3.1 Valve gear - exploded view	133
3.2 Measuring axial clearance of camshafts	136
3.3 Removing and installing camshafts	136
3.4 Checking supporting elements with hydraulic clearance compensation	144
3.5 Renewing valve stem oil seals with cylinder head installed	146
3.6 Renewing valve stem oil seals with cylinder head removed	149
3.7 Valve dimensions	153
3.8 Checking valve guides	153
3.9 Checking valves	154
17 - Lubrication	155
1 Oil pump and sump (bottom section)	155
1.1 Oil pump and sump (bottom section) - exploded view	155
1.2 Removing and installing sump (bottom section)	157
1.3 Removing and installing oil pump	159
2 Sump (top section)	162
2.1 Sump (top section) - exploded view	162
2.2 Removing and installing sump (top section)	163
3 Oil retention valve, spray nozzle valve, oil filter housing, oil cooler, oil pressure switch ..	168
3.1 Oil retention valve and spray nozzle valve - exploded view	168
3.2 Removing and installing oil retention valve and spray nozzle valve	169
3.3 Removing and installing hose for crankcase breather system	171
3.4 Oil filter housing - exploded view	171
3.5 Removing and installing oil filter housing	173
3.6 Removing and installing oil cooler	173
3.7 Removing and installing oil pressure switch F1	175
3.8 Checking oil pressure and oil pressure switch F1	175
3.9 Engine oil	177
3.10 Checking oil level	177
19 - Cooling	179
1 Cooling system	179

1.1	Diagrams of coolant hose connections	179
1.2	Draining and filling cooling system	182
1.3	Checking cooling system for leaks	187
2	Coolant pump, thermostat, coolant pipes	190
2.1	Coolant pump and thermostat - exploded view	190
2.2	Removing and installing coolant pump	192
2.3	Removing and installing map-controlled engine cooling system thermostat F265	195
2.4	Thermostat opening values	196
2.5	Removing and installing continued coolant circulation pump V51	196
2.6	Coolant pipes - exploded view	198
2.7	Removing and installing coolant temperature sender G62	200
2.8	Removing and installing coolant pipe (front)	201
2.9	Removing and installing coolant pipe (rear)	202
2.10	Removing and installing coolant pipe (left-side)	205
2.11	Removing and installing coolant pipe (right-side)	208
3	Radiator and radiator fans	213
3.1	Radiator and radiator fans - exploded view	213
3.2	Removing and installing radiator	214
3.3	Removing and installing radiator cowl	218
3.4	Removing and installing radiator fans	219
26 - Exhaust system		221
1	Silencers	221
1.1	Silencers - exploded view	221
1.2	Removing and installing front silencer (left-side)	223
1.3	Removing and installing front silencer (right-side)	225
1.4	Separating centre and rear silencers	226
1.5	Renewing tailpipe	227
1.6	Stress-free alignment of exhaust system	228
1.7	Aligning tailpipes	229
2	Exhaust manifolds	231
2.1	Exhaust manifold - exploded view	231
2.2	Removing and installing exhaust manifold (left-side) with catalytic converter	233
2.3	Removing and installing exhaust manifold (right-side) with catalytic converter	235
3	Secondary air system	240
3.1	Principle and function	240
3.2	Secondary air system - exploded view	240
3.3	Removing and installing secondary air pump	242
3.4	Checking combination valves for secondary air system for correct operation and leakage	242
3.5	Removing and installing combination valve for secondary air system (left-side)	243
3.6	Removing and installing combination valve for secondary air system (right-side)	244