

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel system	3
3.2 Procedure before opening high-pressure section of injection system	3
3.3 Working on the cooling system	4
3.4 Working on vehicles with start/stop system	4
3.5 Using testers and measuring instruments during a road test	4
3.6 Working on the exhaust system	5
4 General repair instructions	6
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
4.2 Checking fuel system for leaks	6
4.3 Foreign particles in engine	6
4.4 Contact corrosion	6
4.5 Routing and attachment of pipes, hoses and wiring	7
4.6 Installing radiators, condensers and charge air coolers	7
4.7 Checking vacuum system	7
4.8 Nuts, bolts	8
4.9 Identification plates	8
4.10 Use of impact wrenches	8
10 - Removing and installing engine	10
1 Removing engine	10
2 Separating engine and gearbox	32
3 Securing engine to engine and gearbox support	39
4 Installing engine	42
5 Assembly mountings	50
5.1 Exploded view - assembly mountings	50
5.2 Removing and installing engine mounting (left-side)	51
5.3 Removing and installing engine mounting (right-side)	52
13 - Crankshaft group	61
1 Cylinder block (pulley end)	61
1.1 Exploded view - poly V-belt drive	61
1.2 Removing and installing poly V-belt	62
1.3 Removing and installing tensioner for poly V-belt	65
1.4 Removing and installing vibration damper	66
1.5 Renewing crankshaft oil seal (pulley end)	66
2 Cylinder block (gearbox end)	69
2.1 Exploded view - drive plate	69
2.2 Removing and installing drive plate	69
2.3 Renewing crankshaft oil seal (gearbox end)	70
3 Crankshaft	73
3.1 Exploded view - crankshaft	73
3.2 Allocation of main bearing shells for new crankshaft	77
3.3 Allocation of main bearing shells on used and machined crankshafts	79
3.4 Crankshaft dimensions	79
3.5 Measuring axial clearance of crankshaft	79
3.6 Measuring radial clearance of crankshaft	80



4	Pistons and conrods	82
4.1	Exploded view - pistons and conrods	82
4.2	Piston and cylinder dimensions	85
4.3	Measuring radial clearance of conrods	85
15	Cylinder head, valve gear	86
1	Chain drive	86
1.1	Exploded view - timing chain covers	86
1.2	Removing and installing timing chain cover (left-side)	87
1.3	Removing and installing timing chain cover (right-side)	90
1.4	Removing and installing timing chain cover (bottom)	92
1.5	Exploded view - camshaft timing chains	96
1.6	Removing timing chains from camshafts	100
1.7	Removing and installing camshaft timing chains	108
1.8	Exploded view - drive chain for valve gear	110
1.9	Removing and installing drive chain for valve gear	112
1.10	Exploded view - drive chain for auxiliary drives	113
1.11	Removing and installing drive chain for auxiliary drives	114
1.12	Exploded view - auxiliary drives	117
1.13	Renewing oil seal for air conditioner compressor drive	118
1.14	Renewing oil seal for power steering pump drive	120
1.15	Removing and installing spur gear drive	121
2	Cylinder head	125
2.1	Exploded view - cylinder head and cylinder head cover	125
2.2	Removing and installing cylinder head cover (left-side)	128
2.3	Removing and installing cylinder head cover (right-side)	129
2.4	Removing and installing cylinder head	131
2.5	Checking compression	136
3	Valve gear	138
3.1	Exploded view - valve gear	138
3.2	Measuring axial clearance of camshafts	141
3.3	Measuring radial clearance of camshafts	142
3.4	Removing and installing camshafts	142
3.5	Renewing valve stem oil seals with cylinder head installed	148
3.6	Renewing valve stem oil seals with cylinder head removed	151
3.7	Checking hydraulic compensation elements	155
3.8	Valve dimensions	159
3.9	Checking valve guides	159
3.10	Checking valves	160
17	Lubrication	161
1	Oil pump and intake module	161
1.1	Exploded view - oil pump, intake module	161
1.2	Removing and installing oil pump	164
2	Oil filter housing, engine oil cooler, oil retention valves, spray nozzle valve	167
2.1	Exploded view - oil filter housing	167
2.2	Removing and installing oil filter housing	168
2.3	Exploded view - engine oil cooler (top), oil retention valves, spray nozzle valve	169
2.4	Removing and installing engine oil cooler (top)	171
2.5	Removing and installing mounting plate	171
2.6	Removing and installing oil retention valve 1 and spray nozzle valve	173
2.7	Removing and installing oil retention valve 2	174
2.8	Removing and installing crankcase breather hoses	174
2.9	Removing and installing oil pressure switch F1	175
2.10	Checking oil pressure switch F1	175

2.11	Checking oil pressure	178
3	Engine oil cooler (front), oil reservoir	180
3.1	Exploded view - engine oil cooler (front), oil reservoir	180
3.2	Removing and installing oil level and oil temperature sender G266	183
3.3	Removing and installing engine oil cooler (front)	183
3.4	Removing and installing temperature regulator	185
3.5	Removing and installing oil reservoir	186
3.6	Installing oil return line with oil reservoir	190
3.7	Engine oil	192
3.8	Checking oil level	192
3.9	First filling of engine with oil after repairs	192
19	Cooling	193
1	Cooling system	193
1.1	Connection diagram - coolant hoses	193
1.2	Draining and filling cooling system	195
2	Thermostat, coolant pumps and coolant pipes	201
2.1	Exploded view - thermostat	201
2.2	Removing and installing thermostat housing	202
2.3	Checking thermostat	202
2.4	Exploded view - coolant pump	202
2.5	Removing and installing coolant pump	203
2.6	Removing and installing coolant temperature sender G62	208
2.7	Removing and installing circulation pump 2 V403	209
2.8	Exploded view - continued coolant circulation pump V51	210
2.9	Removing and installing continued coolant circulation pump V51	211
2.10	Exploded view - coolant pipes	212
2.11	Removing and installing coolant pipe (front)	214
2.12	Removing and installing coolant pipes (bottom)	215
2.13	Removing and installing coolant pipe (right-side) with coolant lines	217
3	Radiators and radiator fans	219
3.1	Exploded view - radiators	219
3.2	Removing and installing radiator (top)	220
3.3	Removing and installing radiator (centre)	221
3.4	Removing and installing radiators (left and right)	225
3.5	Removing and installing radiator (bottom)	227
3.6	Exploded view - radiator fans	229
3.7	Removing and installing radiator cowl	230
3.8	Removing and installing radiator fans V7 / V177	230
3.9	Checking cooling system for leaks	230
21	Turbocharging/supercharging	232
1	Turbochargers	232
1.1	Exploded view - turbocharger	232
1.2	Removing and installing turbocharger (left-side)	234
1.3	Removing and installing turbocharger (right-side)	238
2	Charge air cooling	242
2.1	Exploded view - air hoses	242
2.2	Checking air hoses for correct seating	243
2.3	Installing air hoses and hose clips	243
2.4	Exploded view - charge air cooling	251
2.5	Removing and installing charge air cooler	253
2.6	Removing and installing radiator fans V35 / V402	256
2.7	Removing and installing charge pressure sender G31 / G447	257



26 - Exhaust system	258
1 Silencers	258
1.1 Exploded view - silencers	258
1.2 Removing and installing front exhaust pipe (left-side) with catalytic converters	259
1.3 Removing and installing front exhaust pipe (right-side) with catalytic converters	261
1.4 Stress-free alignment of exhaust system	262
1.5 Aligning tailpipes	262
1.6 Checking exhaust system for leaks	263
2 Exhaust manifold	264
3 Secondary air system	265
3.1 Connection diagram for vacuum lines and hoses	265
3.2 Exploded view - secondary air system	266
3.3 Removing and installing secondary air pump V101	267
3.4 Checking combination valves for secondary air system for correct operation and leakage	267
3.5 Removing and installing combination valve for secondary air system (left-side)	269
3.6 Removing and installing combination valve for secondary air system (right-side)	270