

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Procedure before opening high-pressure section of injection system	4
4 General repair instructions	5
4.1 Rules for cleanliness when working on fuel supply system and injection system	5
4.2 Checking for leaks in the fuel system	5
4.3 Foreign particles in engine	5
4.4 Contact corrosion!	5
4.5 Routing and attachment of pipes, hoses and wiring	6
4.6 Installing radiators and condensers	6
4.7 Checking vacuum system	6
10 - Removing and installing engine	7
1 Removing engine	7
2 Separating engine and gearbox	26
3 Securing engine to engine and gearbox support	34
4 Installing engine	36
5 Assembly mountings	42
5.1 Assembly mountings - exploded view	42
5.2 Removing and installing engine mounting (left and right)	43
13 - Crankshaft group	46
1 Cylinder block (pulley end)	46
1.1 Poly V-belt drive - exploded view	46
1.2 Removing and installing poly V-belt	47
1.3 Removing and installing vibration damper	48
1.4 Renewing crankshaft oil seal (pulley end)	49
2 Cylinder block (gearbox end)	52
2.1 Drive plate - exploded view	52
2.2 Removing and installing drive plate	52
2.3 Renewing crankshaft oil seal (gearbox end)	53
3 Crankshaft	55
3.1 Crankshaft - exploded view	55
3.2 Allocation of main bearing shells for new crankshafts	58
3.3 Allocation of main bearing shells on used and machined crankshafts	59
3.4 Crankshaft dimensions	60
3.5 Measuring axial clearance of crankshaft	60
3.6 Measuring radial clearance of crankshaft	61
4 Pistons and conrods	62
4.1 Pistons and conrods - exploded view	62
4.2 Piston and cylinder dimensions	65
4.3 Measuring radial clearance of conrods	65
15 - Cylinder head, valve gear	66
1 Chain drive	66
1.1 Timing chain covers - exploded view	66
1.2 Removing and installing timing chain covers (left and right)	67
1.3 Removing and installing timing chain cover (bottom)	70
1.4 Camshaft timing chains - exploded view	75

1.5	Removing timing chains from camshafts	79
1.6	Removing and installing camshaft timing chains	86
1.7	Drive chain for valve gear - exploded view	88
1.8	Removing and installing drive chain for valve gear	90
1.9	Drive chain for auxiliary drives - exploded view	91
1.10	Removing and installing drive chain for auxiliary drives	92
1.11	Auxiliary drives - exploded view	96
1.12	Renewing oil seal for AC compressor drive	97
1.13	Renewing oil seal for power steering pump drive	99
1.14	Removing and installing spur gear drive	100
1.15	Balance shaft - exploded view	104
1.16	Removing and installing balance shaft	105
2	Cylinder head	108
2.1	Cylinder head - exploded view	108
2.2	Removing and installing cylinder head cover (left-side)	109
2.3	Removing and installing cylinder head cover (right-side)	112
2.4	Removing and installing cylinder head	115
2.5	Checking compression	122
3	Valve gear	128
3.1	Valve gear - exploded view	128
3.2	Measuring axial clearance of camshafts	130
3.3	Measuring radial clearance of camshafts	131
3.4	Removing and installing camshafts	131
3.5	Renewing valve stem oil seals (cylinder head installed)	136
3.6	Renewing valve stem oil seals (cylinder head removed)	140
3.7	Checking hydraulic valve compensation elements	144
3.8	Valve dimensions	145
3.9	Checking valve guides	145
3.10	Checking valves	146
17 - Lubrication	147	
1	Lubrication system	147
1.1	Oil pump, sump (bottom section) - exploded view	147
1.2	Removing and installing oil level and oil temperature sender G266	149
1.3	Removing and installing sump (bottom section)	149
1.4	Removing and installing oil pump	151
1.5	Sump (top section) - exploded view	154
1.6	Removing and installing sump (top section)	156
1.7	Oil retention valve and spray nozzle valve - exploded view	158
1.8	Removing and installing oil retention valve and spray nozzle valve	159
1.9	Removing and installing hose for crankcase breather system	160
1.10	Oil filter housing - exploded view	160
1.11	Removing and installing oil filter housing	162
1.12	Removing and installing engine oil cooler	162
1.13	Removing and installing oil pressure switch F1	164
1.14	Checking oil pressure and oil pressure switch F1	164
1.15	Engine oil	165
1.16	Checking oil level	165
19 - Cooling	166	
1	Cooling system	166
1.1	Connection diagram for coolant hoses - vehicles without auxiliary heater	166
1.2	Connection diagram for coolant hoses - vehicles with auxiliary heater	168
1.3	Draining and filling cooling system	169
1.4	Coolant pump and thermostat - exploded view	174
1.5	Removing and installing coolant pump	175

1.6	Removing and installing thermostat housing	177
1.7	Thermostat opening values 1)	178
1.8	Removing and installing coolant temperature sender G62	178
1.9	Removing and installing continued coolant circulation pump V51	180
1.10	Coolant pipes - exploded view	181
1.11	Removing and installing coolant pipe (bottom front)	183
1.12	Removing and installing coolant pipe (front)	184
1.13	Removing and installing coolant pipe (rear)	185
1.14	Removing and installing coolant pipe (left-side)	187
1.15	Removing and installing coolant pipe (bottom left)	187
1.16	Removing and installing coolant pipe (right-side)	188
1.17	Removing and installing radiator	189
1.18	Removing and installing auxiliary radiator (left-side)	193
1.19	Removing and installing auxiliary radiator (right-side)	194
1.20	Removing and installing radiator cowl	196
1.21	Removing and installing radiator fans	196
1.22	Checking cooling system for leaks	196
26	- Exhaust system	199
1	Exhaust system	199
1.1	Exhaust system - exploded view	199
1.2	Separating centre and rear silencers	203
1.3	Removing and installing exhaust pipes (left-side)	204
1.4	Removing and installing exhaust pipes (right-side)	207
1.5	Removing and installing Y-pipe (left-side)	210
1.6	Removing and installing Y-pipe (right-side)	211
1.7	Removing and installing front silencer (left-side)	213
1.8	Removing and installing front silencer (right-side)	214
1.9	Stress-free alignment of exhaust system	214
2	Secondary air system	217
2.1	Principle and function	217
2.2	Secondary air system - exploded view	217
2.3	Removing and installing secondary air pump	218
2.4	Checking combination valves for secondary air system for correct operation and leakage	219
2.5	Removing and installing combination valves for secondary air system	220