

## Contents

<b>23</b>	<b>Mixture preparation - injection</b> .....	<b>1</b>
1	<b>Servicing diesel direct injection system</b> .....	<b>1</b>
1.1	Safety precautions .....	1
1.2	Rules for cleanliness .....	1
1.3	Overview of fitting locations .....	2
1.4	Air cleaner - exploded view .....	11
1.5	Removing and installing air filter element .....	13
1.6	Removing and installing air mass meter G70 .....	15
1.7	Intake manifold - exploded view .....	16
1.8	Removing and installing intake manifold .....	17
1.9	Removing and installing engine speed sender G28 .....	19
1.10	Removing and installing sender wheel for engine speed sender G28 .....	20
1.11	Servicing unit injectors .....	20
1.12	Removing and installing unit injectors .....	22
1.13	Renewing O-rings for unit injectors .....	27
1.14	Electrical wiring harness for unit injectors and glow plugs - exploded view of components .....	28
1.15	Removing and installing electrical wiring harness for unit injectors and glow plugs .....	29
1.16	Wiring and component check with test box V.A.G 1598/42 .....	31
1.17	Removing and installing engine control unit .....	33
1.18	Removing and installing Lambda probe G39 with Lambda probe heater Z19 .....	37
1.19	Removing and installing exhaust gas pressure sensor 1 G450 .....	40
<b>28</b>	<b>Glow plug system</b> .....	<b>41</b>
1	<b>Glow plug system</b> .....	<b>41</b>
1.1	Different types of glow plugs .....	41
1.2	Removing and installing ceramic glow plugs .....	41
1.3	Removing and installing metal glow plugs .....	44