

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel system	3
3.2 Working on the cooling system	4
3.3 Using testers and measuring instruments during a road test	4
3.4 Working on the exhaust system	4
4 General repair instructions	5
4.1 Different types of glow plugs	5
4.2 Handling ceramic glow plugs	5
4.3 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
4.4 Checking vacuum system	6
4.5 Routing and attachment of pipes, hoses and wiring	7
4.6 Checking fuel system for leaks	7
4.7 Contact corrosion!	7
4.8 Installing radiators, condensers and charge air coolers	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Securing engine to assembly stand	23
1.3 Installing engine	24
2 Assembly mountings	28
2.1 Assembly mountings - exploded view	28
2.2 Removing and installing torque reaction support and torque reaction stop	29
13 - Crankshaft group	31
1 Dismantling and assembling engine	31
1.1 Moving lock carrier to service position	31
2 Servicing work on pulley end	34
2.1 Poly V-belt drive for power steering pump, alternator and air conditioner compressor - exploded view	34
2.2 Removing and installing poly V-belt	35
2.3 Removing and installing tensioner for poly V-belt	37
2.4 Removing and installing vibration damper	39
2.5 Removing and installing bracket for ancillaries	42
2.6 Toothed belt drive - exploded view	45
2.7 Removing and installing toothed belt	48
2.8 Rotating crankshaft to TDC	55
3 Removing and installing sealing flanges and flywheel	57
3.1 Sealing flanges and flywheel - exploded view	57
3.2 Renewing crankshaft oil seal (pulley end)	58
3.3 Removing and installing sealing flange (front)	61
3.4 Removing and installing dual-mass flywheel - vehicles with manual gearbox	65
3.5 Removing and installing flywheel - vehicles with multitronic gearbox	67
3.6 Renewing rear sealing flange	69
4 Removing and installing crankshaft	77
4.1 Crankshaft - exploded view	77
4.2 Extracting and driving in needle bearing for crankshaft	78
4.3 Crankshaft dimensions	79



4.4	Converting balance shaft assembly to spur gear drive	79
4.5	Pulling spur gear off crankshaft and shrink-fitting new spur gear	81
5	Dismantling and assembling pistons and conrods	85
5.1	Pistons and conrods - exploded view	85
5.2	Checking piston projection at TDC	88
5.3	Piston and cylinder dimensions	89
5.4	Measuring radial clearance of conrods	89
15	Cylinder head, valve gear	90
1	Handling glow plugs	90
1.1	Different types of glow plugs	90
1.2	Handling ceramic glow plugs	91
2	Removing and installing cylinder head	92
2.1	Removing and installing cylinder head cover	95
2.2	Removing and installing cylinder head	96
2.3	Checking compression	109
3	Servicing valve gear	110
3.1	Checking axial clearance of camshafts	112
3.2	Renewing camshaft oil seals	112
3.3	Removing and installing camshafts	116
3.4	Removing and installing roller rocker fingers	124
3.5	Renewing valve stem oil seals	125
3.6	Checking hydraulic tappets	129
3.7	Valve dimensions	130
3.8	Machining valve seats	130
3.9	Checking valve guides	130
3.10	Checking valves	131
17	Lubrication	132
1	Servicing sump, oil pump and balance shaft assembly with chain drive	132
1.1	Sump, oil pump, balance shaft assembly with chain drive - exploded view	132
1.2	Removing and installing sump	135
1.3	Removing and installing balance shaft assembly	142
1.4	Removing and installing oil pump	147
1.5	Removing and installing chain tensioner for balance shaft assembly	148
2	Servicing sump, oil pump and balance shaft assembly with spur gear drive	151
2.1	Sump, oil pump, balance shaft assembly with spur gear drive - exploded view	151
2.2	Removing and installing sump	155
2.3	Removing and installing oil pump	164
2.4	Removing balance shaft assembly	164
2.5	Installing a new balance shaft assembly	166
2.6	Re-installing the "old" balance shaft assembly	170
3	Servicing oil filter bracket with oil cooler	172
3.1	Oil filter bracket with oil cooler - exploded view	172
3.2	Removing and installing oil filter bracket with oil cooler	173
3.3	Checking oil pressure and oil pressure switch	176
3.4	Engine oil	178
3.5	Checking oil level	178
19	Cooling	180
1	Removing and installing parts of cooling system	180
1.1	Parts of cooling system	180
1.2	Draining and filling cooling system	183
1.3	Removing and installing coolant pump	189
1.4	Removing, installing and checking thermostat	190

1.5	Removing and installing coolant pipe (top)	192
1.6	Removing and installing coolant pipe (bottom)	193
1.7	Removing and installing radiator	194
1.8	Removing and installing radiator cowl	197
1.9	Removing and installing radiator fan	198
1.10	Checking cooling system for leaks	198
21	- Turbocharging/supercharging	201
1	Servicing charge air system with turbocharger	201
1.1	Rules for cleanliness	201
1.2	Turbocharger - exploded view	201
1.3	Removing and installing turbocharger	203
1.4	Charge air cooling - exploded view	209
1.5	Removing and installing charge air cooler	210
1.6	Removing and installing charge pressure sender G31 / intake air temperature sender G42	211
1.7	Checking charge air system for leaks	212
26	- Exhaust system	214
1	Removing and installing parts of exhaust system (vehicles without particulate filter)	214
1.1	Exhaust system - exploded view	214
1.2	Separating Y-pipe and rear silencers	216
1.3	Removing and installing front exhaust pipe	217
1.4	Removing and installing front exhaust pipe with catalytic converter	219
1.5	Stress-free alignment of exhaust system	221
1.6	Aligning tailpipes	222
1.7	Checking exhaust system for leaks	223
2	Removing and installing parts of exhaust system (vehicles with particulate filter)	224
2.1	Exhaust system - exploded view	224
2.2	Separating Y-pipe and rear silencers	226
2.3	Front exhaust pipe with mountings on vehicles with manual gearbox - exploded view	227
2.4	Front exhaust pipe with mountings on vehicles with multitronic gearbox - exploded view	229
2.5	Removing and installing front exhaust pipe	230
2.6	Removing and installing particulate filter	232
2.7	Stress-free alignment of exhaust system	235
2.8	Aligning tailpipes	236
2.9	Checking exhaust system for leaks	237
3	Removing and installing exhaust manifold	238
3.1	Exhaust manifold - exploded view	238
3.2	Removing and installing exhaust manifold	239
4	Removing and installing exhaust gas temperature sender	240
4.1	Removing and installing exhaust gas temperature sender 1 G235	240
4.2	Removing and installing temperature sender before particulate filter G506	242
4.3	Removing and installing temperature sender after particulate filter G527	245
5	Exhaust gas recirculation system	248
5.1	Exhaust gas recirculation system - exploded view	248
5.2	Removing and installing exhaust gas recirculation cooler	249
5.3	Removing and installing vacuum unit for exhaust gas recirculation cooler	250