

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine number</b>	<b>1</b>
<b>2 Engine data</b>	<b>2</b>
<b>3 Safety precautions</b>	<b>4</b>
3.1 Working on the fuel system	4
3.2 Working on the cooling system	5
3.3 Using testers and measuring instruments during a road test	5
3.4 Safety precautions when working on the exhaust system	5
3.5 Working on the subframe	6
<b>4 General repair instructions</b>	<b>7</b>
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	7
4.2 Checking for leaks in the fuel system	7
4.3 Foreign particles in engine	7
4.4 Contact corrosion!	8
4.5 Routing and attachment of pipes, hoses and wiring	8
4.6 Installing radiators, condensers and charge air coolers	8
4.7 Checking vacuum system	8
<b>10 - Removing and installing engine</b>	<b>10</b>
<b>1 Removing and installing engine - vehicles with manual gearbox</b>	<b>10</b>
1.1 Removing engine	10
1.2 Separating engine from manual gearbox	28
1.3 Installing engine	32
<b>2 Removing and installing engine - vehicles with multitronic gearbox</b>	<b>39</b>
2.1 Removing engine	39
2.2 Separating engine from multitronic gearbox	56
2.3 Installing engine	60
<b>3 Removing and installing engine - vehicles with automatic gearbox</b>	<b>66</b>
3.1 Removing engine	66
3.2 Separating engine and automatic gearbox	84
3.3 Installing engine	91
<b>4 Securing engine to engine and gearbox support</b>	<b>99</b>
<b>5 Assembly mountings</b>	<b>101</b>
5.1 Assembly mountings - exploded view	101
5.2 Removing and installing engine mounting (left-side)	102
5.3 Removing and installing engine mounting (right-side)	106
5.4 Removing and installing torque reaction support	110
<b>13 - Crankshaft group</b>	<b>112</b>
<b>1 Cylinder block (pulley end)</b>	<b>112</b>
1.1 Poly V-belt drive - exploded view	112
1.2 Removing and installing poly V-belt	115
1.3 Removing and installing tensioner for poly V-belt	117
1.4 Removing and installing idler roller for poly V-belt	118
1.5 Removing and installing vibration damper with poly V-belt pulley	120
1.6 Removing and installing bracket for ancillaries	120
1.7 Oil seal and sealing flange (pulley end) - exploded view	122
1.8 Renewing crankshaft oil seal (pulley end)	123
1.9 Removing and installing sealing flange (pulley end)	124
<b>2 Cylinder block (gearbox end)</b>	<b>129</b>
2.1 Dual-mass flywheel on vehicles with manual gearbox - exploded view	129



2.2	Removing and installing dual-mass flywheel	130
2.3	Extracting and driving in needle bearing for dual-mass flywheel	132
2.4	Flywheel and damper unit on vehicles with multitronic gearbox - exploded view	133
2.5	Removing and installing damper unit	133
2.6	Removing and installing flywheel	134
2.7	Drive plate on vehicles with automatic gearbox - exploded view	135
2.8	Removing and installing drive plate	136
2.9	Renewing crankshaft oil seal (gearbox end)	137
<b>3</b>	<b>Crankshaft</b>	<b>140</b>
3.1	Crankshaft - exploded view	140
3.2	Crankshaft dimensions	142
3.3	Measuring axial clearance of crankshaft	142
3.4	Measuring radial clearance of crankshaft	143
<b>4</b>	<b>Pistons and conrods</b>	<b>144</b>
4.1	Pistons and conrods - exploded view	144
4.2	Checking piston projection at TDC	147
4.3	Piston and cylinder dimensions	149
4.4	Measuring radial clearance of conrods	149
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>150</b>
<b>1</b>	<b>Timing chain covers</b>	<b>150</b>
1.1	Timing chain covers - exploded view	150
1.2	Removing and installing timing chain cover (left-side)	152
1.3	Removing and installing timing chain cover (right-side)	153
1.4	Removing and installing timing chain cover (bottom)	155
<b>2</b>	<b>Chain drive</b>	<b>158</b>
2.1	Camshaft timing chains - exploded view	158
2.2	Removing timing chains from camshafts	160
2.3	Removing and installing camshaft timing chains	168
2.4	Drive chain for valve gear - exploded view	176
2.5	Removing and installing drive chain for valve gear	178
2.6	Drive chain for auxiliary drives - exploded view	179
2.7	Removing and installing drive chain for auxiliary drives	180
2.8	Balance shaft - exploded view	183
2.9	Removing and installing balance shaft	183
<b>3</b>	<b>Cylinder head</b>	<b>186</b>
3.1	Cylinder head cover - exploded view	186
3.2	Removing and installing cylinder head cover (left-side)	187
3.3	Removing and installing cylinder head cover (right-side)	190
3.4	Cylinder head - exploded view	193
3.5	Removing and installing cylinder head	195
3.6	Checking compression	206
<b>4</b>	<b>Valve gear</b>	<b>209</b>
4.1	Valve gear - exploded view	209
4.2	Measuring axial clearance of camshafts	211
4.3	Measuring radial clearance of camshafts	212
4.4	Renewing camshaft oil seal	213
4.5	Removing and installing camshafts - cylinder head (left-side)	215
4.6	Removing and installing camshafts - cylinder head (right-side)	222
4.7	Checking hydraulic valve compensation elements	229
4.8	Renewing valve stem oil seals with cylinder head installed	231
4.9	Renewing valve stem oil seals with cylinder head removed	234
4.10	Valve dimensions	237
4.11	Machining valve seats	238
4.12	Checking valve guides	238

4.13	Checking valves	239
<b>17</b>	<b>- Lubrication</b>	<b>240</b>
<b>1</b>	<b>Oil pump, sump (bottom section), sump (top section)</b>	<b>240</b>
1.1	Oil pump, sump (bottom section) - exploded view	240
1.2	Removing and installing oil level and oil temperature sender G266	242
1.3	Removing and installing sump (bottom section)	243
1.4	Removing and installing oil pump	244
1.5	Sump (top section) - exploded view	245
1.6	Removing and installing valve for oil pressure control N428	247
1.7	Removing and installing sump (top section)	248
<b>2</b>	<b>Engine oil cooler, oil filter housing, oil pressure switch</b>	<b>251</b>
2.1	Engine oil cooler, pressure control valve and oil filter housing - exploded view	251
2.2	Removing and installing engine oil cooler	253
2.3	Removing and installing oil filter housing	254
2.4	Removing and installing pressure control valve for crankcase breather system	255
2.5	Removing and installing mounting plate for engine oil cooler, pressure control valve for crankcase breather system and oil filter housing	256
2.6	Checking oil pressure switch F22 / oil pressure switch for reduced oil pressure F378	256
2.7	Removing and installing oil pressure switch F22	257
2.8	Removing and installing oil pressure switch for reduced oil pressure F378	257
2.9	Checking oil pressure	258
2.10	Engine oil	259
2.11	Checking oil level	260
<b>19</b>	<b>- Cooling</b>	<b>261</b>
<b>1</b>	<b>Cooling system</b>	<b>261</b>
1.1	Connection diagram - coolant hoses	261
1.2	Draining and filling cooling system	265
1.3	Checking cooling system for leaks	271
<b>2</b>	<b>Coolant pumps and thermostat</b>	<b>274</b>
2.1	Coolant pump and thermostat - exploded view	274
2.2	Removing and installing coolant pump	275
2.3	Removing and installing thermostat with hose connection	276
2.4	Pump for exhaust gas recirculation cooler V400 - exploded view	278
2.5	Removing and installing pump for exhaust gas recirculation cooler V400	279
<b>3</b>	<b>Coolant pipes</b>	<b>281</b>
3.1	Coolant pipes - exploded view	281
3.2	Removing and installing coolant temperature sender G62	284
3.3	Removing and installing radiator outlet coolant temperature sender G83	285
3.4	Removing and installing coolant pipe (left-side)	285
3.5	Removing and installing coolant pipe (top left)	287
3.6	Removing and installing coolant pipe (right-side)	288
3.7	Removing and installing coolant pipe (top right)	291
3.8	Removing and installing coolant pipe (rear right)	291
3.9	Removing and installing coolant pipe (top)	293
<b>4</b>	<b>Radiator and radiator fans</b>	<b>294</b>
4.1	Radiator and radiator fans - exploded view	294
4.2	Removing and installing radiator	295
4.3	Removing and installing radiator cowl	300
4.4	Removing and installing radiator fans V7 / V177	301
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>303</b>
<b>1</b>	<b>Turbocharger</b>	<b>303</b>
1.1	Turbocharger - exploded view	303



1.2	Removing and installing turbocharger	305
1.3	Removing and installing intermediate flange	312
1.4	Removing and installing turbocharger 1 control unit J724	312
<b>2</b>	<b>Charge air cooling</b>	<b>324</b>
2.1	Charge air cooler - exploded view	324
2.2	Removing and installing charge air cooler	326
2.3	Removing and installing charge pressure sender G31 - vehicles without auxiliary heater	328
2.4	Removing and installing charge pressure sender G31 - vehicles with auxiliary heater	329
<b>26</b>	<b>- Exhaust system</b>	<b>330</b>
<b>1</b>	<b>Silencers - vehicles with front-wheel drive</b>	<b>330</b>
1.1	Silencers - exploded view	330
1.2	Removing and installing starter catalytic converter - vehicles with manual gearbox	334
1.3	Removing and installing starter catalytic converter - vehicles with multitronic gearbox	336
1.4	Removing and installing front exhaust pipe	338
1.5	Removing and installing particulate filter	339
1.6	Separating Y-pipe and rear silencers	340
<b>2</b>	<b>Silencers - vehicles with four-wheel drive</b>	<b>342</b>
2.1	Silencers - exploded view	342
2.2	Removing and installing starter catalytic converter - vehicles with manual gearbox	346
2.3	Removing and installing starter catalytic converter - vehicles with automatic gearbox	348
2.4	Removing and installing front exhaust pipe - vehicles with manual gearbox	352
2.5	Removing and installing front exhaust pipe - vehicles with automatic gearbox	353
2.6	Removing and installing particulate filter	356
2.7	Separating Y-pipe and rear silencers	357
<b>3</b>	<b>Exhaust system</b>	<b>359</b>
3.1	Renewing tailpipe	359
3.2	Stress-free alignment of exhaust system	359
3.3	Aligning tailpipes	360
3.4	Checking exhaust system for leaks	361
<b>4</b>	<b>Exhaust manifolds and intermediate pipes</b>	<b>362</b>
4.1	Exhaust manifolds and intermediate pipes - exploded view	362
4.2	Removing and installing exhaust manifold (left-side)	364
4.3	Removing and installing exhaust manifold (right-side)	364
4.4	Removing and installing intermediate pipe (left-side)	364
4.5	Removing and installing intermediate pipe (right-side)	366
<b>5</b>	<b>Exhaust gas temperature control</b>	<b>367</b>
5.1	Exhaust gas temperature senders - exploded view	367
5.2	Removing and installing exhaust gas temperature sender 1 G235	369
5.3	Removing and installing exhaust gas temperature sender 3 G495	370
5.4	Removing and installing exhaust gas temperature sender 4 G648 - vehicles with manual gearbox and automatic gearbox	372
5.5	Removing and installing exhaust gas temperature sender 4 G648 - vehicles with multitronic gearbox	373
<b>6</b>	<b>Exhaust gas recirculation</b>	<b>374</b>
6.1	Exhaust gas recirculation system - exploded view	374
6.2	Removing and installing exhaust gas recirculation control motor V338	375
6.3	Removing and installing exhaust gas recirculation cooler	376
6.4	Removing and installing exhaust gas recirculation temperature sensor G98	379