

## Contents

<b>20 - Fuel supply system</b>	<b>1</b>
<b>1 General repair instructions</b>	<b>1</b>
1.1 Safety precautions	1
1.2 Rules for cleanliness	2
1.3 Test conditions	3
1.4 Contact corrosion	3
<b>2 Fuel tank with attached components - rest-of-world vehicles with front-wheel drive</b>	<b>4</b>
2.1 Exploded view - fuel tank with attached components	4
2.2 Draining fuel tank	5
2.3 Removing and installing fuel tank with attached components	7
<b>3 Fuel delivery unit and fuel gauge sender - rest-of-world vehicles with front-wheel drive</b>	<b>15</b>
3.1 Exploded view - fuel delivery unit and fuel gauge sender	15
3.2 Checking fuel pump (electrical test)	16
3.3 Checking fuel pump control unit J538 - vehicles with FSI engine	19
3.4 Checking fuel pump delivery rate - vehicles with 4-cylinder TFSI engine	24
3.5 Checking fuel pump delivery rate - vehicles with 6-cylinder engine	28
3.6 Removing and installing fuel delivery unit	34
3.7 Checking fuel gauge sender G	41
3.8 Removing and installing fuel gauge sender G	45
<b>4 Fuel tank with attached components - rest-of-world vehicles with four-wheel drive</b>	<b>46</b>
4.1 Exploded view - fuel tank with attached components	46
4.2 Draining fuel tank	47
4.3 Removing and installing fuel tank with attached components	50
<b>5 Fuel tank with attached components - special vehicles</b>	<b>58</b>
5.1 Exploded view - fuel tank with attached components	58
5.2 Draining fuel tank	60
5.3 Removing and installing fuel tank with attached components	60
<b>6 Fuel tank with attached components - Audi RS 6</b>	<b>68</b>
6.1 Exploded view - fuel tank with attached components	68
6.2 Draining fuel tank	69
6.3 Removing and installing fuel tank with attached components	69
<b>7 Fuel delivery unit and fuel gauge senders - rest-of-world vehicles with four-wheel drive</b>	<b>78</b>
7.1 Exploded view - fuel delivery unit and fuel gauge sender	78
7.2 Checking fuel pump (electrical test)	80
7.3 Checking fuel pump control unit J538 - vehicles with FSI engine	81
7.4 Removing and installing fuel pump control unit J538 - vehicles with FSI engine from 06.2004 onwards	84
7.5 Checking fuel pump delivery rate - vehicles with 6-cylinder MPI / FSI engine and 8-cylinder MPI engine	89
7.6 Checking fuel pump delivery rate - vehicles with 6-cylinder TFSI engine	92
7.7 Checking fuel pump delivery rate - vehicles with 8-cylinder FSI engine	95
7.8 Checking fuel pump delivery rate - vehicles with 10-cylinder FSI engine (Audi S6)	97
7.9 Checking fuel pump delivery rate - vehicles with 10-cylinder TFSI engine (Audi RS 6)	100
7.10 Removing and installing fuel delivery unit	103
7.11 Checking fuel gauge sender G	110
7.12 Removing and installing fuel gauge sender G	112
7.13 Checking fuel gauge sender 2 G169	113
7.14 Removing and installing fuel gauge sender 2 G169	114
7.15 Suction-jet pump	120
7.16 Removing and installing suction-jet pump	120
<b>8 Fuel tank with attached components - USA vehicles with front-wheel drive/four-wheel drive</b>	<b>130</b>



8.1	Exploded view - fuel tank with attached components	130
8.2	Draining fuel tank	131
8.3	Removing and installing fuel tank with attached components	134
<b>9</b>	<b>Fuel delivery unit and fuel gauge senders - USA vehicles with front-wheel drive/four-wheel drive</b>	<b>142</b>
9.1	Exploded view - fuel delivery unit and fuel gauge sender	142
9.2	Checking fuel pump (electrical test)	144
9.3	Checking fuel pump control unit J538 - vehicles with FSI engine	145
9.4	Removing and installing fuel pump control unit J538 - vehicles with FSI engine	148
9.5	Checking fuel pump delivery rate - vehicles with 6-cylinder MPI / FSI engine and 8-cylinder MPI engine	153
9.6	Checking fuel pump delivery rate - vehicles with 8-cylinder FSI engine	155
9.7	Checking fuel pump delivery rate - vehicles with 10-cylinder engine (Audi S6)	158
9.8	Removing and installing fuel delivery unit	161
9.9	Checking fuel gauge sender G	167
9.10	Removing and installing fuel gauge sender G	169
9.11	Checking fuel gauge sender 2 G169	170
9.12	Removing and installing fuel gauge sender 2 G169	171
9.13	Suction-jet pump	177
9.14	Removing and installing suction-jet pump	177
<b>10</b>	<b>Fuel filter</b>	<b>187</b>
10.1	Exploded view - fuel filter (rest-of-world vehicles with front-wheel drive)	187
10.2	Exploded view - fuel filter (rest-of-world vehicles with four-wheel drive and USA vehicles with front-wheel drive/four-wheel drive)	188
10.3	Removing and installing fuel filter	188
<b>11</b>	<b>Activated charcoal filter system - rest-of-world vehicles</b>	<b>190</b>
11.1	Exploded view - activated charcoal filter system	190
11.2	Removing and installing activated charcoal filter	190
11.3	Exploded view - activated charcoal filter system, Audi RS 6	191
11.4	Removing and installing activated charcoal filter - Audi RS 6	193
11.5	Removing and installing air cleaner for activated charcoal filter - Audi RS 6	194
<b>12</b>	<b>Activated charcoal filter system/tank leak diagnostic system - USA vehicles</b>	<b>195</b>
12.1	Exploded view - activated charcoal filter system/tank leak diagnostic system	195
12.2	Removing and installing activated charcoal filter	196
12.3	Routing of pipes/hoses for activated charcoal filter system/tank leak diagnostic system	197
12.4	Tank leak diagnostic system	198
12.5	Automatic tank leak diagnosis	198
12.6	Performing tank leak diagnosis	199
12.7	Checking fuel system diagnostic pump V144 - vehicles with 8-cylinder MPI engine	205
12.8	Checking fuel system diagnostic pump V144 - vehicles with FSI engine	210
12.9	Removing and installing fuel system diagnostic pump V144	216
<b>13</b>	<b>Accelerator mechanism</b>	<b>217</b>
13.1	Exploded view - accelerator pedal module (version 1)	217
13.2	Removing and installing accelerator pedal module (version 1)	218
13.3	Exploded view - accelerator pedal module (version 2)	218
13.4	Removing and installing accelerator pedal module (version 2)	219