

001 - Basic equipment	1-38
1. Basic equipment	1
2. Earth connections	2
3. Earth connections	3
4. Earth connections	4
5. Battery, energy management control unit, battery cut-off relay, suppression filter	5
6. Terminal 15 voltage supply relay, terminal 75x voltage supply relay	6
7. Entry and start authorisation switch, entry and start authorisation control unit, fuses	7
8. Entry and start authorisation switch, entry and start authorisation control unit, entry and start authorisation button	8
9. Entry and start authorisation switch, entry and start authorisation control unit	9
10. Steering column electronics control unit, horn plate, intermittent wiper switch, turn signal switch, headlight flasher switch	10
11. Steering column electronics control unit, cruise control system switch, steering angle sender	11
12. Onboard power supply control unit, fuses	12
13. Onboard supply control unit, light switch, hazard warning lights button	13
14. Onboard supply control unit, left side light bulb, front left turn signal bulb, left dipped beam bulb, left main beam bulb, left headlight range control motor, side marker light bulb	14
15. Onboard supply control unit, right side light bulb, front right turn signal bulb, right dipped beam bulb, right main beam bulb, right headlight range control motor	15
16. Onboard supply control unit, fog light bulb, headlight range control regulator	16
17. Onboard supply control unit, treble tone horn, bass tone horn, dual tone horn relay, reversing light switch	17
18. Convenience system central control unit, fuses	18
19. Convenience system central control unit, left and right tail light, lowline, not USA	19
20. Convenience system central control unit, left and right tail light, highline, not USA	20
21. Convenience system central control unit, left and right tail light, highline, only USA	21
22. Convenience system central control unit, number plate light, heated rear window relay, high level brake light bulb, heated rear window, tank filler flap locking motor	22
23. Convenience system central control unit, brake light switch	23
24. Convenience system central control unit, luggage compartment light, rear left and right footwell light, glove compartment light switch, glove compartment light, rear roller blind motor	24
25. Wiper motor control unit, rain and light detector sensor, washer jet heater element, headlight washer system pump, washer pump	25
26. Onboard supply control unit 2, servotronic solenoid valve	26
27. Onboard supply control unit 2, glove compartment release motor, glove compartment button, display unit button	27
28. Diagnostic connection	28
29. Control unit in dash panel insert, data bus diagnostic interface	29
30. Control unit in dash panel insert, data bus diagnostic interface	30
31. Control unit in dash panel insert, front brake pad wear sender, oil pressure switch, brake fluid level warning contact, oil level and oil temperature sender	31
32. Control unit in dash panel insert, ambient temperature sensor, coolant shortage indicator switch, windscreen washer fluid level sender	32
33. Control unit in dash panel insert, radio controlled clock, radio controlled clock receiver, handbrake warning lamp	33
34. Control unit in dash panel insert, fuel gauge, fuel gauge sender 2, ashtray illumination bulb, cup holder illumination bulb	34
35. Driver and front passenger side illuminated vanity mirror, driver and front passenger vanity mirror contact switch	35
36. Interior light rear switch, rear left and right interior light, automatic anti-dazzle interior mirror	36
37. Automatic anti-dazzle interior mirror, driver and front passenger side reading light, sliding sunroof adjustment regulator	37
38. Rear roller blind switch, cigarette lighter, rear cigarette lighter	38
002 - Audi A6 4.2 I - Fuel injection engine (246 kW - Motronic - 8 cylinder), engine code BAT, BNK	39-54
1. Audi A6 4.2 I - Fuel injection engine (246 kW - Motronic - 8 cylinder), engine code BAT, BNK	39
2. Battery, energy management control unit, battery cut-off relay, fuse	40
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	41
4. Engine control unit, Motronic current supply relay	42
5. Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	43
6. Engine control unit, injector, cylinder 5 - 8, ignition coil 5 - 8 with output stage	44
7. Engine control unit, engine speed sender, Hall sender, Hall sender 2, coolant temperature sender	45
8. Engine control unit, knock sensors 1 - 4	46
9. Engine control unit, accelerator position sender, throttle valve module	47
10. Engine control unit, lambda probe, lambda probe 2	48

11. Engine control unit, air mass meter, active charcoal filter system solenoid valve 1, variable intake manifold change-over valve, lambda probe after catalytic converter	49
12. Engine control unit, secondary air pump relay, electrohydraulic engine mounting solenoid valves, variable intake manifold change-over valve, secondary air pump motor, fuel system diagnostic pump	50
13. Engine control unit, continued coolant circulation relay, inlet camshaft control valve, radiator fan, continued coolant circulation pump	51
14. Engine control unit, brake light switch, fuel pump relay	52
15. Control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge sender 2	53
16. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	54
003 - Audi A6 2.4 I Fuel injection engine (130 kW - 6 cylinder), engine code BDW	55-70
1. Audi A6 2.4 I Fuel injection engine (130 kW - 6 cylinder), engine code BDW	55
2. Battery, energy management control unit, battery cut-off relay, fuse	56
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	57
4. Simos control unit, Motronic current supply relay	58
5. Simos control unit, CAN separating connector, earth connections	59
6. Simos control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	60
7. Simos control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, accelerator position sender, throttle valve module	61
8. Simos control unit, engine speed sender, Hall sender, coolant temperature sender, intake manifold pressure sender, intake air temperature sender	62
9. Simos control unit, knock sensors, active charcoal filter system solenoid valve 1, variable intake manifold change-over valve, secondary air pump relay, secondary air pump motor	63
10. Simos control unit, continued coolant circulation relay, inlet camshaft control valve, continued coolant circulation pump, intake manifold flap potentiometer	64
11. Simos control unit, lambda probe, lambda probe 2	65
12. Simos control unit, lambda probe after catalytic converter	66
13. Simos control unit, clutch pedal switch for engine start, clutch position sender	67
14. Simos control unit, brake light switch, brake pedal switch, radiator fan	68
15. Control unit in dash panel insert, fuel pump relay, fuel system pressurisation pump, fuel gauge sender, fuel gauge	69
16. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, oil level and oil temperature sender	70
004 - Audi A6 3.0 I - Fuel injection engine (160 kW - Motronic - 6 cylinder), engine code BBJ	71-87
1. Audi A6 3.0 I - Fuel injection engine (160 kW - Motronic - 6 cylinder), engine code BBJ	71
2. Battery, energy management control unit, battery cut-off relay, fuse	72
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	73
4. Engine control unit, Motronic current supply relay	74
5. Engine control unit, CAN separating connector, earth connections	75
6. Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	76
7. Engine control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, accelerator position sender, throttle valve module	77
8. Engine control unit, engine speed sender, coolant temperature sender, knock sensors	78
9. Engine control unit, Hall sender, brake servo pressure sensor	79
10. Engine control unit, inlet camshaft control valve, continued coolant circulation relay, continued coolant circulation pump, air mass meter, intake air temperature sender	80
11. Engine control unit, active charcoal filter system solenoid valve 1, secondary air inlet valve, variable intake manifold change-over valve, intake manifold flap valve, secondary air pump relay, secondary air pump motor, vacuum pump for brakes	81
12. Engine control unit, lambda probe, lambda probe 2	82
13. Engine control unit, lambda probes after catalytic converter	83
14. Engine control unit, brake light switch, brake light switch, brake pedal switch	84
15. Engine control unit, radiator fan	85
16. Engine control unit, control unit in dash panel insert, fuel pump relay, fuel system pressurisation pump, fuel gauge sender, fuel gauge	86
17. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, oil level and oil temperature sender	87
005 - Audi A6 3.2 I Fuel injection engine (188 kW - 6 cylinder), engine codes AUK, BKH	88-107
1. Audi A6 3.2 I Fuel injection engine (188 kW - 6 cylinder), engine codes AUK, BKH	88
2. Battery, energy management control unit, battery cut-off relay, fuse	89
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	90
4. Simos control unit, Motronic current supply relay	91
5. Simos control unit, CAN disconnecter, earth connections	92
6. Simos control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	93

7. Simos control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, accelerator position sender, throttle valve module	94
8. Simos control unit, engine speed sender, coolant temperature sender, knock sensors	95
9. Simos control unit, Hall sender	96
10. Simos control unit, intake manifold pressure sender, intake air temperature sender, intake manifold flap potentiometer, fuel pressure sender, low pressure	97
11. Simos control unit, fuel pressure sender, inlet camshaft control valve, exhaust camshaft control valve	98
12. Simos control unit, additional coolant pump relay, continued coolant circulation pump, active charcoal filter system solenoid valve 1, variable intake manifold change-over valve, fuel metering valve	99
13. Simos control unit, variable intake manifold change-over valve, left electrohydraulic engine mounting solenoid valve, right electrohydraulic engine mounting solenoid valve, intake manifold flap valve, fuel system diagnostic pump	100
14. Simos control unit, lambda probe, lambda probe 2	101
15. Simos control unit, variable intake manifold position sender, lambda probe after catalytic converter	102
16. Simos control unit, clutch pedal switch for engine start, brake light switch, clutch pedal switch	103
17. Simos control unit, clutch position sender	104
18. Simos control unit, engine component current supply relay, radiator fan	105
19. Fuel pump control unit, control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge, fuel gauge sender	106
20. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil level and oil temperature sender, oil pressure switch, coolant shortage indicator switch	107
006 - Audi A6 2.7 I - TDI, Common Rail, (132 kW, 120 kW - 6-cylinder) engine codes BPP, BSG	108-123
1. Audi A6 2.7 I - TDI, Common Rail, (132 kW, 120 kW - 6-cylinder) engine codes BPP, BSG	108
2. Battery, energy management control unit, battery cut-off relay, fuse	109
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	110
4. Automatic glow period control unit, glow plugs fuse, glow plugs	111
5. Diesel direct injection system control unit, terminal 30 voltage supply relay	112
6. Diesel direct injection system control unit, fuses, clutch pedal switch for engine start	113
7. Diesel direct injection system control unit, injector, cylinder 1 up to 6, coolant temperature sender, fuel temperature sender, fuel pressure sender	114
8. Diesel direct injection system control unit, accelerator position sender, throttle valve module, exhaust gas recirculation valve, exhaust gas recirculation cooler change-over valve, air filter bypass flap valve	115
9. Diesel direct injection system control unit, intake manifold flap motor, intake manifold flap 2 motor, turbocharger 1 control unit, left electrohydraulic engine mounting solenoid valve	116
10. Diesel direct injection system control unit, fuel pressure regulating valve, fuel metering valve	117
11. Diesel direct injection system control unit, brake light switch, brake pedal switch, clutch position sender	118
12. Diesel direct injection system control unit, engine speed sender, charge air pressure sender, Hall sender, intake air temperature sender	119
13. Diesel direct injection system control unit, exhaust gas temperature sender, lambda probe, exhaust gas pressure sensor 1, temperature sender before particulate filter	120
14. Diesel direct injection system control unit, low heat output relay, high heat output relay, radiator fan, auxiliary heating heater element, fuses	121
15. Fuel pump relay, control unit in dash panel insert, fuel pump, fuel gauge sender, fuel gauge, fuel gauge sender 2	122
16. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	123
007 - Trailer towing attachment	124-127
1. Trailer towing attachment	124
2. Trailer detector control unit, fuses	125
3. Trailer detector control unit, trailer socket	126
4. Trailer detector control unit, trailer socket, contact switch on hand wheel, contact switch on locking pin, trailer towing attachment warning lamps	127
008 - Airbag	128-135
1. Airbag	128
2. Airbag control unit, battery cut-off relay	129
3. Airbag control unit, driver side airbag igniter, front passenger side airbag igniter	130
4. Airbag control unit, side airbag igniter on driver and front passenger side, rear side airbag igniter on driver and front passenger side	131

5. Airbag control unit, driver and front passenger side seat belt tensioner igniter, driver and front passenger side curtain airbag igniter, rear belt tensioner igniter	132
6. Airbag control unit, side airbag crash sensor on driver and front passenger side, rear side airbag crash sensor on driver and front passenger side, front airbag crash sensor for driver and front passenger side	133
7. Airbag control unit, driver and front passenger side belt switch, key operated switch to deactivate front passenger side airbag, front passenger side airbag deactivated warning lamp	134
8. Airbag control unit, seat occupied recognition control unit, pressure sensor for seat occupied recognition, seat belt force sensor for seat occupied recognition	135
009 - Anti-lock brake system (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	136-141
1. Anti-lock brake system (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	136
2. ABS control unit, ABS control unit fuse 1	137
3. ABS control unit, ESP TCS and ESP button, lateral acceleration sender, yaw rate sender, ESP sensor unit, front brake pressure sender	138
4. ABS control unit, speed sensor	139
5. ABS control unit, brake light switch, output V-signal	140
6. ABS control unit, ABS return flow pump, inlet and outlet valve, ABS return flow pump relay	141
010 - Adaptive cruise control (ACC)	142-143
1. Adaptive cruise control (ACC)	142
2. Adaptive cruise control unit, sensor heater for adaptive cruise control system	143
011 - Automatic gearbox 09L	144-148
1. Automatic gearbox 09L	144
2. Automatic gearbox control unit, fuses	145
3. Automatic gearbox control unit	146
4. Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display	147
5. Automatic gearbox control unit, selector lever lock solenoid, gear selector position P switch	148
012 - Front and rear parking aid (PDC)	149-153
1. Front and rear parking aid (PDC)	149
2. Parking aid control unit, Fuse carrier 1, Fuse carrier 2	150
3. Parking aid button, Parking aid control unit, Parking aid warning lamp	151
4. Front centre right parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Parking aid control unit	152
5. Rear centre left parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	153
013 - Rear parking aid	154-156
1. Rear parking aid	154
2. Parking aid control unit	155
3. Parking aid control unit, rear parking aid sender	156
014 - Electronic steering column lock	157-160
1. Electronic steering column lock	157
2. Onboard power supply control unit, fuses	158
3. Onboard supply control unit, steering column adjustment motor, steering column adjustment sender	159
4. Steering column electronics control unit, steering column adjustment switch	160
015 - Electric park and handbrake	161-164
1. Electric park and handbrake	161
2. Electric park and handbrake control unit, fuses	162
3. Electric park and handbrake control unit, left and right parking brake motor, clutch position sender, electric park and handbrake warning lamp, electric parking brake and handbrake fault warning lamp	163
4. Electric park and handbrake control unit, parking brake contact switch	164
016 - Electric tyre pressure monitor	165-167
1. Electric tyre pressure monitor	165
2. Tyre pressure monitor control unit, fuse	166
3. Tyre pressure monitor control unit, tyre pressure sensor, tyre pressure monitor sender unit in wheel housing	167
017 - Garage door opener	168-170
1. Garage door opener	168
2. Garage door operation control unit, garage door operating unit	169
3. Garage door operating unit, garage door opener button	170
018 - Multifunction steering wheel	171-175
1. Multifunction steering wheel	171
2. Steering column electronics control unit voltage supply	172
3. Steering column electronics control unit. operating unit in steering wheel	173

4. Steering column electronics control unit, operating unit in steering wheel, steering wheel heater button	174
5. Steering column electronics control unit, operating unit in steering wheel, driver side airbag igniter, heated steering wheel	175
019 - Adaptive suspension	176-182
1. Adaptive suspension	176
2. Adaptive suspension control unit, fuses	177
3. Adaptive suspension control unit, adaptive suspension compressor relay, adaptive suspension compressor motor, compressor temperature sender for adaptive suspension system, adaptive suspension drain valve	178
4. Adaptive suspension control unit, valve block	179
5. Adaptive suspension control unit, vehicle inclination sender	180
6. Adaptive suspension control unit, body acceleration sender	181
7. Adaptive suspension control unit, shock absorber damper adjustment valve	182
020 - Auxiliary heater	183-187
1. Auxiliary heater	183
2. Auxiliary heater control unit, fuses	184
3. Auxiliary heater control unit, heater coolant shut-off valve, remote control receiver for auxiliary heating, metering pump	185
4. Fuel pump relay for auxiliary heater, fuses	186
5. Fuel pump relay	187
021 - Entry and start authorisation, entry and start authorisation with Kessy	188-194
1. Entry and start authorisation, entry and start authorisation with Kessy	188
2. Entry and start authorisation control unit, fuses	189
3. Entry and start authorisation control unit, entry and start authorisation switch, entry and start authorisation button	190
4. Entry and start authorisation control unit, entry and start authorisation switch, aerial for entry and start authorisation, aerial reader unit for keyless entry system	191
5. Entry and start authorisation control unit, aerial reader unit for keyless entry system, terminal 15 voltage supply relay, terminal 75x voltage supply relay	192
6. Entry and start authorisation control unit	193
7. Starter motor relay, starter motor relay 2	194
022 - Automatic gearbox multitronic® 01J	195-199
1. Automatic gearbox multitronic® 01J	195
2. Automatic gearbox control unit, fuses	196
3. Automatic gearbox control unit	197
4. Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display	198
5. Automatic gearbox control unit, selector lever lock solenoid, gear selector position P switch	199
023 - Air conditioning system	200-213
1. Air conditioning system	200
2. Climatronic control unit, fuses	201
3. Climatronic control unit, air quality sensor, refrigerant pressure and temperature sender, fresh air blower control unit, fresh air blower	202
4. Climatronic control unit, solar operation control unit, solar cells, air conditioning system compressor regulating valve	203
5. Climatronic control unit, centre left and right vent sensor, front left and right seat temperature sender, sunlight penetration photosensor	204
6. Climatronic control unit, air flow flap control motor, air recirculation flap control motor, fresh air intake duct temperature sensor	205
7. Climatronic control unit, coolant circulation pump, left and right heat regulation valve, rear roller blind switch	206
8. Climatronic control unit, vent temperature sender, evaporator output temperature sender, front cold air flap control motor	207
9. Climatronic control unit, central vents control motor, rear footwell vent control motor, potentiometer for centre vent control motor, potentiometer for rear footwell vent control motor	208
10. Climatronic control unit, defroster flap control motor, indirect ventilation flap control motor, potentiometer for defroster flap control motor, potentiometer for indirect ventilation flap control motor	209
11. Climatronic control unit, left footwell flap control motor, front left chest vent control motor, potentiometer for left footwell flap control motor, front left chest vent potentiometer	210
12. Climatronic control unit, front left chest vent control motor, front right chest vent control motor, right footwell flap control motor	211
13. Climatronic control unit, heated rear left and right seat switch with regulator, front left and right seat heating	212
14. Dash panel left and right vent illumination bulb. central rear vent illumination bulb	213

024 - Electrical sunroof	214-217
1. Electrical sunroof	214
2. Sliding sunroof adjustment control unit, fuses	215
3. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator, sunroof button, sliding sunroof motor	216
4. Fresh air blower control unit, solar operation control unit, solar cells, fresh air blower	217
025 - CAN disconnecter	218-225
1. CAN disconnecter	218
2. CAN disconnecter left	219
3. CAN disconnecter left	220
4. CAN disconnecter left	221
5. CAN disconnecter left	222
6. CAN disconnecter right	223
7. CAN disconnecter right	224
8. CAN disconnecter right	225
026 - Convenience system	226-256
1. Convenience system	226
2. Driver door control unit, fuses	227
3. Driver door control unit, driver door exterior handle touch sensor, driver side door exterior handle central locking button, driver door exterior handle switch	228
4. Driver door control unit, driver side central locking lock unit, driver door contact switch, driver door central locking motor	229
5. Driver door control unit, front left window regulator switch, rear left window regulator switch, rear right window regulator switch, in driver side, front right window regulator switch in driver door	230
6. Driver door control unit, driver side window regulator motor, button for left and right childproof lock	231
7. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, adjustment switch for mirror with fold-in feature, interior monitoring switch, alarm system off switch	232
8. Driver door control unit, driver side mirror adjustment motor, driver side fold-in mirror motor, driver side heated exterior mirror, driver side entry light in exterior mirror, driver side automatic anti-dazzle exterior mirror	233
9. Driver door control unit, central locking deadlock function warning lamp, driver side interior locking switch, driver door opener illumination, driver side door warning lamp, front left entry light	234
10. Driver door control unit, driver door ambient lighting, fuel tank flap release button, rear lid remote release button	235
11. Driver door control unit, driver seat memory operating unit, emergency-off button	236
12. Front passenger door control unit	237
13. Front passenger door control unit, front passenger door exterior handle switch, front passenger door exterior handle central locking button, front passenger door exterior handle touch sensor	238
14. Front passenger door control unit, front passenger door contact switch, front passenger door central locking motor, front passenger side central locking lock unit	239
15. Front passenger door control unit, window regulator switch in front passenger door, front passenger side interior locking switch	240
16. Front passenger door control unit, front passenger side window regulator motor, front passenger door ambient lighting, front right entry light, front passenger side door warning lamp, front right door exterior handle illumination bulb	241
17. Front passenger door control unit, front passenger side mirror adjustment, front passenger side fold-in mirror motor, front passenger side entry light in exterior mirror, front passenger side automatic anti-dazzle exterior mirror, front passenger side heated exterior mirror	242
18. Front passenger door control unit, front passenger seat memory operating unit, front passenger side emergency off button	243
19. Rear left door control unit, window regulator single fuse 2	244
20. Rear left door control unit, rear left door exterior handle touch sensor, rear left door exterior handle switch, rear left door exterior handle central locking button	245
21. Rear left door control unit, rear left central locking lock unit, rear left door central locking motor, rear left door central locking deadlock function motor, rear left door contact switch, rear left door central locking deadlock function motor	246
22. Rear left door control unit, rear left window regulator switch, in door, rear left ashtray illumination bulb, rear left window regulator motor	247
23. Rear left door control unit, rear left door ambient lighting bulb, rear left door opener illumination, rear left entry light, rear left door warning lamp	248
24. Rear right door control unit, rear right door exterior door handle touch sensor	249
25. Rear right door control unit, rear right door exterior handle switch, rear right door exterior	250

handle central locking button, rear right central locking lock unit, rear right childproof lock motor	
26. Rear right door control unit, rear right window regulator switch, in door, rear right ashtray illumination bulb, rear right window regulator motor	251
27. Rear right door control unit, rear right door ambient lighting bulb, rear right entry light, rear right door warning lamp, rear right door opener illumination	252
28. Convenience system central control unit, fuses	253
29. Convenience system central control unit, rear lid contact switch for anti-theft alarm, release button for rear lid lock cylinder	254
30. Convenience system central control unit, luggage compartment light, rear left and right footwell light, alarm horn, rear roller blind motor, interior monitoring sensor	255
31. Onboard supply control unit, bonnet contact switch, left and right footwell light, rear roller blind switch	256
027 - Radiator fan control 400 W or 600 W	257-262
1. Radiator fan control 400 W or 600 W	257
2. Radiator fan control 4.2 l engine BAT, BNK	258
3. Radiator fan control 2.7 l diesel engine BPP, BSG and 3,0 l dieselengine BMK, BNG	259
4. Radiator fan control 2.4 l engine BDW, 3.0 l engine BBJ, 3.2 l engine AUK, BKH	260
5. Radiator fan control 2.0 l dieselengine BLB, BNA, BRE, BRF, BVG and 2.0 l engine BPJ	261
6. Radiator fan control 5.2 l engine BGS	262
028 - Electrical rear roller blind	263-265
1. Electrical rear roller blind	263
2. Convenience system central control unit, rear roller blind motor	264
3. Rear roller blind switch	265
029 - Telephone	266-269
1. Telephone	266
2. Telephone transmitter and receiver unit	267
3. Telephone transmitter and receiver unit, aerial for Bluetooth	268
4. Telephone transmitter and receiver unit, microphone unit in front roof module, radio, telephone and navigation system aerial	269
030 - Preparation for mobile telephone	270-274
1. Preparation for mobile telephone	270
2. Telephone transmitter and receiver unit, fuses	271
3. Telephone transmitter and receiver unit, aerial for Bluetooth, microphone unit in front roof module	272
4. Telephone transmitter and receiver unit, mobile telephone	273
5. Aerial amplifier for mobile telephone, radio, telephone and navigation system aerial	274
031 - Ringbreak diagnosis	275-277
1. Ringbreak diagnosis	275
2. Ringbreak diagnosis	276
3. Ringbreak diagnosis	277
032 - Infotainment data bus (Most-Ring)	278-282
1. Infotainment data bus (Most-Ring)	278
2. MMI basic, not for USA	279
3. MMI basic plus, not for USA	280
4. MMI	281
5. MMI	282
033 - Communication	283-298
1. Communication	283
2. Data bus diagnostic interface, fuses	284
3. Data bus diagnostic interface	285
4. Front information display and operating unit control unit, multimedia system operating unit, glove compartment button, display unit button	286
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	287
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	288
7. Media player in position 1, fuses	289
8. Telephone transmitter and receiver unit, DVD player	290
9. Telephone transmitter and receiver unit, aerial for Bluetooth, telephone handset, radio, telephone and navigation system aerial	291
10. Telephone transmitter and receiver unit, aerial for Bluetooth	292
11. Telephone transmitter and receiver unit, mobile telephone	293
12. Aerial amplifier for mobile telephone, radio, telephone and navigation system aerial, fuses	294
13. Radio, language input control unit	295
14. TV tuner. aerial amolifier	296

15. Digital radio, aerial amplifier 2	297
16. Navigation system with CD drive control unit, navigation system aerial, telephone and navigation system aerial	298
034 - Navigation system	299-301
1. Navigation system	299
2. Navigation system with CD drive control unit, fuses	300
3. Navigation system with CD drive control unit, navigation aerial (GPS), radio/telephone/navigation aerial	301
035 - Heated front and rear seats	302-306
1. Heated front and rear seats	302
2. Heated driver seat regulator, heated front passenger seat regulator, Climatronic control unit	303
3. Heated driver seat, heated driver seat backrest, heated front passenger seat, heated front passenger seat backrest, heated seat cushion for front left seat, heated seat cushion for front right seat, temperature sensor	304
4. Heated rear left seat switch with regulator, heated rear right seat switch with regulator	305
5. Heated bench seat cushion for rear left seat, heated rear left seat backrest, heated bench seat cushion for rear right seat, heated rear right seat backrest, rear seat occupied sensor, rear seat temperature sensor	306
036 - MMI with 6 channel digital sound package sound system (9VD)	307-311
1. MMI with 6 channel digital sound package sound system (9VD)	307
2. Digital sound package control unit, fuses	308
3. Digital sound package control unit, front left bass loudspeaker, front right bass loudspeaker, front left mid-range loudspeaker	309
4. Digital sound package control unit, front right mid-range loudspeaker, rear left and right mid-range and bass loudspeaker, treble loudspeaker	310
5. Digital sound package control unit, microphone unit in front roof module	311
037 - MMI with Bose sound system (8RY)	312-317
1. MMI with Bose sound system (8RY)	312
2. Digital sound package control unit, fuses	313
3. Digital sound package control unit, front left bass loudspeaker, front left treble loudspeaker, mid-range loudspeakers, loudspeaker in rear shelf	314
4. Digital sound package control unit, front right mid-range loudspeaker, amplifier, front right treble loudspeaker, front right bass loudspeaker	315
5. Digital sound package control unit, rear left and rear right mid-range/bass loudspeaker, rear left and rear right treble loudspeaker, centre mid-range/treble loudspeaker	316
6. Digital sound package control unit, microphone unit in front roof module	317
038 - MMI	318-328
1. MMI	318
2. Front information display and operating unit control unit, fuses	319
3. Front information display and operating unit control unit, multimedia system operating unit, display unit button	320
4. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	321
5. Front information display and operating unit control unit, front left and right mid-range and bass loudspeaker, front left and right treble loudspeaker	322
6. Front information display and operating unit control unit, aerial amplifier, navigation system aerial GPS, radio, telephone and navigation system aerial	323
7. Data bus diagnostic interface, fuses	324
8. Data bus diagnostic interface	325
9. Digital radio, telephone transmitter and receiver unit, aerial amplifier 2	326
10. Telephone transmitter and receiver unit, mobile telephone	327
11. Aerial amplifier for mobile telephone, radio, telephone and navigation system aerial, media player in position 2	328
039 - Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control	329-334
1. Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control	329
2. Onboard power supply control unit, fuses	330
3. Light switch, left fog light bulb, right fog light bulb	331
4. Onboard supply control unit, cornering light and headlight range control unit	332
5. Onboard supply control unit, cornering light and headlight range control unit	333
6. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	334
040 - Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	335-340
1. Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	335
2. Onboard power supply control unit, fuses	336

3. Light switch, hazard warning lights button, left fog light bulb, right fog light bulb	337
4. Onboard supply control unit, left gas discharge light control unit	338
5. Onboard supply control unit, right gas discharge light control unit	339
6. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	340
041 - Electric seat adjustment with memory driver seat	341-346
1. Electric seat adjustment with memory driver seat	341
2. Seat and steering column adjustment control unit with memory, driver seat adjustment thermal fuse 1	342
3. Seat and steering column adjustment control unit with memory, head restraint adjustment switch, seat longitudinal adjustment button, rake adjustment button, seat height adjustment button, backrest adjustment button	343
4. Seat and steering column adjustment control unit with memory, driver seat rake adjustment motor, driver seat height adjustment motor, seat longitudinal adjustment motor	344
5. Seat and steering column adjustment control unit with memory, driver seat lumbar support adjustment switch, driver seat backrest adjustment motor, driver seat lumbar support longitudinal adjustment motor, driver seat lumbar support height adjustment motor	345
6. Driver seat memory operating unit, emergency-off button, driver door control unit	346
042 - Electric seat adjustment with memory front passenger seat	347-352
1. Electric seat adjustment with memory front passenger seat	347
2. Front passenger seat adjustment with memory control unit, front passenger seat adjustment thermal fuse 1	348
3. Front passenger seat adjustment with memory control unit, rake adjustment button, seat height adjustment button, seat longitudinal adjustment button, backrest adjustment button, head restraint adjustment switch	349
4. Front passenger seat adjustment with memory control unit, front passenger seat rake adjustment motor, front passenger seat height adjustment motor, seat longitudinal adjustment motor	350
5. Front passenger seat adjustment with memory control unit, front passenger seat lumbar support adjustment switch, front passenger seat adjustment motor	351
6. Front passenger seat memory operating unit, emergency-off button, front passenger door control unit,	352
043 - Electric seat adjustment without memory driver seat, front passenger seat	353-356
1. Electric seat adjustment without memory driver seat, front passenger seat	353
2. Driver seat adjustment switch, driver seat adjustment motor, driver seat adjustment thermal fuse 1	354
3. Driver seat lumbar support adjustment switch, front passenger seat lumbar support adjustment switch, driver seat and front passenger seat lumbar support longitudinal adjustment motor, driver seat and front passenger seat lumbar support height adjustment motor	355
4. Front passenger seat adjustment switch, front passenger seat adjustment motor, front passenger seat adjustment thermal fuse 1	356
044 - Driver seat, front passenger seat electric lumbar support adjustment	357-359
1. Driver seat, front passenger seat electric lumbar support adjustment	357
2. Driver seat lumbar support adjustment switch, driver seat lumbar support longitudinal adjustment motor, driver seat lumbar support height adjustment motor	358
3. Front passenger seat lumbar support adjustment switch, front passenger seat lumbar support longitudinal adjustment motor, front passenger seat lumbar support height adjustment motor	359
045 - Taxi	360-365
1. Taxi	360
2. Special vehicle control unit, fuses	361
3. Special vehicle control unit, two-way radio, two-way radio loudspeaker	362
4. Special vehicle control unit, taxi sign switch, taxi roof sign light bulb, taxi alarm active button, taxi alarm off button	363
5. Special vehicle control unit, taxi alarm remote control, control unit, 12 V socket	364
6. Special vehicle control unit, taxi meter, (above windscreen), chip card reader	365
046 - Audi A6 2.0 I Turbo-diesel engine (89 kW / 103 kW, 100 kW - 4 cylinder) engine codes BVG, BLB, BNA, BRE, BRF	366-381
1. Audi A6 2.0 I Turbo-diesel engine (89 kW / 103 kW, 100 kW - 4 cylinder) engine codes BVG, BLB, BNA, BRE, BRF	366
2. Battery, energy management control unit, battery cut-off relay, fuses	367
3. Starter, alternator, starter motor relay, starter motor relay 2, terminal 15 voltage supply relay, suppression filter	368
4. Automatic glow period control unit, glow plugs fuse, glow plugs	369
5. Diesel direct injection system control unit, terminal 30 voltage supply relay	370
6. Diesel direct injection system control unit, clutch pedal switch for engine start	371
7. Diesel direct injection system control unit, fuel temperature sender, unit injector valve, No. 1 up to 4 cvl..coolant temperature sender	372

8. Diesel direct injection system control unit, charge air pressure sender, accelerator position sender, exhaust gas recirculation valve, exhaust gas pressure sensor 1	373
9. Diesel direct injection system control unit, left electrohydraulic engine mounting solenoid valve, charge pressure control solenoid valve, intake manifold flap valve	374
10. Diesel direct injection system control unit, air mass meter, reversing light switch	375
11. Diesel direct injection system control unit, Hall sender, engine speed sender, coolant temperature sender	376
12. Diesel direct injection system control unit, lambda probe, exhaust gas temperature sender 1, temperature sender before particulate filter, temperature sender after particulate filter	377
13. Diesel direct injection system control unit, brake light switch, brake pedal switch, clutch position sender	378
14. Diesel direct injection system control unit, radiator fan control unit, low heat output relay, high heat output relay, radiator fan	379
15. Fuel pump relay, fuel gauge sender, fuel gauge, fuel pump, fuel gauge sender 2	380
16. Control unit in dash panel insert, oil pressure switch, oil level and oil temperature sender, coolant shortage indicator switch	381
047 - Digital TV tuner	382-385
1. Digital TV tuner	382
2. TV tuner, digital TV tuner, fuses	383
3. TV tuner, digital TV tuner, aerial amplifier	384
4. TV tuner, digital TV tuner, aerial amplifier 2	385
048 - Optimal equipment, police, german special police	386-408
1. Optimal equipment, police, german special police	386
2. Battery, energy management control unit, battery isolation igniter, fuses	387
3. Second battery, battery isolation relay, optional equipment main fuse	388
4. Terminal 15 voltage supply relay, fuse	389
5. Fuses, 12 V socket	390
6. Special vehicle control unit	391
7. Special vehicle control unit, weapons box button, button to deactivate interior lights, weapons box lock motor	392
8. Special vehicle control unit, engine continues to run without key button, rear left and right turn signal bulb, left and right flashing light	393
9. Special vehicle control unit, tachograph	394
10. Special vehicle control unit, two-way radio, hands-free system button, two-way radio button	395
11. Special vehicle control unit, two-way radio, 2-way radio switch, two-way radio loudspeaker	396
12. signal system DKL german special police	397
13. signal system DKL german special police	398
14. signal system DKL german special police	399
15. Signal system Topas	400
16. Signal system Topas	401
17. Signal system Topas	402
18. Signal system Topas	403
19. Signal system RTK 6	404
20. Signal system RTK 6	405
21. Signal system RTK 6	406
22. Signal system RTK 6	407
23. Radio frequency range NEF civil	408
049 - Communication Japan (8DZ, 7Q6, QV1, 7D0, 7D1)	409-423
1. Communication Japan (8DZ, 7Q6, QV1, 7D0, 7D1)	409
2. Data bus diagnostic interface, fuses	410
3. Data bus diagnostic interface	411
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button	412
5. Front information display and operating unit control unit, display and operating unit change-over unit	413
6. Front information display and operating unit control unit, display and operating unit change-over unit, navigation system with CD drive control unit	414
7. Navigation system with CD drive control unit, display unit for front information display and operating unit control unit, display and operating unit change-over unit	415
8. Navigation system with CD drive control unit, display unit for front information display and operating unit control unit, display and operating unit change-over unit	416
9. Navigation system with CD drive control unit, telephone transmitter and receiver unit, telephone bracket	417
10. Navigation system with CD drive control unit, traffic data aerial, chip card reader control unit	418
11. Navigation system with CD drive control unit, traffic data aerial, navigation system aerial, chip card reader control unit	419

12. Media player in position 1 and 2, fuses	420
13. Media player in position 2, fuses	421
14. Radio, TV tuner	422
15. TV tuner, aerial amplifier, aerial amplifier 2	423
050 - Communication USA (8DY, 7Q2, QV4, 7D1, 7D6)	424-436
1. Communication USA (8DY, 7Q2, QV4, 7D1, 7D6)	424
2. Data bus diagnostic interface, fuses	425
3. Data bus diagnostic interface	426
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button	427
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	428
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	429
7. Media player in position 1 and 2	430
8. Telephone transmitter and receiver unit, telephone bracket, microphone unit in front roof module	431
9. Telephone transmitter and receiver unit, telephone bracket, aerial for Bluetooth, digital sound package control unit	432
10. Radio, fuses	433
11. Radio, language input control unit, aerial amplifier	434
12. Navigation system with CD drive control unit, satellite radio	435
13. Radio, telephone and navigation system aerial, satellite radio	436
051 - Avant, rear	437-458
1. Avant, rear	437
2. Power supply, fuses	438
3. Fuses	439
4. Convenience system central control unit, power latching control unit, rear lid lock motor	440
5. Convenience system central control unit, left tail light, Lowline	441
6. Convenience system central control unit, right tail light, Lowline	442
7. Convenience system central control unit, left tail light, Highline	443
8. Convenience system central control unit, right tail light, Highline	444
9. Convenience system central control unit, left tail light, USA	445
10. Convenience system central control unit, left and right tail light, USA	446
11. Convenience system central control unit, heated rear window relay, high-mounted brake light bulb, number plate light	447
12. Convenience system central control unit, button to close rear lid in luggage compartment, luggage compartment light, rear lid light	448
13. Convenience system central control unit, rear lid contact switch for anti-theft alarm, release button for rear lid lock cylinder, rear side window glass breakage sensor, glass breakage sensor for rear left and right window, glass breakage sensor for rear window, rear lid central locking motor	449
14. Convenience system central control unit, rear lid control unit, rear lid electric release motor	450
15. Convenience system central control unit, alarm horn, interior monitoring sensor	451
16. Rear window wiper motor, windscreen and rear window washer pump	452
17. Digital sound package control unit, rear left and right mid-range and bass loudspeaker in D-pillar	453
18. Radio, aerial amplifier, TV tuner	454
19. TV tuner, aerial amplifier, aerial amplifier 2, aerial amplifier 3, aerial amplifier 4 for TV	455
20. Aerial amplifier 2, aerial amplifier 4, central locking and anti-theft alarm system aerial	456
21. Roof aerial, radio, telephone and navigation system aerial	457
22. Roof aerial USA, radio, telephone and navigation system aerial	458
052 - MMI with Bose 6000 soundsystem (8RY)	459-464
1. MMI with Bose 6000 soundsystem (8RY)	459
2. Digital sound package control unit, fuses	460
3. Digital sound package control unit, front left treble loudspeaker, front left bass loudspeaker, front left mid-range loudspeaker, loudspeaker in rear shelf	461
4. Digital sound package control unit, front right treble loudspeaker, front right bass loudspeaker, front right mid-range loudspeaker, centre mid-range and treble loudspeaker	462
5. Digital sound package control unit, rear left and right treble loudspeaker, rear left and right mid-range and bass loudspeaker	463
6. Digital sound package control unit, internal microphone, microphone unit in front roof module	464
053 - Electric tyre pressure monitor USA (7K7)	465-467
1. Electric tyre pressure monitor USA (7K7)	465
2. Tyre pressure monitor control unit, fuse	466
3. Tyre pressure monitor control unit, front left and right tyre pressure sensor, rear left and right tyre pressure sensor, rear tyre pressure monitor aerial	467

054 - Audi A6 2.0 I Fuel injection engine (125 kW - 4 cylinder), engine code BPJ	468-484
1. Audi A6 2.0 I Fuel injection engine (125 kW - 4 cylinder), engine code BPJ	468
2. Battery, energy management control unit, battery isolation igniter, fuses	469
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	470
4. Engine control unit, Motronic current supply relay, engine component current supply relay	471
5. Engine control unit	472
6. Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	473
7. Engine control unit, accelerator position sender, air mass meter, throttle valve module	474
8. Engine control unit, charge air pressure sender, fuel pressure sender for low pressure, intake manifold flap potentiometer, intake manifold flap motor	475
9. Engine control unit, coolant temperature sender, intake air temperature sender, fuel pressure sender, Hall sender	476
10. Engine control unit, Hall sender 2, knock sensors	477
11. Engine control unit, active charcoal filter system solenoid valve 1, inlet camshaft control valve 1, intake manifold flap valve	478
12. Engine control unit, lambda probe, lambda probe after catalytic converter	479
13. Engine control unit, brake light switch, brake pedal switch, clutch pedal switch for engine start	480
14. Engine control unit, clutch position sender	481
15. Engine control unit, radiator fan	482
16. Control unit in dash panel insert, fuel gauge sender 2, fuel pump control unit, fuel gauge sender, fuel gauge, fuel system pressurisation pump	483
17. Control unit in dash panel insert, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	484
055 - Special vehicle	485-497
1. Special vehicle	485
2. Special vehicle control unit, fuses	486
3. Special vehicle control unit, terminal 15 voltage supply relay	487
4. Special vehicle control unit, two-way radio button, two-way radio, two-way radio loudspeaker	488
5. Special vehicle control unit, personal danger alarm control unit, personal danger alarm button 1 (on)	489
6. Special vehicle control unit, personal danger alarm control unit, special signals switch (variable siren), speak button for intercom system, blue emergency light button	490
7. Special vehicle control unit, personal danger alarm control unit, alarm trip switch in luggage compartment, interior monitoring deactivation switch, special signal system switch	491
8. Personal danger alarm control unit, front left loudspeaker, external loudspeaker, microphone for special signals	492
9. Special vehicle control unit, personal danger alarm control unit, rotating light bulb, alternating pitch switch for personal danger alarm	493
10. Personal danger alarm control unit, internal microphone, microphone in left and right exterior mirror	494
11. Special vehicle control unit, smoke extractor switch, luggage compartment light on left, supply special signals and smoke extractor	495
12. Individualisation	496
13. Signal system	497
056 - Audi S6 5.2 I Fuel injection engine (320 kW - 10 cylinder), engine code BGS	498-526
1. Audi S6 5.2 I Fuel injection engine (320 kW - 10 cylinder), engine code BGS	498
2. Battery, energy management control unit, battery isolation igniter, fuses	499
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	500
4. Engine control unit, Motronic current supply relay	501
5. Engine control unit	502
6. Engine control unit, injectors cylinder 1 up to 4, ignition coils 1 up to 4 with output stage	503
7. Engine control unit, injector, cylinder 5, ignition coil 5 with output stage, brake servo relay, vacuum pump for brakes	504
8. Engine control unit, throttle valve module, accelerator position sender	505
9. Engine control unit, Hall sender, knock sensors	506
10. Engine control unit, engine speed sender, fuel pressure sender, intake manifold flap potentiometer	507
11. Engine control unit, coolant temperature sender, air mass meter, brake servo pressure sensor, fuel pressure sender for low pressure, intake air temperature sender	508
12. Engine control unit, active charcoal filter system solenoid valve 1, secondary air inlet valve, fuel metering valve, secondary air pump relay, secondary air pump motor	509
13. Engine control unit, map-controlled engine cooling system thermostat, inlet camshaft control valve 1, exhaust camshaft control valve 1, variable intake manifold motor	510
14. Engine control unit, additional coolant pump relay, continued coolant circulation pump, right electrohydraulic engine mounting solenoid valve. exhaust flap 1 valve. intake manifold flap motor	511

15. Engine control unit, lambda probe, lambda probe heater	512
16. Engine control unit, lambda probe after catalytic converter, lambda probe heater after catalytic converter, fuel system diagnostic pump	513
17. Engine control unit, brake light switch, brake light switch, brake pedal switch	514
18. Engine control unit, engine component current supply relay, radiator fan control unit, radiator fan	515
19. Engine control unit, engine control unit 2, CAN bus wiring	516
20. Engine control unit 2, throttle valve module 2	517
21. Engine control unit 2, injectors cylinder 6 up to 9, ignition coils 6 up to 9 with output stage	518
22. Engine control unit 2, injector, cylinder 10, ignition coil 10 with output stage, knock sensors	519
23. Engine control unit 2, Hall sender, intake manifold flap potentiometer 2	520
24. Engine control unit 2, air mass meter 2, left electrohydraulic engine mounting solenoid valve, inlet camshaft control valve 2, exhaust camshaft control valve 2, fuel metering valve 2	521
25. Engine control unit 2, radiator fan 3 relay, radiator fan 3	522
26. Engine control unit 2, lambda probe 3 and 4, lambda probe 3 and 4 heater	523
27. Engine control unit 2, lambda probe 3 and 4 after catalytic converter, lambda probe 3 and 4 heater after catalytic converter	524
28. Fuel pump control unit, control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge, fuel gauge sender 2	525
29. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil level and oil temperature sender, oil pressure switch, coolant shortage indicator switch	526
057 - Bluetooth car phone (9ZW)	527-529
1. Bluetooth car phone (9ZW)	527
2. Telephone transmitter and receiver unit	528
3. Telephone transmitter and receiver unit, aerial for Bluetooth, radio, telephone and navigation system aerial, microphone unit in front roof module, mobile telephone	529
058 - Navigation system China (7T4)	530-535
1. Navigation system China (7T4)	530
2. Navigation system with CD drive control unit, fuses	531
3. Front information display and operating unit control unit, navigation system with CD drive control unit, navigation system aerial	532
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button, glove compartment button	533
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	534
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	535
059 - Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control	536-542
1. Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control	536
2. Onboard power supply control unit, fuses	537
3. Light switch	538
4. Onboard supply control unit, cornering light and headlight range control unit, left gas discharge (xenon) bulb, left fog light bulb	539
5. Onboard supply control unit, cornering light and headlight range control unit, right gas discharge (xenon) bulb, right fog light bulb	540
6. Onboard supply control unit, left LED module for daytime running light and side light, front left and right side marker bulb	541
7. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	542
060 - Basic equipment	543-577
1. Basic equipment	543
2. Battery, energy management control unit, suppression filter	544
3. Terminal 15 voltage supply relay, terminal 75x voltage supply relay	545
4. Entry and start authorisation switch, entry and start authorisation control unit, fuses	546
5. Entry and start authorisation switch, entry and start authorisation control unit, entry and start authorisation button	547
6. Entry and start authorisation switch, entry and start authorisation control unit	548
7. Steering column electronics control unit, horn plate, intermittent wiper switch, turn signal switch, headlight flasher switch	549
8. Steering column electronics control unit, cruise control system switch, steering angle sender	550
9. Onboard power supply control unit, fuses	551
10. Onboard supply control unit, light switch, hazard warning lights button	552
11. Onboard supply control unit. left headlight	553

12. Onboard supply control unit, right headlight	554
13. Onboard supply control unit, fog light bulb, headlight range control regulator	555
14. Onboard supply control unit, treble tone horn, bass tone horn, dual tone horn relay, reversing light switch	556
15. Convenience system central control unit, fuses	557
16. Convenience system central control unit, left tail light and right Lowline	558
17. Convenience system central control unit, left tail light and right Highline	559
18. Convenience system central control unit, left tail light and right Highline USA	560
19. Convenience system central control unit, number plate light, heated rear window relay, high level brake light bulb, heated rear window, tank filler flap locking motor	561
20. Convenience system central control unit, brake light switch	562
21. Convenience system central control unit, luggage compartment light, rear left and right footwell light, glove compartment light switch, glove compartment light, rear roller blind motor	563
22. Wiper motor control unit, rain and light detector sensor, washer jet heater element, headlight washer system pump, washer pump	564
23. Onboard supply control unit 2, servotronic solenoid valve	565
24. Onboard supply control unit 2, glove compartment release motor, glove compartment button, display unit button	566
25. Diagnostic connector	567
26. Control unit in dash panel insert, data bus diagnostic interface	568
27. Control unit in dash panel insert, data bus diagnostic interface	569
28. Control unit in dash panel insert, front brake pad wear sender, oil pressure switch, brake fluid level warning contact, oil level and oil temperature sender	570
29. Control unit in dash panel insert, ambient temperature sensor, coolant shortage indicator switch, windscreen washer fluid level sender	571
30. Control unit in dash panel insert, radio controlled clock, radio controlled clock receiver, handbrake warning lamp	572
31. Control unit in dash panel insert, fuel gauge, fuel gauge sender 2, ashtray illumination bulb, cup holder illumination bulb	573
32. Driver and front passenger side illuminated vanity mirror, driver and front passenger vanity mirror contact switch	574
33. Interior light rear switch, rear left and right interior light, automatic anti-dazzle interior mirror	575
34. Automatic anti-dazzle interior mirror, driver and front passenger side reading light, sliding sunroof adjustment regulator	576
35. Rear roller blind switch, cigarette lighter, rear cigarette lighter	577
061 - Audi A6 2.0 I Fuel injection engine (125 kW - 4 cylinder), engine code BPJ	578-594
1. Audi A6 2.0 I Fuel injection engine (125 kW - 4 cylinder), engine code BPJ	578
2. Battery, energy management control unit, battery isolation igniter, fuses	579
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	580
4. Engine control unit, Motronic current supply relay, engine component current supply relay	581
5. Engine control unit	582
6. Engine control unit, injector for cylinders 1 - 4, ignition coils 1 - 4 with output stage	583
7. Engine control unit, accelerator position sender, air mass meter, throttle valve module	584
8. Engine control unit, charge air pressure sender, fuel pressure sender for low pressure, intake manifold flap potentiometer, intake manifold flap motor	585
9. Engine control unit, coolant temperature sender, intake air temperature sender, fuel pressure sender, Hall sender	586
10. Engine control unit, Hall sender 2, knock sensors	587
11. Engine control unit, active charcoal filter system solenoid valve 1, inlet camshaft control valve 1, charge pressure control solenoid valve	588
12. Engine control unit, lambda probe, lambda probe after catalytic converter	589
13. Engine control unit, brake light switch, brake pedal switch, clutch pedal switch for engine start	590
14. Engine control unit, clutch position sender, brake pedal switch	591
15. Engine control unit, radiator fan	592
16. Control unit in dash panel insert, fuel gauge sender 2, fuel pump control unit, fuel gauge sender, fuel gauge, fuel system pressurisation pump	593
17. Control unit in dash panel insert, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	594
062 - Audi A6 2.4 I Fuel injection engine (130 kW - 6 cylinder), engine code BDW	595-610
1. Audi A6 2.4 I Fuel injection engine (130 kW - 6 cylinder), engine code BDW	595
2. Battery, energy management control unit, fuses	596
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	597
4. Engine control unit, Motronic current supply relay	598
5. Engine control unit, CAN disconnecter	599

6. Engine control unit, injector for cylinders 1 - 4, ignition coils 1 - 4 with output stage	600
7. Engine control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, accelerator position sender, throttle valve module	601
8. Engine control unit, engine speed sender, Hall sender, coolant temperature sender, intake manifold pressure sender, intake air temperature sender	602
9. Engine control unit, knock sensors, active charcoal filter system solenoid valve 1, variable intake manifold change-over valve, secondary air pump relay, secondary air pump motor	603
10. Engine control unit, continued coolant circulation relay, inlet camshaft control valve, continued coolant circulation pump	604
11. Engine control unit, lambda probe, lambda probe 2	605
12. Engine control unit, lambda probes after catalytic converter	606
13. Engine control unit, clutch pedal switch for engine start, clutch position sender	607
14. Engine control unit, brake light switch, brake pedal switch, radiator fan	608
15. Control unit in dash panel insert, fuel pump relay, fuel system pressurisation pump, fuel gauge sender, fuel gauge	609
16. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	610
063 - Audi A6 3.0 I - Fuel injection engine (160 kW - Motronic - 6 cylinder), engine code BBJ	611-627
1. Audi A6 3.0 I - Fuel injection engine (160 kW - Motronic - 6 cylinder), engine code BBJ	611
2. Battery, energy management control unit, fuses	612
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	613
4. Engine control unit, Motronic current supply relay	614
5. Engine control unit, CAN separating connector, earth connections	615
6. Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	616
7. Engine control unit, injector, cylinder 5 and 6, ignition coil 5 and 6 with output stage, accelerator position sender, throttle valve module	617
8. Engine control unit, engine speed sender, coolant temperature sender, knock sensors	618
9. Engine control unit, Hall sender, brake servo pressure sensor	619
10. Engine control unit, inlet camshaft control valve, continued coolant circulation relay, continued coolant circulation pump, air mass meter, intake air temperature sender	620
11. Engine control unit, active charcoal filter system solenoid valve 1 (pulsed), secondary air inlet valve, variable intake manifold change-over valve, intake manifold flap valve, secondary air pump relay, secondary air pump motor, vacuum pump for brakes	621
12. Engine control unit, lambda probe, lambda probe 2	622
13. Engine control unit, lambda probes after catalytic converter	623
14. Engine control unit, brake light switch, brake light switch, brake pedal switch	624
15. Engine control unit, radiator fan	625
16. Engine control unit, control unit in dash panel insert, fuel pump relay, fuel system pressurisation pump, fuel gauge sender, fuel gauge	626
17. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, oil level and oil temperature sender	627
064 - 3.2l petrol engine , AUK,BKH	628-647
1. 3.2l petrol engine , AUK,BKH	628
2. Airbag control unit, Energy management control unit	629
3. Starter, Alternator, Suppression capacitor, Starter motor relay, Terminal 15 voltage supply relay, Starter motor relay 2	630
4. Main relay, Engine/motor control unit	631
5. Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit	632
6. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	633
7. Accelerator position sender, Throttle valve module, Engine/motor control unit, Injector, cylinder 5, Injector, cylinder 6, Ignition coil 5 with output stage, Ignition coil 6 with output stage	634
8. Engine speed sender, Knock sensor 1, Coolant temperature sender, Knock sensor 2, Engine/motor control unit	635
9. Hall sender, Hall sender 2, Hall sender 3, Hall sender 4, Engine/motor control unit	636
10. Intake air temperature sender, Intake manifold pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Intake manifold flap potentiometer 2, Engine/motor control unit	637
11. Fuel pressure sender, Engine/motor control unit, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2	638
12. Additional coolant pump relay, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Variable intake manifold changeover valve, Fuel metering valve, Continued coolant circulation pump	639

13. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Intake manifold flap valve, Variable intake manifold changeover valve, Fuel system diagnostic pump	640
14. Lambda probe, Lambda probe 2, Engine/motor control unit	641
15. Brake light switch, Brake pedal switch, Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Variable intake manifold position sender, Engine/motor control unit	642
16. Brake light switch, Brake pedal switch, Clutch pedal switch for engine start, Engine/motor control unit	643
17. Clutch position sender, Engine/motor control unit	644
18. Radiator fan control unit, Engine/motor control unit, Engine component current supply relay, Radiator fan, Radiator fan 2	645
19. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	646
20. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, Control unit in dash panel insert, Oil pressure warning lamp, Coolant temperature and coolant shortage warning lamp, Display in dash panel insert	647
065 - Audi A6 2.0 I Turbo-diesel engine (89 kW - 4 cylinder) engine code BVG	648-663
1. Audi A6 2.0 I Turbo-diesel engine (89 kW - 4 cylinder) engine code BVG	648
2. Battery, energy management control unit, fuses	649
3. Starter, alternator, starter motor relay, starter motor relay 2, terminal 15 voltage supply relay, suppression filter	650
4. Automatic glow period control unit, glow plugs fuse, glow plugs	651
5. Engine control unit, terminal 30 voltage supply relay	652
6. Engine control unit, clutch pedal switch for engine start	653
7. Engine control unit, fuel temperature sender, unit injector valve, No. 1 up to 4 cyl., coolant temperature sender	654
8. Engine control unit, charge air pressure sender, accelerator position sender, exhaust gas pressure sensor 1, exhaust gas recirculation valve	655
9. Engine control unit, left electrohydraulic engine mounting solenoid valve, charge pressure control solenoid valve, intake manifold flap valve	656
10. Engine control unit, air mass meter, reversing light switch	657
11. Engine control unit, engine speed sender, Hall sender	658
12. Engine control unit, lambda probe, exhaust gas temperature sender 1, temperature sender before particulate filter, temperature sender after particulate filter, brake pedal switch	659
13. Engine control unit, brake light switch, brake pedal switch, clutch position sender	660
14. Engine speed sender, radiator fan control unit, low heat output relay, high heat output relay, radiator fan	661
15. Fuel pump relay, fuel gauge sender, fuel gauge, fuel pump, fuel gauge sender 2	662
16. Control unit in dash panel insert, oil pressure switch, oil level and oil temperature sender, coolant shortage indicator switch	663
066 - Audi A6 2,7 I - TDI, Common Rail (120 kW - 6-cylinder), engine code BSG	664-679
1. Audi A6 2,7 I - TDI, Common Rail (120 kW - 6-cylinder), engine code BSG	664
2. Battery, energy management control unit, fuses	665
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	666
4. Automatic glow period control unit, glow plugs fuse, glow plugs	667
5. Engine control unit, terminal 30 voltage supply relay	668
6. Engine control unit, fuses, clutch pedal switch for engine start	669
7. Engine control unit, injector, cylinder 1 up to 6, coolant temperature sender, fuel temperature sender, fuel pressure sender	670
8. Engine control unit, accelerator position sender, throttle valve module, exhaust gas recirculation valve, exhaust gas recirculation cooler change-over valve, air filter bypass flap valve	671
9. Engine control unit, intake manifold flap motor, intake manifold flap 2 motor, turbocharger 1 control unit, left electrohydraulic engine mounting solenoid valve	672
10. Engine control unit, fuel pressure regulating valve, fuel metering valve	673
11. Engine control unit, brake light switch, brake pedal switch, clutch position sender	674
12. Engine control unit, engine speed sender, charge air pressure sender, Hall sender, intake air temperature sender	675
13. Engine control unit, exhaust gas temperature sender 1, lambda probe, exhaust gas pressure sensor 1, temperature sender before particulate filter	676
14. Engine control unit, low heat output relay, high heat output relay, radiator fan, auxiliary heating heater element, fuses	677
15. Fuel pump relay, control unit in dash panel insert, fuel pump, fuel gauge sender, fuel gauge, fuel gauge sender 2	678
16. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, oil level and oil temperature sender	679

067 - Audi A6 4.2 I - Fuel injection engine (246 kW - Motronic - 8 cylinder), engine code BAT, BNK	680-695
1. Audi A6 4.2 I - Fuel injection engine (246 kW - Motronic - 8 cylinder), engine code BAT, BNK	680
2. Battery, energy management control unit, fuses	681
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay	682
4. Engine control unit, Motronic current supply relay	683
5. Engine control unit, injector, cylinder 1 - 4, ignition coil 1 - 4 with output stage	684
6. Engine control unit, injector, cylinder 5 - 8, ignition coil 5 - 8 with output stage	685
7. Engine control unit, engine speed sender, Hall sender, Hall sender 2, coolant temperature sender	686
8. Engine control unit, knock sensors 1 - 4	687
9. Engine control unit, accelerator position sender, throttle valve module	688
10. Engine control unit, lambda probe, lambda probe 2	689
11. Engine control unit, air mass meter, active charcoal filter system solenoid valve 1, variable intake manifold change-over valve, lambda probe after catalytic converter	690
12. Engine control unit, secondary air pump relay, electrohydraulic engine mounting solenoid valves, variable intake manifold change-over valve, secondary air pump motor, fuel system diagnostic pump	691
13. Engine control unit, continued coolant circulation relay, inlet camshaft control valve, radiator fan, continued coolant circulation pump	692
14. Engine control unit, brake light switchbrake light switch, fuel pump relay	693
15. Control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge sender 2	694
16. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil pressure switch, oil level and oil temperature sender	695
068 - Audi A6 4.2 I Fuel injection engine (257 kW - FSI - 8-cylinder) engine code BVJ	696-717
1. Audi A6 4.2 I Fuel injection engine (257 kW - FSI - 8-cylinder) engine code BVJ	696
2. Battery, energy management control unit, battery isolation igniter, fuses	697
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	698
4. Engine control unit, Motronic current supply relay	699
5. Engine control unit, ignition coil 1 up to 4 with output stage	700
6. Engine control unit, ignition coil 5 up to 8 with output stage	701
7. Engine control unit, injector for cylinders 1, 2, 6, 8	702
8. Engine control unit, injector for cylinders 3, 4, 5, 7	703
9. Engine control unit, knock sensors	704
10. Engine control unit, Hall sender, intake manifold flap potentiometer	705
11. Engine control unit, engine speed sender, Hall sender, air mass meter, fuel pressure sender, coolant temperature sender	706
12. Engine control unit, brake servo pressure sensor, fuel pressure sender for low pressure, Hall sender	707
13. Engine control unit, throttle valve module, accelerator position sender	708
14. Engine control unit, lambda probe, lambda probe heater	709
15. Engine control unit, lambda probe after catalytic converter, activated charcoal filter system solenoid valve 1, fuel metering valve, variable intake manifold change-over valve, lambda probe 1 heater after catalytic converter	710
16. Engine control unit, secondary air pump relay, left and right electrohydraulic engine mounting solenoid valve, secondary air pump fuse, fuel system diagnostic pump	711
17. Engine control unit, continued coolant circulation relay, inlet camshaft control valves, map-controlled engine cooling system thermostat, intake manifold flap motor, variable intake manifold motor	712
18. Engine control unit, brake servo relay, vacuum pump for brakes	713
19. Engine control unit, brake light switchbrake light switch, brake pedal switch	714
20. Engine control unit, engine component current supply relay, radiator fan control unit, radiator fan	715
21. Fuel pump control unit, control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge, fuel gauge sender 2	716
22. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil level and oil temperature sender, oil pressure switch, coolant shortage indicator switch	717
069 - Audi S6 5.2 I Fuel injection engine (320 kW - 10 cylinder), engine code BXA	718-745
1. Audi S6 5.2 I Fuel injection engine (320 kW - 10 cylinder), engine code BXA	718
2. Battery, energy management control unit, battery isolation igniter, fuses	719
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	720
4. Engine control unit, Motronic current supply relay	721
5. Engine control unit	722
6. Engine control unit, injectors cylinder 1 up to 4, ignition coils 1 up to 4 with output stage	723
7. Engine control unit, injector, cylinder 5, ignition coil 5 with output stage, brake servo relay, vacuum pump for brakes	724
8. Engine control unit, throttle valve module, accelerator position sender	725

9. Engine control unit, Hall sender, knock sensors	726
10. Engine control unit, engine speed sender, fuel pressure sender, intake manifold flap potentiometer	727
11. Engine control unit, coolant temperature sender, air mass meter, brake servo pressure sensor, fuel pressure sender for low pressure, intake air temperature sender	728
12. Engine control unit, active charcoal filter system solenoid valve 1, secondary air inlet valve, fuel metering valve, secondary air pump relay, secondary air pump motor	729
13. Engine control unit, map-controlled engine cooling system thermostat, inlet camshaft control valve 1, exhaust camshaft control valve 1, variable intake manifold motor	730
14. Engine control unit, additional coolant pump relay, continued coolant circulation pump, right electrohydraulic engine mounting solenoid valve, intake manifold flap motor	731
15. Engine control unit, lambda probe, lambda probe heater	732
16. Engine control unit, lambda probe after catalytic converter, lambda probe heater after catalytic converter, fuel system diagnostic pump	733
17. Engine control unit, brake light switch, brake light switch, brake pedal switch	734
18. Engine control unit, engine component current supply relay, radiator fan control unit, radiator fan	735
19. Engine control unit, engine control unit 2, CAN bus wiring	736
20. Engine control unit 2, throttle valve module 2	737
21. Engine control unit 2, injectors cylinder 6 up to 9, ignition coils 6 up to 9 with output stage	738
22. Engine control unit 2, injector, cylinder 10, ignition coil 10 with output stage, knock sensors	739
23. Engine control unit 2, Hall sender, intake manifold flap potentiometer 2	740
24. Engine control unit 2, air mass meter 2, left electrohydraulic engine mounting solenoid valve, inlet camshaft control valve 2, exhaust camshaft control valve 2, fuel metering valve 2	741
25. Engine control unit 2, lambda probe 3 and 4, lambda probe 3 and 4 heater	742
26. Engine control unit 2, lambda probe 3 and 4 after catalytic converter, lambda probe 3 and 4 heater after catalytic converter	743
27. Fuel pump control unit, control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge, fuel gauge sender 2	744
28. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil level and oil temperature sender, oil pressure switch, coolant shortage indicator switch	745
070 - Automatic gearbox 09L, 09E	746-750
1. Automatic gearbox 09L, 09E	746
2. Automatic gearbox control unit, fuses	747
3. Automatic gearbox control unit	748
4. Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display	749
5. Automatic gearbox control unit, selector lever lock solenoid, gear selector position P switch	750
071 - Automatic gearbox multitronic® 01J	751-755
1. Automatic gearbox multitronic® 01J	751
2. Automatic gearbox control unit, fuses	752
3. Automatic gearbox control unit	753
4. Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display	754
5. Automatic gearbox control unit, selector lever lock solenoid, gear selector position P switch	755
072 - Avant, rear	756-777
1. Avant, rear	756
2. Voltage supply, fuses	757
3. Fuses	758
4. Convenience system central control unit, power latching control unit, rear lid lock motor	759
5. Convenience system central control unit, left tail light Lowline	760
6. Convenience system central control unit, right tail light Lowline	761
7. Convenience system central control unit, left tail light Highline	762
8. Convenience system central control unit, right tail light Highline	763
9. Convenience system central control unit, left tail light USA	764
10. Convenience system central control unit, left tail light and right USA	765
11. Convenience system central control unit, heated rear window relay, high level brake light bulb, number plate light	766
12. Convenience system central control unit, button to close rear lid in luggage compartment, luggage compartment light, rear lid light	767
13. Convenience system central control unit, rear lid contact switch for anti-theft alarm, release button for rear lid lock cylinder, rear left and right side window glass breakage sensor, glass breakage sensor for rear window, rear lid central locking motor	768
14. Convenience system central control unit, rear lid control unit, rear lid electric release motor	769
15. Convenience system central control unit, alarm horn, interior monitoring sensor	770

16. Rear window wiper motor, windscreen and rear window washer pump	771
17. Digital sound package control unit, rear left and right D-pillar mid-range loudspeaker	772
18. Radio, aerial amplifier, TV tuner	773
19. TV tuner, aerial amplifier, aerial amplifier 2, aerial amplifier 3, aerial amplifier 4 for TV	774
20. Aerial amplifier 2, aerial amplifier 4, central locking and anti-theft alarm system aerial	775
21. Roof aerial, radio, telephone and navigation system aerial	776
22. Roof aerial USA, radio, telephone and navigation system aerial	777
073 - Communication	778-793
1. Communication	778
2. Data bus diagnostic interface, fuses	779
3. Data bus diagnostic interface	780
4. Front information display and operating unit control unit, multimedia system operating unit, glove compartment button, display unit button	781
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	782
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	783
7. Media player in position 1, fuses	784
8. Telephone transmitter and receiver unit, media player in position 2	785
9. Telephone transmitter and receiver unit, aerial for Bluetooth, telephone handset, radio, telephone and navigation system aerial	786
10. Telephone transmitter and receiver unit, aerial for Bluetooth	787
11. Telephone transmitter and receiver unit, mobile telephone	788
12. Aerial amplifier for mobile telephone, radio, telephone and navigation system aerial, fuses	789
13. Radio, language input control unit	790
14. TV tuner, aerial amplifier	791
15. Digital radio, aerial amplifier 2	792
16. Navigation system with CD drive control unit, telephone and navigation system aerial, navigation system aerial	793
074 - MMI with 6 channel digital sound package sound system (9VD)	794-798
1. MMI with 6 channel digital sound package sound system (9VD)	794
2. Digital sound package control unit, fuses	795
3. Digital sound package control unit, front left bass loudspeaker, front right bass loudspeaker, front left mid-range loudspeaker	796
4. Digital sound package control unit, front right mid-range loudspeaker, rear left and right mid-range and bass loudspeaker, treble loudspeaker	797
5. Digital sound package control unit, microphone unit in front roof module	798
075 - MMI with Bose 6000 soundsystem (8RY)	799-804
1. MMI with Bose 6000 soundsystem (8RY)	799
2. Digital sound package control unit, fuses	800
3. Digital sound package control unit, front left treble loudspeaker, front left bass loudspeaker, front left mid-range loudspeaker, loudspeaker in rear shelf	801
4. Digital sound package control unit, front right treble loudspeaker, front right bass loudspeaker, front right mid-range loudspeaker, centre mid-range and treble loudspeaker	802
5. Digital sound package control unit, rear left and right treble loudspeaker, rear left and right mid-range and bass loudspeaker	803
6. Digital sound package control unit, internal microphone, microphone unit in front roof module	804
076 - MMI	805-815
1. MMI	805
2. Front information display and operating unit control unit, fuses	806
3. Front information display and operating unit control unit, multimedia system operating unit, display unit button	807
4. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	808
5. Front information display and operating unit control unit, front left and right mid-range and bass loudspeaker, front left and right treble loudspeaker	809
6. Front information display and operating unit control unit, aerial amplifier, radio, telephone and navigation system aerial, navigation system aerial	810
7. Data bus diagnostic interface, fuses	811
8. Data bus diagnostic interface	812
9. Digital radio, telephone transmitter and receiver unit, aerial amplifier 2	813
10. Telephone transmitter and receiver unit, mobile telephone	814
11. Aerial amplifier for mobile telephone, radio, telephone and navigation system aerial, media player in position 2	815
077 - Navigation system	816-818
1. Navigation system	816

2. Navigation system with CD drive control unit, fuses	817
3. Navigation system with CD drive control unit, telephone and navigation system aerial, navigation system aerial	818
078 - Bluetooth car phone (9ZW)	819-821
1. Bluetooth car phone (9ZW)	819
2. Telephone transmitter and receiver unit	820
3. Telephone transmitter and receiver unit, aerial for Bluetooth, radio, telephone and navigation system aerial, microphone unit in front roof module, mobile telephone	821
079 - Telephone	822-825
1. Telephone	822
2. Telephone transmitter and receiver unit	823
3. Telephone transmitter and receiver unit, aerial for Bluetooth	824
4. Telephone transmitter and receiver unit, microphone unit in front roof module, radio, telephone and navigation system aerial	825
080 - Preparation for mobile telephone	826-830
1. Preparation for mobile telephone	826
2. Telephone transmitter and receiver unit, fuses	827
3. Telephone transmitter and receiver unit, aerial for Bluetooth, microphone unit in front roof module	828
4. Telephone transmitter and receiver unit, mobile telephone	829
5. Aerial amplifier for mobile telephone, radio, telephone and navigation system aerial	830
081 - Navigation system China (7T4)	831-836
1. Navigation system China (7T4)	831
2. Navigation system with CD drive control unit, fuses	832
3. Front information display and operating unit control unit, navigation system with CD drive control unit, navigation system aerial	833
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button, glove compartment button	834
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	835
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	836
082 - Communication Japan (8DZ, 7Q6, QV1, 7D0, 7D1)	837-851
1. Communication Japan (8DZ, 7Q6, QV1, 7D0, 7D1)	837
2. Data bus diagnostic interface, fuses	838
3. Data bus diagnostic interface	839
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button	840
5. Front information display and operating unit control unit, display and operating unit change-over unit	841
6. Front information display and operating unit control unit, display and operating unit change-over unit, navigation system with CD drive control unit	842
7. Navigation system with CD drive control unit, display unit for front information display and operating unit control unit, display and operating unit change-over unit	843
8. Navigation system with CD drive control unit, display unit for front information display and operating unit control unit, display and operating unit change-over unit	844
9. Navigation system with CD drive control unit, telephone transmitter and receiver unit, telephone bracket	845
10. Navigation system with CD drive control unit, traffic data aerial, chip card reader control unit	846
11. Navigation system with CD drive control unit, traffic data aerial, navigation system aerial, chip card reader control unit	847
12. Media player in position 1 and 2, fuses	848
13. Media player in position 2, fuses	849
14. Radio, TV tuner	850
15. TV tuner, aerial amplifier, aerial amplifier 2	851
083 - Communication USA (8DY, 7Q2, QV4, 7D1, 7D6)	852-864
1. Communication USA (8DY, 7Q2, QV4, 7D1, 7D6)	852
2. Data bus diagnostic interface, fuses	853
3. Data bus diagnostic interface	854
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button	855
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	856
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	857
7. Media player in position 1 and 2	858

8. Telephone transmitter and receiver unit, telephone bracket, microphone unit in front roof module	859
9. Telephone transmitter and receiver unit, telephone bracket, aerial for Bluetooth, digital sound package control unit	860
10. Radio, fuses	861
11. Radio, language input control unit, aerial amplifier	862
12. Navigation system with CD drive control unit, satellite radio	863
13. Radio, telephone and navigation system aerial, satellite radio	864
084 - Reversing camera system	865-867
1. Reversing camera system	865
2. Reversing camera system control unit, fuse	866
3. Reversing camera system control unit, reversing camera	867
085 - Trailer towing attachment	868-871
1. Trailer towing attachment	868
2. Trailer detector control unit, fuses	869
3. Trailer detector control unit, trailer socket	870
4. Trailer detector control unit, trailer socket, contact switch on hand wheel, contact switch on locking pin, trailer towing attachment warning lamps	871
086 - Anti-lock brake system (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	872-877
1. Anti-lock brake system (ABS) with traction control system (TCS) and electronic stabilisation program (ESP)	872
2. ABS control unit, ABS control unit fuse 1	873
3. ABS control unit, ESP TCS and ESP button, lateral acceleration sender, yaw rate sender, ESP sensor unit, front brake pressure sender	874
4. ABS control unit, speed sensor	875
5. ABS control unit, brake light switch, output V-signal	876
6. ABS control unit, ABS return flow pump, inlet and outlet valve, ABS return flow pump relay	877
087 - Airbag	878-884
1. Airbag	878
2. Airbag control unit, battery isolation igniter	879
3. Airbag control unit, driver side airbag igniter, front passenger side airbag igniter	880
4. Airbag control unit, side airbag igniter on driver and front passenger side, rear side airbag igniter on driver and front passenger side	881
5. Airbag control unit, driver and front passenger side seat belt tensioner igniter, driver and front passenger side curtain airbag igniter	882
6. Airbag control unit, side airbag crash sensor on driver and front passenger side, rear side airbag crash sensor on driver and front passenger side, front airbag crash sensor for driver and front passenger side	883
7. Airbag control unit, driver and front passenger side belt switch, key operated switch to deactivate front passenger side airbag, front passenger side airbag deactivated warning lamp	884
088 - Airbag (USA)	885-891
1. Airbag (USA)	885
2. Airbag control unit, battery isolation igniter	886
3. Airbag control unit, driver side airbag igniter, front passenger side airbag igniter	887
4. Airbag control unit, side airbag igniter on driver and front passenger side, rear side airbag igniter on driver and front passenger side	888
5. Airbag control unit, driver and front passenger seat belt tensioner igniter, rear belt tensioner igniter, driver and front passenger side curtain airbag igniter, driver side belt force limiter	889
6. Airbag control unit, side airbag crash sensor on driver and front passenger side, rear side airbag crash sensor on driver and front passenger side, front airbag crash sensor for driver and front passenger side	890
7. Airbag control unit, seat occupied recognition control unit, driver side and front passenger side belt switch, front passenger side airbag deactivated warning lamp	891
089 - Electrical sunroof	892-895
1. Electrical sunroof	892
2. Sliding sunroof adjustment control unit, fuses	893
3. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator, sunroof button, sliding sunroof motor	894
4. Fresh air blower control unit, solar operation control unit, solar cells, fresh air blower	895
090 - Air conditioning system	896-909
1. Air conditioning system	896
2. Climatronic control unit, fuses	897
3. Climatronic control unit, air quality sensor, refrigerant pressure and temperature sender, fresh air blower control unit, fresh air blower	898
4. Climatronic control unit, solar operation control unit, solar cells, air conditioning system compressor regulating valve	899

5. Climatronic control unit, centre left and right vent sensor, front left and right seat temperature sender, sunlight penetration photosensor	900
6. Climatronic control unit, air flow flap control motor, air recirculation flap control motor, fresh air intake duct temperature sensor	901
7. Climatronic control unit, coolant circulation pump, left and right heat regulation valve, rear roller blind switch	902
8. Climatronic control unit, vent temperature sender, potentiometer for front cold air flap control motor, front cold air flap control motor	903
9. Climatronic control unit, potentiometer for centre vent control motor, potentiometer for rear footwell vent control motor, central vents control motor, rear footwell vent control motor	904
10. Climatronic control unit, defroster flap control motor potentiometer, potentiometer for indirect ventilation flap control motor, defroster flap control motor, indirect ventilation flap control motor	905
11. Climatronic control unit, potentiometer for left footwell flap control motor, front left chest vent potentiometer, left footwell flap control motor, front left chest vent control motor	906
12. Climatronic control unit, potentiometer for right footwell flap control motor, front left and right chest vent potentiometer, right footwell flap control motor, front left and right chest vent control motor	907
13. Climatronic control unit, heated rear left and right seat switch with regulator, front left and right seat heating	908
14. Dash panel left and right vent illumination bulb, central rear vent illumination bulb	909
091 - Electrical rear roller blind	910-912
1. Electrical rear roller blind	910
2. Convenience system central control unit, rear roller blind motor	911
3. Rear roller blind switch	912
092 - Adaptive suspension	913-919
1. Adaptive suspension	913
2. Adaptive suspension control unit, Fuse carrier 2	914
3. Compressor temperature sender for adaptive suspension, Adaptive suspension control unit, Adaptive suspension compressor relay, Adaptive suspension compressor motor	915
4. Pressure sender for adaptive suspension, Adaptive suspension control unit, Front left suspension strut valve, Rear left suspension strut valve	916
5. Rear left vehicle level sender, Front left vehicle level sender, Adaptive suspension control unit	917
6. Front left body acceleration sender, Front right body acceleration sender, Rear body acceleration sender, Adaptive suspension control unit	918
7. Adaptive suspension control unit, Front left shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve	919
093 - Auxiliary heater	920-923
1. Auxiliary heater	920
2. Auxiliary heater control unit, fuses	921
3. Auxiliary heater control unit, heater coolant shut-off valve, remote control receiver for auxiliary heating, metering pump	922
4. Fuel pump relay for auxiliary heater, fuses	923
094 - Entry and start authorisation, entry and start authorisation with Kessy	924-930
1. Entry and start authorisation, entry and start authorisation with Kessy	924
2. Entry and start authorisation control unit, fuses	925
3. Entry and start authorisation control unit, entry and start authorisation switch, entry and start authorisation button	926
4. Entry and start authorisation control unit, entry and start authorisation switch, aerial for entry and start authorisation, aerial reader unit for keyless entry system	927
5. Entry and start authorisation control unit, aerial reader unit for keyless entry system, terminal 15 voltage supply relay, terminal 75x voltage supply relay	928
6. Entry and start authorisation control unit	929
7. Starter motor relay, starter motor relay 2	930
095 - Electric park and handbrake	931-934
1. Electric park and handbrake	931
2. Electric park and handbrake control unit, fuses	932
3. Electric park and handbrake control unit, left and right parking brake motor, clutch position sender, electric park and handbrake warning lamp, electric parking brake and handbrake fault warning lamp	933
4. Electric park and handbrake control unit, parking brake pressure switch	934
096 - Driver seat electric lumbar support adjustment, front passenger seat electric lumbar support adjustment	935-937
1. Driver seat electric lumbar support adjustment, front passenger seat electric lumbar support adjustment	935
2. Driver seat lumbar support adjustment switch. driver seat lumbar support longitudinal adjustment	936

motor, driver seat lumbar support height adjustment motor	
3. Front passenger seat lumbar support adjustment switch, front passenger seat lumbar support longitudinal adjustment motor, front passenger seat lumbar support height adjustment motor	937
097 - Heated front and rear seats	938-942
1. Heated front and rear seats	938
2. Heated driver seat regulator, heated front passenger seat regulator, Climatronic control unit	939
3. Heated driver seat, heated driver seat backrest, heated front passenger seat, heated front passenger seat backrest, heated seat cushion for front left seat, heated seat cushion for front right seat, temperature sensor	940
4. Heated rear left seat switch with regulator, heated rear right seat switch with regulator	941
5. Heated bench seat cushion for rear left seat, heated rear left seat backrest, heated bench seat cushion for rear right seat, heated rear right seat backrest, rear seat occupied sensor, rear seat temperature sensor	942
098 - Electric seat adjustment with memory front passenger seat	943-948
1. Electric seat adjustment with memory front passenger seat	943
2. Front passenger seat adjustment with memory control unit, driver seat adjustment thermal fuse 1	944
3. Front passenger seat adjustment with memory control unit, rake adjustment button, seat height adjustment button, seat longitudinal adjustment button, backrest adjustment button, head restraint adjustment switch	945
4. Front passenger seat adjustment with memory control unit, front passenger seat rake adjustment motor, front passenger seat height adjustment motor, seat longitudinal adjustment motor	946
5. Front passenger seat adjustment with memory control unit, front passenger seat lumbar support adjustment switch, front passenger seat adjustment motors	947
6. Front passenger seat memory operating unit, front passenger side emergency off button, front passenger door control unit	948
099 - Electric seat adjustment with memory driver seat	949-954
1. Electric seat adjustment with memory driver seat	949
2. Seat and steering column adjustment control unit with memory function, driver seat adjustment thermal fuse 1	950
3. Seat and steering column adjustment control unit with memory function, head restraint adjustment switch, seat longitudinal adjustment button, rake adjustment button, seat height adjustment button, backrest adjustment button	951
4. Seat and steering column adjustment control unit with memory function, driver seat rake adjustment motor, driver seat height adjustment motor, seat longitudinal adjustment motor	952
5. Seat and steering column adjustment control unit with memory, driver seat lumbar support adjustment switch, driver seat backrest adjustment motor, driver seat lumbar support longitudinal adjustment motor, driver seat lumbar support height adjustment motor	953
6. Driver seat memory operating unit, emergency-off button, driver door control unit	954
100 - Electric seat adjustment without memory driver seat, electric seat adjustment without memory front passenger	955-958
1. Electric seat adjustment without memory driver seat, electric seat adjustment without memory front passenger	955
2. Driver seat adjustment switch, driver seat adjustment motors, driver seat adjustment thermal fuse 1	956
3. Driver seat lumbar support adjustment switch, front passenger seat lumbar support adjustment switch, driver seat and front passenger seat lumbar support longitudinal adjustment motors, driver seat and front passenger seat lumbar support height adjustment motors	957
4. Front passenger seat adjustment switch, front passenger seat adjustment motors, front passenger seat adjustment thermal fuse 1	958
101 - Taxi	959-964
1. Taxi	959
2. Special vehicle control unit, fuses	960
3. Special vehicle control unit, two-way radio, two-way radio loudspeaker	961
4. Special vehicle control unit, taxi sign switch, taxi roof sign light bulb, taxi alarm active button, taxi alarm off button	962
5. Special vehicle control unit, taxi alarm remote control, control unit, 12 V socket	963
6. Special vehicle control unit, taxi meter, (above windscreen), chip card reader	964
102 - Optimal equipment, police, German special police	965-987
1. Optimal equipment, police, German special police	965
2. Battery, energy management control unit, battery monitor control unit, fuses	966
3. Second battery, battery isolation relay, optional equipment main fuse, battery isolation igniter	967
4. Terminal 15 voltage supply relay, fuse	968
5. Fuses, 12 V socket	969
6. Special vehicle control unit	970
7. Special vehicle control unit, weapons box button, button to deactivate interior lights, exterior socket. 230 V. 110 V. interior socket. 230 V. 110 V	971

8. Special vehicle control unit, engine continues to run without key button, rear left and right turn signal bulb, left and right flashing light	972
9. Special vehicle control unit, tachograph	973
10. Special vehicle control unit, two-way radio, hands-free system button, two-way radio button	974
11. Special vehicle control unit, two-way radio, 2-way radio switch, two-way radio loudspeaker	975
12. signal system DKL German special police	976
13. signal system DKL German special police	977
14. signal system DKL German special police	978
15. Signal system Topas	979
16. Signal system Topas	980
17. Signal system Topas	981
18. Signal system Topas	982
19. Signal system RTK 6	983
20. Signal system RTK 6	984
21. Signal system RTK 6	985
22. Signal system RTK 6	986
23. Radio frequency range NEF civil	987
103 - Special vehicle	988-1000
1. Special vehicle	988
2. Special vehicle control unit, fuses	989
3. Special vehicle control unit, terminal 15 voltage supply relay	990
4. Special vehicle control unit, two-way radio button, two-way radio, two-way radio loudspeaker	991
5. Special vehicle control unit, personal danger alarm control unit	992
6. Special vehicle control unit, personal danger alarm control unit, special signals switch (variable siren), blue emergency light button, alarm system switch, personal danger alarm button 1 (on), switch to trip alarm, intercom switch	993
7. Special vehicle control unit, personal danger alarm control unit, alarm trip switch in luggage compartment, special signal system switch	994
8. Personal danger alarm control unit, front left loudspeaker, external loudspeaker, microphone for special signals	995
9. Special vehicle control unit, personal danger alarm control unit, rotating light bulb, alternating pitch switch for personal danger alarm	996
10. Personal danger alarm control unit, microphone in left and right exterior mirror	997
11. Special vehicle control unit, smoke extractor switch, luggage compartment light on left, supply smoke extractor	998
12. Individualisation	999
13. Signal system	1000
104 - Convenience system	1001-1031
1. Convenience system	1001
2. Driver door control unit, fuses	1002
3. Driver door control unit, driver door exterior handle central locking button, driver door exterior handle switch, driver door exterior handle touch sensor	1003
4. Driver door control unit, driver side central locking lock unit, driver door contact switch, driver door central locking motor	1004
5. Driver door control unit, front left and right window regulator switch in driver door, rear left and right window regulator switch, in driver door	1005
6. Driver door control unit, driver side window regulator motor, button for left and right childproof lock	1006
7. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, adjustment switch for mirror with fold-in feature, interior monitoring deactivation switch, alarm system off switch	1007
8. Driver door control unit, driver side mirror adjustment motor, driver side fold-in mirror motor, driver side heated exterior mirror, driver side entry light in exterior mirror, driver side automatic anti-dazzle exterior mirror	1008
9. Driver door control unit, driver side interior locking switch, driver door control unit, front left entry light, central locking deadlock function warning lamp	1009
10. Driver door control unit, driver door ambient lighting, fuel tank flap release button, rear lid remote release button	1010
11. Driver door control unit, driver seat memory operating unit, emergency-off button	1011
12. Front passenger door control unit	1012
13. Front passenger door control unit, front passenger door exterior handle central locking button, front passenger door exterior handle switch, front passenger door exterior handle touch sensor	1013
14. Front passenger door control unit, front passenger door contact switch, front passenger side central locking lock unit, front passenger door central locking deadlock function motor	1014
15. Front passenger door control unit, window regulator switch in front passenger door, front passenger side interior locking switch	1015

16. Front passenger door control unit, front passenger side window regulator motor, front passenger door ambient lighting, front right entry light, front passenger side door warning lamp, front right door exterior handle illumination bulb	1016
17. Front passenger door control unit, front passenger side mirror adjustment, front passenger side fold-in mirror motor, front passenger side entry light in exterior mirror, front passenger side automatic anti-dazzle exterior mirror, front passenger side heated exterior mirror	1017
18. Front passenger door control unit, front passenger seat memory operating unit, front passenger side emergency off button	1018
19. Rear left door control unit	1019
20. Rear left door control unit, rear left door exterior handle central locking button, rear left door exterior handle switch, rear left door exterior handle touch sensor	1020
21. Rear left door control unit, rear left central locking lock unit, rear left door central locking motor, rear left door contact switch, rear left door central locking deadlock function motor	1021
22. Rear left door control unit, rear left window regulator switch, in door, rear left ashtray illumination bulb, rear left window regulator motor	1022
23. Rear left door control unit, rear left interior locking switch, rear left door opener illumination bulb, rear left door ambient lighting bulb, rear left entry light, rear left door warning lamp	1023
24. Rear right door control unit, rear right door exterior door handle touch sensor	1024
25. Rear right door control unit, rear right door exterior handle central locking button, rear right central locking actuator, rear right central locking lock unit, rear right door exterior handle switch, rear right childproof lock motor	1025
26. Rear right door control unit, rear right window regulator switch, in door, rear right ashtray illumination bulb, rear right window regulator motor	1026
27. Rear right door control unit, rear right door ambient lighting bulb, rear right entry light, rear right door warning lamp, rear right door opener illumination bulb, rear right interior locking switch	1027
28. Convenience system central control unit, fuses	1028
29. Convenience system central control unit, rear lid contact switch for anti-theft alarm, release button for rear lid lock cylinder	1029
30. Convenience system central control unit, luggage compartment light, rear left and right footwell light, alarm horn, rear roller blind motor, interior monitoring sensor	1030
31. Onboard supply control unit, bonnet contact switch, left and right footwell light, rear roller blind switch	1031
105 - Preparation for mobile telephone (9ZD)	1032-1034
1. Preparation for mobile telephone (9ZD)	1032
2. Preparation for mobile telephone	1033
3. Preparation for mobile telephone	1034
106 - Audi A6 2.8 I Fuel injection engine (154 kW - 6 cylinder), engine code BDX	1035-1056
1. Audi A6 2.8 I Fuel injection engine (154 kW - 6 cylinder), engine code BDX	1035
2. Battery, energy management control unit, fuses	1036
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	1037
4. Engine control unit, Motronic current supply relay	1038
5. Engine control unit, CAN disconnecter	1039
6. Engine control unit, injector for cylinders 1 - 3, ignition coils 1 - 3 with output stage	1040
7. Engine control unit, injector for cylinders 4 - 6, ignition coils 4 - 6 with output stage	1041
8. Engine control unit, actuator 1 up to 6 for camshaft adjustment	1042
9. Engine control unit, actuator 7 up to 12 for camshaft adjustment	1043
10. Engine control unit, additional coolant pump relay, inlet camshaft control valve, exhaust camshaft control valve	1044
11. Engine control unit, accelerator position sender, throttle valve module, fuel system diagnostic pump	1045
12. Engine control unit, engine speed sender, coolant temperature sender, knock sensors	1046
13. Engine control unit, Hall sender	1047
14. Engine control unit, intake air temperature sender, intake manifold pressure sender, fuel pressure sender for low pressure, fuel pressure sender, variable intake manifold position sender	1048
15. Engine control unit, engine component current supply relay, oil pressure switch, oil pressure switch for reduced oil pressure	1049
16. Engine control unit, activated charcoal filter solenoid valve 1, variable intake manifold change-over valve, fuel metering valve, left and right electrohydraulic engine mounting solenoid valve, valve for oil pressure control	1050
17. Engine control unit, lambda probes after catalytic converter	1051
18. Engine control unit, lambda probe, lambda probe 2, clutch pedal switch for engine start	1052
19. Engine control unit, brake light switch, brake light switch, brake pedal switch	1053
20. Engine control unit, clutch position sender	1054
21. Engine control unit, fuel pump control unit, radiator fan	1055

22. Control unit in dash panel insert, fuel gauge sender, fuel system pressurisation pump, fuel gauge sender 2, coolant shortage indicator switch, oil level and oil temperature sender	1056
107 - Communication Japan (8DZ, 7Q6, QV1, 7D0)	1057-1070
1. Communication Japan (8DZ, 7Q6, QV1, 7D0)	1057
2. Data bus diagnostic interface, fuses	1058
3. Data bus diagnostic interface	1059
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button	1060
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	1061
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	1062
7. Front information display and operating unit control unit, navigation system with CD drive control unit	1063
8. Navigation system with CD drive control unit, telephone transmitter and receiver unit, telephone bracket	1064
9. Navigation system with CD drive control unit, traffic data aerial, chip card reader control unit	1065
10. Navigation system with CD drive control unit, traffic data aerial, navigation system aerial, chip card reader control unit	1066
11. Media player in position 1, connection for external audio source, fuses	1067
12. Connection for external audio source, fuses	1068
13. Radio, TV tuner	1069
14. TV tuner, aerial amplifier, aerial amplifier 2, TV card reader	1070
108 - Lane departure warning	1071-1073
1. Lane departure warning	1071
2. Lane departure warning control unit, windscreen heater for lane departure warning, fuse	1072
3. Data bus diagnostic interface, steering column electronics control unit, lane departure warning button, steering wheel vibration motor	1073
109 - Audi RS6 5.0 I Fuel injection engine (426 kW - 10 cylinder), engine code BUH	1074-1102
1. Audi RS6 5.0 I Fuel injection engine (426 kW - 10 cylinder), engine code BUH	1074
2. Battery, energy management control unit, battery monitor control unit, fuses	1075
3. Battery isolation igniter, fuses	1076
4. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	1077
5. Engine control unit, Motronic current supply relay	1078
6. Engine control unit	1079
7. Engine control unit, injector cylinder 1 up to 4, ignition coil 1 up to 4 with output stage	1080
8. Engine control unit, injector, cylinder 5, ignition coil 5 with output stage	1081
9. Engine control unit, throttle valve module, accelerator position sender	1082
10. Engine control unit, Hall sender, knock sensors	1083
11. Engine control unit, intake air temperature sender, fuel pressure sender, intake manifold pressure sender, intake manifold flap potentiometer	1084
12. Engine control unit, engine speed sender, charge air pressure sender, coolant temperature sender	1085
13. Engine control unit, fuel pressure sender for low pressure, charge pressure control solenoid valve, active charcoal filter system solenoid valve 1, secondary air inlet valve, right electrohydraulic engine mounting solenoid valve, fuel metering valve	1086
14. Engine control unit, secondary air pump relay, turbocharger air recirculation valve	1087
15. Engine control unit, inlet camshaft control valve 1, exhaust camshaft control valve 1, intake manifold flap valve, fuel system diagnostic pump	1088
16. Engine control unit, continued coolant circulation relay, engine component current supply relay	1089
17. Engine control unit, lambda probe, lambda probe after catalytic converter	1090
18. Engine control unit, brake light switch, brake pedal switch	1091
19. Engine control unit, radiator fan control unit, radiator fan	1092
20. Engine control unit, engine control unit 2, CAN bus wiring	1093
21. Engine control unit 2, throttle valve module 2	1094
22. Engine control unit 2, injectors cylinder 6 up to 9, ignition coils 6 up to 9 with output stage	1095
23. Engine control unit 2, injector, cylinder 10, ignition coil 10 with output stage, air conditioner compressor regulating valve	1096
24. Engine control unit 2, Hall sender, knock sensors	1097
25. Engine control unit 2, intake manifold flap 2 potentiometer, exhaust camshaft control valve 2, exhaust camshaft control valve 2, fuel pressure sender 2	1098
26. Engine control unit 2, additional coolant pump relay, radiator fan 3 relay, charge air pressure sender 2, left electrohydraulic engine mounting solenoid valve, charge pressure control solenoid valve 2, fuel metering valve 2	1099
27. Engine control unit 2, lambda probe 2, lambda probe 2 after catalytic converter, fuel pump relay	1100
28. Fuel pump control unit, control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender. fuel gauge. fuel gauge sender 2	1101

29. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil level and oil temperature sender, oil pressure switch, coolant shortage indicator switch	1102
110 - Audi RS6 - shock absorber damping system	1103-1106
1. Audi RS6 - shock absorber damping system	1103
2. Electronically controlled damping control unit, fuses	1104
3. Controlled damping control unit, front left shock absorber damper adjustment valve, front right shock absorber damper adjustment valve	1105
4. Controlled damping control unit, rear left shock absorber damper adjustment valve, rear right shock absorber damper adjustment valve	1106
111 - Audi RS6 - headlight for gaseous discharge light (Bixenon) and automatic headlight range control	1107-1112
1. Audi RS6 - headlight for gaseous discharge light (Bixenon) and automatic headlight range control	1107
2. Onboard power supply control unit, fuses	1108
3. Light switch, hazard warning lights button	1109
4. Onboard supply control unit, left headlight	1110
5. Onboard supply control unit, right headlight	1111
6. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	1112
112 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (TT7),(T8E)	1113-1118
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (TT7),(T8E)	1113
2. Onboard supply control unit, Fuse holder B	1114
3. Light switch, Onboard supply control unit	1115
4. Left swivel module position sensor, Left gas discharge bulb control unit, Onboard supply control unit, Output module for left headlight, Left gas discharge (xenon) bulb, Left fog light bulb, Left daytime running light bulb, Left side light bulb, Fron left turn signal bulb, Left headlight screen adjustment solenoid, Left headlight range control motor, Left dynamic cornering light control motor	1116
5. Right swivel module position sensor, Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Right gas discharge (xenon) bulb, Right fog light bulb, Right daytime running light bulb, Right side light bul , Front right turn signal bulb, Right headlight screen adjustment solenoid, Right headlight range control motor, Right dynamic cornering light control motor	1117
6. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit	1118
113 - Basic equipment	1119-1152
1. Basic equipment	1119
2. Battery, battery monitor control unit, suppression filter	1120
3. Terminal 15 voltage supply relay, terminal 75x voltage supply relay	1121
4. Entry and start authorisation switch, entry and start authorisation control unit, fuses	1122
5. Entry and start authorisation switch, entry and start authorisation control unit, entry and start authorisation button	1123
6. Entry and start authorisation switch, entry and start authorisation control unit	1124
7. Steering column electronics control unit, horn plate, intermittent wiper switch, turn signal switch, headlight flasher switch	1125
8. Steering column electronics control unit, cruise control system switch, steering angle sender	1126
9. Onboard power supply control unit, fuses	1127
10. Onboard supply control unit, light switch, hazard warning lights button	1128
11. Onboard supply control unit, left headlight	1129
12. Onboard supply control unit, right headlight	1130
13. Onboard supply control unit, fog light bulb, headlight range control regulator	1131
14. Onboard supply control unit, treble tone horn, bass tone horn, dual tone horn relay, reversing light switch	1132
15. Convenience system central control unit, fuses	1133
16. Convenience system central control unit, left tail light	1134
17. Convenience system central control unit, right tail light	1135
18. Convenience system central control unit, number plate light, heated rear window relay, high level brake light bulb, heated rear window, tank filler flap locking motor	1136
19. Convenience system central control unit, brake light switch	1137
20. Convenience system central control unit, luggage compartment light, rear left and right footwell light, glove compartment light switch, glove compartment light, rear roller blind motor	1138
21. Wiper motor control unit, light/rain sensor, washer jet heater element, headlight washer system pump, washer pump	1139
22. Onboard supply control unit 2, servotronic solenoid valve	1140
23. Onboard supply control unit 2, glove compartment release motor, glove compartment button, displav unit button. valet parking button	1141

24. Diagnostic connector	1142
25. Control unit in dash panel insert, data bus diagnostic interface	1143
26. Control unit in dash panel insert, data bus diagnostic interface	1144
27. Control unit in dash panel insert, front brake pad wear sender, oil pressure switch, brake fluid level warning contact, oil level and oil temperature sender	1145
28. Control unit in dash panel insert, ambient temperature sensor, coolant shortage indicator switch, windscreen washer fluid level sender	1146
29. Control unit in dash panel insert, radio controlled clock, radio controlled clock receiver, handbrake warning lamp	1147
30. Control unit in dash panel insert, fuel gauge, fuel gauge sender 2, ashtray illumination bulb, cup holder illumination bulb	1148
31. Driver and front passenger side illuminated vanity mirror, driver and front passenger side vanity mirror contact switch	1149
32. Rear interior light switch , rear left and right interior light, automatic anti-dazzle interior mirror	1150
33. Automatic anti-dazzle interior mirror, driver and front passenger side reading light, sliding sunroof adjustment regulator	1151
34. Rear roller blind switch, cigarette lighter, rear cigarette lighter	1152
114 - Audi A6 2.0 I - TDI, Common Rail (100 kW - 4-cylinder), engine code CAGB	1153-1168
1. Audi A6 2.0 I - TDI, Common Rail (100 kW - 4-cylinder), engine code CAGB	1153
2. Battery, battery monitor control unit, fuses	1154
3. Starter, alternator, starter motor relay, terminal 15 voltage supply relay	1155
4. Automatic glow period control unit, glow plugs fuse, glow plugs	1156
5. Engine control unit, terminal 30 voltage supply relay	1157
6. Engine control unit, clutch pedal switch for engine start	1158
7. Engine control unit, injector cylinder 1 up to 4, exhaust gas recirculation cooler motor	1159
8. Engine control unit, relay for supplementary fuel pump, charge air pressure sender, accelerator position sender, exhaust gas pressure sensor 1, intake air temperature sender	1160
9. Engine control unit, Hall sender, left electrohydraulic engine mounting solenoid valve, charge pressure control solenoid valve, intake manifold flap potentiometer	1161
10. Engine control unit, air mass meter, reversing light switch	1162
11. Engine control unit, engine speed sender, fuel temperature sender, exhaust gas recirculation potentiometer, throttle valve potentiometer	1163
12. Engine control unit, position sender for charge pressure positioner, coolant temperature sender, exhaust temperature sender, lambda probe	1164
13. Engine control unit, brake light switch, brake pedal switch, clutch position sender	1165
14. Engine speed sender, radiator fan control unit, low heat output relay, high heat output relay, radiator fan	1166
15. Fuel pump relay, fuel gauge sender, fuel gauge, fuel pump, fuel gauge sender 2	1167
16. Control unit in dash panel insert, oil pressure switch, oil level and oil temperature sender, coolant shortage indicator switch	1168
115 - Audi A6 2.7 I - TDI, Common Rail (120 kW - 6-cylinder), engine codes CANB, CAND	1169-1184
1. Audi A6 2.7 I - TDI, Common Rail (120 kW - 6-cylinder), engine codes CANB, CAND	1169
2. Battery, battery monitor control unit, fuses	1170
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	1171
4. Automatic glow period control unit, glow plug fuse, glow plugs	1172
5. Engine control unit, terminal 30 voltage supply relay	1173
6. Engine control unit, fuses, clutch pedal switch for engine start	1174
7. Engine control unit, injector, cylinder 1 up to 6, coolant temperature sender, fuel temperature sender, fuel pressure sender, Hall sender	1175
8. Engine control unit, throttle valve module, exhaust gas recirculation cooler changeover valve, air filter bypass flap valve, engine speed sender, electro-hydraulic engine mounting solenoid valve	1176
9. Engine control unit, turbocharger 1 control unit, charge air pressure sender, intake air temperature sender, exhaust gas recirculation control motor	1177
10. Engine control unit, fuel pressure regulating valve, fuel metering valve	1178
11. Engine control unit, brake light switch, brake pedal switch, clutch position sender	1179
12. Engine control unit, relay for supplementary fuel pump, exhaust gas pressure sensor 1, intake manifold flap motor, supplementary fuel pump	1180
13. Engine control unit, exhaust gas temperature sender, lambda probe, exhaust gas pressure sensor 1, accelerator position sender	1181
14. Engine control unit, low heat output relay, high heat output relay, radiator fan, auxiliary heating heater element, fuses	1182
15. Fuel pump relay, control unit in dash panel insert, fuel pump, fuel gauge sender, fuel gauge, fuel gauge sender 2	1183
16. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp. oil pressure switch. coolant shortage indicator switch. oil level and oil	1184

temperature sender	
116 - Audi A6 3.0 I - Fuel injection engine (213 kW - Motronic - 6 cylinder), engine code CAJA, CCAA	1185-1204
1. Audi A6 3.0 I - Fuel injection engine (213 kW - Motronic - 6 cylinder), engine code CAJA, CCAA	1185
2. Battery, battery monitor control unit, fuses	1186
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	1187
4. Engine control unit, Motronic current supply relay	1188
5. Engine control unit, CAN disconnecter, earth connections	1189
6. Engine control unit, injectors cylinder 1 - 4, ignition coils 1 up to 4 with output stage	1190
7. Engine control unit, injectors for cylinders 5 and 6, ignition coils 5 and 6 with output stage, accelerator pedal position sender, throttle valve module	1191
8. Engine control unit, engine speed sender, coolant temperature sender, knock sensors	1192
9. Engine control unit, Hall sender, charge air pressure sender, intake manifold temperature sender	1193
10. Engine control unit, intake air temperature sender, intake manifold pressure sender, fuel pressure sender, fuel pressure sender for low-pressure	1194
11. Engine control unit, intake manifold flap potentiometer, sender 1 for secondary air pressure, regulating flap control unit	1195
12. Engine control unit, activated charcoal filter system solenoid valve 1, secondary air inlet valve, electrohydraulic engine mounting solenoid valve, inlet camshaft control valve, fuel metering valve, secondary air inlet valve 2	1196
13. Engine control unit, additional coolant pump relay, valve for oil pressure control, continued coolant circulation pump, fuel system diagnostic pump	1197
14. Engine control unit, secondary air pump relay, engine component current supply relay, secondary air pump motor, oil pressure switch, oil pressure switch for reduced oil pressure	1198
15. Engine control unit, lambda probe, lambda probe 2	1199
16. Engine control unit, Lambda probes after catalytic converter	1200
17. Engine control unit, brake light switch, brake pedal switch	1201
18. Engine control unit, radiator fan	1202
19. Fuel pump control unit, control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge	1203
20. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, coolant shortage indicator switch, oil level and oil temperature sender	1204
117 - Audi A6 2.8 I Fuel injection engine (140 kW - 6 cylinder), engine code CCDA	1205-1226
1. Audi A6 2.8 I Fuel injection engine (140 kW - 6 cylinder), engine code CCDA	1205
2. Battery, battery monitor control unit, fuses	1206
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	1207
4. Engine control unit, Motronic current supply relay	1208
5. Engine control unit, CAN disconnecter	1209
6. Engine control unit, injectors cylinder 1 up to 3, ignition coils 1 up to 3 with output stage	1210
7. Engine control unit, injectors cylinder 4 up to 6, ignition coils 4 up to 6 with output stage	1211
8. Engine control unit, actuator 1 up to 6 for camshaft adjustment	1212
9. Engine control unit, actuator 7 up to 12 for camshaft adjustment	1213
10. Engine control unit, additional coolant pump relay, inlet camshaft control valve, exhaust camshaft control valve	1214
11. Engine control unit, accelerator position sender, throttle valve module, fuel system diagnostic pump	1215
12. Engine control unit, engine speed sender, coolant temperature sender, knock sensors	1216
13. Engine control unit, Hall sender	1217
14. Engine control unit, intake air temperature sender, intake manifold pressure sender, fuel pressure sender for low pressure, fuel pressure sender, variable intake manifold position sender	1218
15. Engine control unit, engine component current supply relay, oil pressure switch, oil pressure switch for reduced oil pressure	1219
16. Engine control unit, activated charcoal filter solenoid valve 1, variable intake manifold change-over valve, fuel metering valve, left and right electrohydraulic engine mounting solenoid valve, valve for oil pressure control	1220
17. Engine control unit, lambda probes after catalytic converter	1221
18. Engine control unit, lambda probe, lambda probe 2, clutch pedal switch for engine start	1222
19. Engine control unit, secondary air pump relay, brake light switch, brake pedal switch	1223
20. Engine control unit, clutch position sender	1224
21. Engine control unit, fuel pump control unit, radiator fan	1225
22. Control unit in dash panel insert, fuel gauge sender, fuel system pressurisation pump, fuel gauge sender 2, coolant shortage indicator switch, oil level and oil temperature sender	1226
118 - 4.2l petrol engine , BVJ,CDR	1227-1248
1. 4.2l petrol engine , BVJ,CDR	1227
2. Airbag control unit, Battery monitor control unit, Battery isolation igniter	1228
3. Starter, Alternator, Suppression filter, Starter motor relay, Terminal 15 voltage supply relay	1229
4. Main relav. Engine control unit	1230

5. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1231
6. Engine control unit, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage	1232
7. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 6, Injector, cylinder 8	1233
8. Engine control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 7	1234
9. Knock sensor 1, Knock sensor 2, Knock sensor 3, Knock sensor 4, Engine control unit	1235
10. Hall sender, Hall sender 3, Intake manifold flap potentiometer, Intake manifold flap potentiometer 2, Engine control unit	1236
11. Engine speed sender, Coolant temperature sender, Air mass meter, Hall sender 2, Fuel pressure sender, Engine control unit	1237
12. Brake servo pressure sensor, Hall sender 4, Fuel pressure sender for low-pressure, Engine control unit	1238
13. Accelerator position sender, Throttle valve module, Engine control unit	1239
14. Lambda probe, Lambda probe 2, Engine control unit, 6-pin connector, Lambda probe heater, Lambda probe heater 2	1240
15. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Variable intake manifold changeover valve, Fuel metering valve 2, Lambda probe 1 heater after catalytic converter, Lambda probe 2 heater after catalytic converter	1241
16. Secondary air pump relay, Engine control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Secondary air pump fuse, Secondary air pump motor, Fuel system diagnostic pump	1242
17. Map-controlled engine cooling system thermostat, Continued coolant circulation relay, Engine control unit, Variable intake manifold changeover valve, Camshaft control valve 1, Camshaft control valve 2, Variable intake manifold changeover valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2	1243
18. Brake servo relay, Engine control unit, Vacuum pump for brakes	1244
19. Brake light switch, Brake pedal switch, Engine control unit	1245
20. Radiator fan control unit, Engine control unit, Radiator fan control unit 2, Engine component current supply relay, Radiator fan, Radiator fan 2	1246
21. Fuel gauge sender, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit, Engine control unit	1247
22. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, Control unit in dash panel insert, Oil pressure warning lamp, Coolant temperature and coolant shortage warning lamp, Display in dash panel insert	1248
119 - Audi A6 2.0 I Fuel injection engine (125 kW - 4 cylinder), engine code BPJ	1249-1265
1. Audi A6 2.0 I Fuel injection engine (125 kW - 4 cylinder), engine code BPJ	1249
2. Battery, battery monitor control unit, battery isolation igniter, fuses	1250
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	1251
4. Engine control unit, Motronic current supply relay, engine component current supply relay	1252
5. Engine control unit	1253
6. Engine control unit, injectors cylinder 1 up to 4, ignition coils 1 up to 4 with output stage	1254
7. Engine control unit, accelerator position sender, air mass meter, throttle valve module	1255
8. Engine control unit, charge air pressure sender, fuel pressure sender for low pressure, intake manifold flap potentiometer, intake manifold flap motor	1256
9. Engine control unit, coolant temperature sender, intake air temperature sender, fuel pressure sender, Hall sender	1257
10. Engine control unit, Hall sender 2, knock sensors	1258
11. Engine control unit, active charcoal filter system solenoid valve 1, inlet camshaft control valve 1, charge pressure control solenoid valve	1259
12. Engine control unit, lambda probe, lambda probe after catalytic converter	1260
13. Engine control unit, brake light switch, brake light switch, brake pedal switch	1261
14. Engine control unit, clutch position sender, clutch pedal switch for engine start	1262
15. Engine control unit, radiator fan	1263
16. Control unit in dash panel insert, fuel gauge sender 2, fuel pump control unit, fuel gauge sender, fuel gauge, fuel system pressurisation pump	1264
17. Control unit in dash panel insert, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender	1265
120 - MMI (information electronics I) (8DN, 8DP, 8DY, 8DS, 8YQ, UF7, 7T6, 7T2)	1266-1273
1. MMI (information electronics I) (8DN, 8DP, 8DY, 8DS, 8YQ, UF7, 7T6, 7T2)	1266
2. Data bus diagnostic interface, fuses	1267
3. Data bus diagnostic interface	1268
4. Control unit 1 for information electronics. fuses	1269

5. Control unit for information electronics 1, multimedia system operating unit, glove compartment button, display unit button	1270
6. Control unit for information electronics 1, connection for external audio source	1271
7. Control unit for information electronics 1, display unit for front information display and operating unit control unit, connection for external audio source	1272
8. Control unit for information electronics 1, roof aerial	1273
121 - MMI with radio and soundsystem BOSE (8RY)	1274-1282
1. MMI with radio and soundsystem BOSE (8RY)	1274
2. Digital sound package control unit, fuses	1275
3. Digital sound package control unit, front left treble loudspeaker, front left bass loudspeaker, front left mid-range loudspeaker, loudspeaker in rear shelf	1276
4. Digital sound package control unit, front right treble loudspeaker, front right bass loudspeaker, front right mid-range loudspeaker, centre mid-range and treble loudspeaker	1277
5. Digital sound package control unit, rear left and right treble loudspeaker, rear left and right mid-range and bass loudspeaker	1278
6. Digital sound package control unit, internal microphone, microphone unit in front roof module	1279
7. Radio, voltage supply	1280
8. Radio, aerial amplifier 2, aerial amplifier	1281
9. Radio, roof aerial, aerial amplifier 3	1282
122 - MMI with radio and soundsystem standard (9VD)	1283-1288
1. MMI with radio and soundsystem standard (9VD)	1283
2. Radio, fuses	1284
3. Radio, front left and right bass loudspeaker, front left mid-range loudspeaker, front left treble loudspeaker	1285
4. Radio, front right mid-range loudspeaker, rear left and right mid-range and bass loudspeaker, treble loudspeaker	1286
5. Radio, aerial amplifier, aerial amplifier 2, aerial, radio aerial 2	1287
6. Radio, aerial amplifier 3, roof aerial	1288
123 - MMI with radio and soundsystem Basic (8RX)	1289-1294
1. MMI with radio and soundsystem Basic (8RX)	1289
2. Radio, fuses	1290
3. Radio, front left mid-range loudspeaker, front left treble loudspeaker	1291
4. Radio, front right mid-range loudspeaker, rear left and right mid-range and bass loudspeaker, treble loudspeaker	1292
5. Radio, aerial amplifier, aerial amplifier 2, aerial, radio aerial 2	1293
6. Radio, aerial amplifier 3, roof aerial	1294
124 - MMI (information electronics I) with integrated Bluetooth car phone (9ZW)	1295-1298
1. MMI (information electronics I) with integrated Bluetooth car phone (9ZW)	1295
2. Control unit for information electronics 1, voltage supply	1296
3. Control unit 1 for information electronics, microphone unit in front roof module, roof aerial, aerial for Bluetooth	1297
4. Control unit 1 for information electronics, telephone brackets	1298
125 - MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZF)	1299-1302
1. MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZF)	1299
2. Control unit for information electronics 1, voltage supply	1300
3. Control unit 1 for information electronics, telephone bracket, microphone unit in front roof module, aerial for Bluetooth	1301
4. Telephone brackets, aerial amplifier for mobile telephone	1302
126 - MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZG)	1303-1306
1. MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZG)	1303
2. Control unit for information electronics 1, voltage supply	1304
3. Control unit 1 for information electronics, telephone bracket, microphone unit in front roof module, aerial for Bluetooth	1305
4. Telephone bracket, roof aerial, telephone aerial, navigation system aerial, satellite aerial	1306
127 - Convenience system	1307-1339
1. Convenience system	1307
2. Driver door control unit, fuses	1308
3. Driver door control unit, driver door exterior handle central locking button, driver door exterior handle switch, driver door exterior handle touch sensor	1309
4. Driver door control unit, driver side central locking lock unit, driver door contact switch, driver door central locking motor, driver door power latching motor	1310
5. Driver door control unit. front left and right window regulator switch in driver door. rear left	1311

and right window regulator switch, in driver door	
6. Driver door control unit, driver side window regulator motor, button for left and right childproof lock	1312
7. Driver door control unit, mirror adjustment switch, mirror adjustment change-over switch, adjustment switch for mirror with fold-in feature, interior monitoring deactivation switch, alarm system off switch	1313
8. Driver door control unit, driver side mirror adjustment motor, driver side fold-in mirror motor, driver side automatic anti-dazzle exterior mirror	1314
9. Driver door control unit, lane change assist warning lamp in driver side exterior mirror, driver side exterior mirror turn signal bulb, driver side entry light in exterior mirror, driver side heated exterior mirror	1315
10. Driver door control unit, driver side interior locking switch, driver door control unit, front left entry light, central locking deadlock function warning lamp	1316
11. Driver door control unit, driver door ambient lighting bulb, fuel tank flap release button, rear lid remote release button	1317
12. Driver door control unit, driver seat memory operating unit, emergency-off button	1318
13. Front passenger door control unit	1319
14. Front passenger door control unit, front passenger door exterior handle central locking button, front passenger door exterior handle switch, front passenger door exterior handle touch sensor	1320
15. Front passenger door control unit, front passenger door contact switch, front passenger side central locking lock unit, front passenger door central locking deadlock function motor, front passenger door power latching motor	1321
16. Front passenger door control unit, window regulator switch in front passenger door, front passenger side interior locking switch	1322
17. Front passenger door control unit, front passenger side window regulator motor, front passenger door ambient lighting bulb, front right entry light, front passenger side door warning lamp, front right door exterior handle illumination bulb	1323
18. Front passenger door control unit, front passenger side mirror adjustment motor, front passenger side fold-in mirror motor, front passenger side automatic anti-dazzle exterior mirror	1324
19. Front passenger door control unit, lane change assist warning lamp in front passenger side exterior mirror, front passenger side exterior mirror turn signal bulb, front passenger side entry light in exterior mirror, front passenger side heated exterior mirror	1325
20. Front passenger door control unit, front passenger seat memory operating unit, front passenger side emergency off button	1326
21. Rear left door control unit	1327
22. Rear left door control unit, rear left door exterior handle central locking button, rear left door exterior handle switch, rear left door exterior handle touch sensor	1328
23. Rear left door control unit, rear left central locking lock unit, rear left door central locking motor, rear left door contact switch, rear left door central locking deadlock function motor, rear left door power latching motor	1329
24. Rear left door control unit, rear left window regulator switch, in door, rear left ashtray illumination bulb, rear left window regulator motor	1330
25. Rear left door control unit, rear left interior locking switch, rear left door opener illumination bulb, rear left door ambient lighting bulb, rear left entry light, rear left door warning lamp	1331
26. Rear right door control unit, rear right door exterior door handle touch sensor, rear right door exterior handle central locking button, rear right door exterior handle switch	1332
27. Rear right door control unit, rear right central locking actuator, rear right central locking lock unit, rear right childproof lock motor, rear right power latching motor	1333
28. Rear right door control unit, rear right window regulator switch, in door, rear right ashtray illumination bulb, rear right window regulator motor	1334
29. Rear right door control unit, rear right door ambient lighting bulb, rear right entry light, rear right door warning lamp, rear right door opener illumination bulb, rear right interior locking switch	1335
30. Convenience system central control unit, rear roller blind motor, fuses	1336
31. Convenience system central control unit, rear lid contact switch for anti-theft alarm, release button for rear lid lock cylinder	1337
32. Convenience system central control unit, luggage compartment light, rear left and right footwell light, alarm horn, rear roller blind motor, interior monitoring sensor	1338
33. Onboard supply control unit, bonnet contact switch, left and right footwell light, rear roller blind switch	1339
128 - Infotainment data bus (Most-Ring)	1340-1341
1. Infotainment data bus (Most-Ring)	1340
2. MMI generation 3	1341
129 - Ringbreak diagnosis	1342-1343
1. Ringbreak diagnosis	1342

2. Ringbreak diagnosis	1343
130 - Avant, rear	1344-1365
1. Avant, rear	1344
2. Voltage supply, fuses	1345
3. Fuses	1346
4. Convenience system central control unit, power latching control unit, rear lid lock motor	1347
5. Convenience system central control unit, left tail light Lowline	1348
6. Convenience system central control unit, right tail light Lowline	1349
7. Convenience system central control unit, left tail light Highline	1350
8. Convenience system central control unit, right tail light Highline	1351
9. Convenience system central control unit, left tail light USA	1352
10. Convenience system central control unit, left tail light and right USA	1353
11. Convenience system central control unit, heated rear window relay, high level brake light bulb, number plate light	1354
12. Convenience system central control unit, button to close rear lid in luggage compartment, luggage compartment light, rear lid light	1355
13. Convenience system central control unit, rear lid contact switch for anti-theft alarm, release button for rear lid lock cylinder, rear left and right side window glass breakage sensor, glass breakage sensor for rear window, rear lid central locking mo or	1356
14. Convenience system central control unit, rear lid control unit, rear lid electric release motor	1357
15. Convenience system central control unit, alarm horn, interior monitoring sensor	1358
16. Rear window wiper motor, windscreen and rear window washer pump	1359
17. Digital sound package control unit, rear left and right D-pillar mid-range loudspeaker	1360
18. Front information display and operating unit control unit, TV tuner, fuses	1361
19. TV tuner, TV aerial 1 up to 3, aerial amplifier 1 for TV, aerial amplifier 2 and 3	1362
20. Radio, aerial amplifier, central locking and anti-theft alarm system aerial	1363
21. Radio, aerial amplifier 4	1364
22. Radio, roof aerial	1365
131 - Airbag systems	1366-1372
1. Airbag systems	1366
2. Airbag control unit, Battery isolation igniter	1367
3. Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Airbag igniter 2 on front passenger side, Airbag igniter 2 on driver side	1368
4. Airbag control unit, Side airbag igniter on driver side, Rear side airbag igniter on passenger side	1369
5. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter	1370
6. Side airbag crash sensor on driver side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Airbag control unit	1371
7. Driver side belt switch, Front passenger side belt switch, Key operated switch to deactivate airbag on front passenger side, Seat occupied sensor, front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	1372
132 - Airbag systems (US equipment)	1373-1379
1. Airbag systems (US equipment)	1373
2. Airbag control unit, Battery isolation igniter	1374
3. Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 1, Front passenger side airbag igniter 2, Driver side airbag igniter 2	1375
4. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Rear side airbag igniter on driver side, Rear side airbag igniter on front passenger side	1376
5. Driver side belt force limiter, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1377
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	1378
7. Driver side belt switch, Front passenger side belt switch, Airbag control unit, Seat occupied recognition control unit, Front passenger side airbag deactivated warning lamp	1379
133 - Gas discharge headlights with automatic headlight range control	1380-1385
1. Gas discharge headlights with automatic headlight range control	1380
2. Onboard supply control unit, Fuse holder B	1381
3. Light switch, Hazard warning lights button, Onboard supply control unit, Left fog light bulb, Right fog light bulb	1382
4. Left gas discharge bulb control unit, Onboard supply control unit	1383
5. Right gas discharge bulb control unit. Onboard supply control unit	1384

6. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit	1385
134 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	1386-1391
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light	1386
2. Onboard supply control unit, Fuse holder B	1387
3. Light switch, Onboard supply control unit, Left fog light bulb, Right fog light bulb	1388
4. Left gas discharge bulb control unit, Onboard supply control unit, Output module for left headlight, Front left headlight	1389
5. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Front right headlight	1390
6. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit	1391
135 - CAN disconnecter	1392-1402
1. CAN disconnecter	1392
2. CAN disconnecter left	1393
3. CAN disconnecter left	1394
4. CAN disconnecter left	1395
5. CAN disconnecter left	1396
6. CAN disconnecter right	1397
7. CAN disconnecter right	1398
8. CAN disconnecter right	1399
9. CAN disconnecter right	1400
10. Connection 1 (convenience CAN bus, high), connection 1 (convenience CAN bus, low)	1401
11. Connection 1 (extended CAN bus, high), connection 1 (extended CAN bus, low)	1402
136 - Adaptive cruise control (ACC)	1403-1404
1. Adaptive cruise control (ACC)	1403
2. Adaptive cruise control unit, sensor heater for adaptive cruise control system	1404
137 - Electric tyre pressure monitor positive (7K6)	1405-1407
1. Electric tyre pressure monitor positive (7K6)	1405
2. Tyre pressure monitor control unit, fuses	1406
3. Tyre pressure monitor control unit, ABS control unit	1407
138 - Lane change assist (7Y1)	1408-1411
1. Lane change assist (7Y1)	1408
2. Lane change assist control unit, fuses	1409
3. Lane change assist control unit, lane change assist control unit 2, button for lane change assist, lane change assist warning lamp	1410
4. Lane change assist control unit 2, lane change assist warning lamp in driver side exterior mirror, lane change assist warning lamp in front passenger side exterior mirror	1411
139 - Interface for special functions:	1412-1414
1. Interface for special functions:	1412
2. Interface control unit for vehicle location system, fuses	1413
3. Interface control unit for vehicle location system	1414
140 - Preparation for multimedia (9WM)	1415-1416
1. Preparation for multimedia (9WM)	1415
2. Preparation for multimedia	1416
141 - Audi S6 5.2 I Fuel injection engine (320 kW - 10 cylinder), engine code BXA	1417-1444
1. Audi S6 5.2 I Fuel injection engine (320 kW - 10 cylinder), engine code BXA	1417
2. Battery, battery monitor control unit, battery isolation igniter, fuses	1418
3. Starter, alternator, terminal 15 voltage supply relay, starter motor relay, suppression filter	1419
4. Engine control unit, Motronic current supply relay	1420
5. Engine control unit	1421
6. Engine control unit, injectors cylinder 1 up to 4, ignition coils 1 up to 4 with output stage	1422
7. Engine control unit, injector, cylinder 5, ignition coil 5 with output stage, brake servo relay, vacuum pump for brakes	1423
8. Engine control unit, throttle valve module, accelerator position sender	1424
9. Engine control unit, Hall sender, knock sensors	1425
10. Engine control unit, engine speed sender, fuel pressure sender, intake manifold flap potentiometer	1426
11. Engine control unit, coolant temperature sender, air mass meter, brake servo pressure sensor, fuel pressure sender for low pressure, intake air temperature sender	1427
12. Engine control unit, active charcoal filter system solenoid valve 1, secondary air inlet valve, fuel metering valve, secondary air pump relay, secondary air pump motor	1428
13. Engine control unit, map-controlled engine cooling system thermostat, inlet camshaft control valve 1, exhaust camshaft control valve 1, variable intake manifold motor	1429
14. Engine control unit, additional coolant pump relay, continued coolant circulation pump, right electrohydraulic engine mounting solenoid valve, intake manifold flap motor	1430
15. Engine control unit. lambda probe. lambda probe heater	1431

16. Engine control unit, lambda probe after catalytic converter, lambda probe heater after catalytic converter, fuel system diagnostic pump	1432
17. Engine control unit, brake light switch, brake pedal switch	1433
18. Engine control unit, engine component current supply relay, radiator fan control unit, radiator fan	1434
19. Engine control unit, engine control unit 2, CAN bus wiring	1435
20. Engine control unit 2, throttle valve module 2	1436
21. Engine control unit 2, injectors cylinder 6 up to 9, ignition coils 6 up to 9 with output stage	1437
22. Engine control unit 2, injector, cylinder 10, ignition coil 10 with output stage, knock sensors	1438
23. Engine control unit 2, Hall sender, intake manifold flap potentiometer 2	1439
24. Engine control unit 2, air mass meter 2, left electrohydraulic engine mounting solenoid valve, inlet camshaft control valve 2, exhaust camshaft control valve 2, fuel metering valve 2	1440
25. Engine control unit 2, lambda probe 3 and 4, lambda probe 3 and 4 heater	1441
26. Engine control unit 2, lambda probe 3 and 4 after catalytic converter, lambda probe 3 and 4 heater after catalytic converter	1442
27. Fuel pump control unit, control unit in dash panel insert, fuel system pressurisation pump, fuel gauge sender, fuel gauge, fuel gauge sender 2	1443
28. Control unit in dash panel insert, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp, oil level and oil temperature sender, oil pressure switch, coolant shortage indicator switch	1444
142 - 6-speed automatic gearbox , (09L),(09E)	1445-1449
1. 6-speed automatic gearbox , (09L),(09E)	1445
2. Automatic gearbox control unit	1446
3. Automatic gearbox control unit	1447
4. Tiptronic switch, Automatic gearbox control unit, Selector lever sensors control unit, Selector lever position display	1448
5. Gear selector position P switch, Automatic gearbox control unit, Selector lever lock solenoid	1449
143 - Automatic gearbox multitronic® 01J	1450-1454
1. Automatic gearbox multitronic® 01J	1450
2. Automatic gearbox control unit, fuses	1451
3. Automatic gearbox control unit	1452
4. Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display	1453
5. Automatic gearbox control unit, selector lever lock solenoid, gear selector position P switch	1454
144 - MMI with CD changer and DVD player (7A6, 7D1)	1455-1456
1. MMI with CD changer and DVD player (7A6, 7D1)	1455
2. CD changer, DVD player	1456
145 - Preparation for mobile telephone without hands-free system control unit (VDA interface) (9ZD)	1457-1459
1. Preparation for mobile telephone without hands-free system control unit (VDA interface) (9ZD)	1457
2. Preparation for mobile telephone without hands-free system control unit (VDA interface), voltage supply	1458
3. Microphone unit in front roof module, roof aerial	1459
146 - MMI with TV tuner (QU1, QV2, QV9)	1460-1463
1. MMI with TV tuner (QU1, QV2, QV9)	1460
2. TV tuner, voltage supply	1461
3. TV tuner, TV card reader	1462
4. TV tuner, TV aerial 1 up to 3	1463
148 - MMI (information electronics I) (8DZ, UF7, 7Q3)	1464-1473
1. MMI (information electronics I) (8DZ, UF7, 7Q3)	1464
2. Data bus diagnostic interface, fuses	1465
3. Data bus diagnostic interface	1466
4. Control unit 1 for information electronics, fuses	1467
5. Control unit for information electronics 1, multimedia system operating unit, glove compartment button, display unit button	1468
6. Control unit for information electronics 1, connection for external audio source	1469
7. Control unit for information electronics 1, display unit for front information display and operating unit control unit, connection for external audio source	1470
8. Control unit 1 for information electronics, traffic data aerial, chip card reader control unit	1471
9. Chip card reader control unit, traffic data aerial	1472
10. Control unit for information electronics 1, roof aerial	1473
149 - MMI (information electronics I) with integrated Bluetooth interface (9ZX)	1474-1476
1. MMI (information electronics I) with integrated Bluetooth interface (9ZX)	1474
2. Control unit for information electronics 1, voltage supply	1475
3. Control unit 1 for information electronics, microphone unit in front roof module, aerial for Bluetooth	1476
150 - Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	1477-1483

1. Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	1477
2. Onboard power supply control unit, fuses	1478
3. Onboard supply control unit, light switch, left and right fog light bulb	1479
4. Onboard supply control unit, left headlight	1480
5. Onboard supply control unit, right headlight	1481
6. Onboard supply control unit, front left and right side marker bulb	1482
7. Headlight range control, control unit, rear and front left vehicle level sender	1483
151 - Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control, (A8U),(TE5)	1484-1490
1. Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control, (A8U),(TE5)	1484
2. Onboard power supply control unit, fuses	1485
3. Onboard supply control unit, light switch, left and right fog light bulb	1486
4. Onboard supply control unit, left headlight	1487
5. Onboard supply control unit, right headlight	1488
6. Onboard supply control unit, front left and right side market bulb, left and right day driving light bulb	1489
7. Headlight range control, control unit, front and rear left vehicle level sender	1490
152 - Electric seat adjustment with memory driver seat, electric seat adjustment without memory front passenger seat	1491-1498
1. Electric seat adjustment with memory driver seat, electric seat adjustment without memory front passenger seat	1491
2. Seat and steering column adjustment control unit with memory function, driver seat adjustment thermal fuse 1	1492
3. Seat and steering column adjustment control unit with memory, head restraint adjustment button, seat longitudinal adjustment button, rake adjustment button, backrest adjustment button	1493
4. Seat and steering column adjustment control unit with memory function, driver seat rake adjustment motor, driver seat height adjustment motor, seat longitudinal adjustment motor	1494
5. Driver seat lumbar support adjustment switch, driver seat lumbar support longitudinal adjustment motor, driver seat lumbar support height adjustment motor	1495
6. Driver seat memory operating unit, emergency-off button, driver door control unit	1496
7. Front passenger seat adjustment switch, front passenger seat adjustment motors, front passenger seat adjustment thermal fuse 1	1497
8. Front passenger seat lumbar support adjustment switch, front passenger seat lumbar support longitudinal adjustment motor, front passenger seat lumbar support height adjustment motor	1498
153 - Communication (USA)	1499-1511
1. Communication (USA)	1499
2. Data bus diagnostic interface, fuses	1500
3. Data bus diagnostic interface	1501
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button	1502
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	1503
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	1504
7. Media player in position 1 and 2	1505
8. Telephone transmitter and receiver unit, telephone bracket, mobile telephone	1506
9. Telephone transmitter and receiver unit, digital sound package control unit, aerial for Bluetooth	1507
10. Radio, fuses	1508
11. Radio, language input control unit, aerial amplifier	1509
12. Navigation system with CD drive control unit, satellite radio	1510
13. Satellite radio, aerial for radio, telephone and navigation system	1511
154 - Adjustable lumbar support , (Q4P)	1512-1524
1. Adjustable lumbar support , (Q4P)	1512
2. Driver seat lumbar support adjustment pressure switch, Driver seat adjustment control unit, Rear left footwell light	1513
3. Relay 1 for solenoid valve, Driver seat adjustment control unit	1514
4. Relay 2 for solenoid valve, Driver seat adjustment control unit	1515
5. Driver seat lumbar support adjustment switch, Button for driver seat bolster adjustment, Button for driver seat backrest bolster adjustment, Driver seat adjustment control unit	1516
6. Driver seat adjustment control unit, Driver seat lumbar support adjustment pump, Valve block for driver seat and backrest bolster adjustment	1517
7. Front passenger seat lumbar support adjustment pressure switch, Front passenger seat adjustment control unit, Rear right footwell light	1518
8. Front passenger seat adjustment control unit, Relay 3 for solenoid valve	1519
9. Front passenger seat adjustment control unit. Relay 4 for solenoid valve	1520

10. Front passenger seat lumbar support adjustment switch, Button for front passenger seat bolster adjustment, Button for front passenger seat backrest bolster adjustment, Front passenger seat adjustment control unit	1521
11. Front passenger seat adjustment control unit, Lumbar support adjustment valve block on front passenger side, Front passenger side lumbar support adjustment pump, Valve block for front passenger seat and backrest bolster adjustment	1522
12. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit, Heated seat cushion for front left seat, Heated seat cushion for front right seat, Heated backrest for front left seat, Heated backrest for front right seat	1523
13. Driver side belt switch, Front passenger side belt switch	1524
801 - -Fitting locations: Earth points - 3	1525-1539
1. Earth points	1525-1539
1.1 Overview of earth points in front part of vehicle	1525
1.2 Overview of earth points in interior of vehicle	1526-1527
1.3 Earth point, in engine compartment	1528-1532
1.4 Earth points, in interior	1533-1539
802 - - Fitting locations: Fuses - 3	1540-1615
1. Fuses	1540-1615
1.1 Overview of fuses	1540-1544
1.2 Location of fuses (SA), in electronics box left in plenum chamber	1545
1.2.1 Fuse colours	1545
1.3 Position of fuses, fuse holder, from model year 2005	1546-1547
1.4 Position of fuses, fuse holder, left-hand drive, from model year 2007	1548-1549
1.5 Position of fuses, fuse holder, left-hand drive, from model year 2009	1550-1551
1.6 Location of fuses (SA), in electronics box left in plenum chamber, right-hand drive	1552
1.6.1 Fuse colours	1552
1.7 Position of fuses, fuse holder, right-hand drive, from model year 2007	1553-1554
1.8 Position of fuses, fuse holder, right-hand drive, from model year 2009	1555-1556
1.9 Location of fuses (SB), left dash panel	1557
1.9.1 Fuse colours	1557
1.10 Position of fuses, fuse holder, from model year 2005	1558-1560
1.11 Position of fuses, fuse holder, left-hand drive, from model year 2007	1561-1563
1.12 Position of fuses, fuse holder, left-hand drive, from model year 2009	1564-1566
1.13 Location of fuses (SB), right dash panel, right-hand drive	1567
1.13.1 Fuse colours	1567
1.14 Position of fuses, fuse holder, right-hand drive, from model year 2007	1568-1570
1.15 Position of fuses, fuse holder, right-hand drive, from model year 2009	1571-1573
1.16 Location of fuses (SC), right dash panel	1574-1575
1.16.1 Fuse colours	1574-1575
1.17 Position of fuses, fuse holder, from model year 2005	1576-1578
1.18 Position of fuses, fuse holder, left-hand drive, from model year 2007	1579-1581
1.19 Position of fuses, fuse holder, left-hand drive, from model year 2009	1582-1584
1.20 Location of fuses (SC), left dash panel, right-hand drive	1585-1586
1.20.1 Fuse colours	1585-1586
1.21 Position of fuses, fuse holder, right-hand drive, from model year 2007	1587-1589
1.22 Position of fuses, fuse holder, right-hand drive, from model year 2009	1590-1592
1.23 Location of fuses (SF) on right in luggage compartment	1593-1594
1.23.1 Fuse colours	1593-1594
1.24 Position of fuses, fuse holder, from model year 2005	1595-1596
1.25 Position of fuses, fuse holder, from model year 2007	1597-1598
1.26 Position of fuses, fuse holder, from model year 2009	1599-1600
1.27 Fuses behind driver's storage compartment	1601-1602
1.27.1 Position of fuses, fuse holder, from model year 2005	1601
1.27.2 Position of fuses, fuse holder, left-hand drive, from model year 2007	1602
1.28 Fuses on onboard supply control unit -J519-	1603
1.28.1 Position of fuses, fuse holder	1603
1.29 Fuses in electronics box, right in plenum chamber	1604-1606
1.29.1 Position of fuses, fuse holder, from model year 2005	1604
1.29.2 Position of fuses, fuse holder, left-hand drive, from model year 2007	1605
1.29.3 Position of fuses, fuse holder, right-hand drive, from model year 2007	1606
1.30 Fuses in electronics box, left in plenum chamber	1607-1608
1.30.1 Position of fuses, fuse holder, left-hand drive, from model year 2007	1607
1.30.2 Position of fuses, fuse holder, right-hand drive, from model year 2007	1608
1.31 Fuses, on right in luggage compartment	1609-1611
1.31.1 Position of fuses, fuse holder, from model year 2005	1609-1610
1.31.2 Position of fuses, fuse holder, from model year 2007	1611

1.32 Fuses on steering cross member	1612
1.32.1 Position of fuses, fuse holder	1612
1.33 Fuses on main fuse carrier electronics box, right in plenum chamber	1613
1.33.1 Position of fuses, fuse holder	1613
1.34 Fuses in luggage compartment, rear right, on the battery	1614
1.34.1 Position of fuses, fuse holder, from model year 2007	1614
1.35 Fuses on coupling station, lower part of right A-pillar	1615
803 - -Fitting Locations: Relay - 3	1616-1632
1. Relay	1616-1632
1.1 Overview of relay carrier	1616-1617
1.2 9-point relay and fuse carrier behind driver's storage compartment	1618-1621
1.2.1 Position of relays, from model year 2005	1618
1.2.2 Position of relays, left-hand drive, from model year 2007	1619-1620
1.2.3 Position of relays, right-hand drive, from model year 2007	1621
1.3 Relay and fuse carrier, in electronics box on right in plenum chamber	1622-1624
1.3.1 Position of relays, from model year 2005	1622
1.3.2 Position of relays, left-hand drive, from model year 2007	1623
1.3.3 Position of relays, right-hand drive, from model year 2007	1624
1.4 Relay and fuse carrier, in electronics box on left in plenum chamber	1625-1628
1.4.1 Position of relays, from model year 2005	1625
1.4.2 Position of relays, left-hand drive, from model year 2007	1626-1627
1.4.3 Position of relays, right-hand drive, from model year 2007	1628
1.5 Relay and fuse carrier right in luggage compartment	1629-1630
1.5.1 Position of relays, from model year 2005	1629
1.5.2 Position of relays, from model year 2007	1630
1.6 Relay and fuse carrier on steering cross member	1631
1.6.1 Relay positions	1631
1.7 Relay in luggage compartment, rear right, on the battery	1632
1.7.1 Position of relays, from model year 2007	1632
804 - -Component Locations: Control Modules - 3	1633-1668
1. Control units	1633-1668
1.1 Overview of control units	1633-1636
1.2 Garage door operation control unit -J530-	1637-1638
1.2.2 Connector assignment.	1638
1.3 Engine control unit -J623-	1639
1.4 Control units behind the glove box	1640-1645
1.4.2 Connector assignment.	1641
1.4.3 Connector assignment.	1642
1.4.4 Connector assignment.	1643
1.4.5 Connector assignment.	1644
1.4.6 Connector assignment.	1645
1.5 Airbag control unit -J234-	1646-1647
1.5.2 Connector assignment.	1647
1.6 Control units on right in luggage compartment	1648-1651
1.6.2 Connector assignment.	1649
1.6.3 Connector assignment.	1650
1.6.4 Connector assignment.	1651
1.7 Convenience system central control unit -J393-	1652
1.8 Energy management control unit -J644-	1653-1654
1.8.2 Connector assignment.	1654
1.9 Radio controlled clock receiver -J489-	1655
1.10 Seat and steering column adjustment control unit with memory -J136-, front passenger seat adjustment with memory control unit -J521-	1656-1657
1.10.2 Connector assignment.	1657
1.11 Entry and start authorisation control unit -J518-	1658-1659
1.11.2 Connector assignment.	1659
1.12 Behind driver storage compartment control units	1660-1661
1.12.2 Connector assignment.	1661
1.13 Wiper motor control unit -J400-	1662
1.14 Automatic gearbox control unit -J217-	1663
1.15 Drives in glove box	1664
1.16 Control units on left in luggage compartment	1665
1.17 Control unit in dash panel insert -J285-	1666
1.17.1 Connector assignment.	1666
1.18 Driver door control unit -J386-, front passenger side door control unit -J387-, rear left door control unit -J388-. rear right door control unit -J389-	1667-1668

1.18.1 Connector assignment.	1667-1668
805 - -Fitting Locations: Coupling stations and connectors from wiring harness set - 3	1669-1678
1. Coupling stations and connectors from wiring harness set	1669-1678
1.1 Overview of coupling stations and connectors	1669-1670
1.2 Position electronics box left in plenum chamber	1671
1.3 Position electronics box right in plenum chamber	1672
1.4 Coupling station on left of A-pillar	1673
1.5 Coupling station on right of A-pillar	1674
1.6 Coupling station seat wiring under driver seat	1675
1.7 Coupling station seat wiring under front passenger seat	1676
1.8 Coupling station electronics box in plenum chamber	1677
1.9 Connector, on right in luggage compartment	1678