

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Rear final drive identification</b>	<b>1</b>
1.1 Code letters, allocation, transmission ratios, capacities: Audi A4 2001 ▶ , Cabriolet 2003 ▶	2
1.2 Code letters, allocation, transmission ratios, capacities: Audi A6 2005 ▶	2
<b>2 Transmission layout</b>	<b>3</b>
<b>3 General repair instructions</b>	<b>5</b>
3.1 Jacking mode (vehicles with pneumatic suspension)	5
3.2 Special tools	5
3.3 Components	5
<b>39 - Final drive - rear differential</b>	<b>7</b>
<b>1 Servicing propshaft - exploded view</b>	<b>7</b>
1.1 Removing and installing propshaft	8
1.2 Detaching and attaching propshaft at rear final drive	15
<b>2 Measuring and marking radial run-out at flange for propshaft</b>	<b>19</b>
<b>3 Checking gear oil in rear final drive</b>	<b>20</b>
<b>4 Exploded view – rear final drive</b>	<b>21</b>
4.1 Removing and installing rear final drive	21
<b>5 Renewing flange shaft oil seals</b>	<b>25</b>
5.1 Renewing flange shaft oil seal (right-side)	26
5.2 Renewing flange shaft oil seal (left-side)	27
5.3 Renewing protective ring on flange shaft	29
<b>6 Renewing oil seal for propshaft flange on rear final drive (rear final drive installed)</b>	<b>31</b>
6.1 Renewing flange for propshaft and oil seal	36