

Contents

00 - Technical data	1
1 Identification	1
1.1 PR number and type of brake system	1
2 Safety precautions	2
2.1 Safety precautions when working on high-voltage vehicles	2
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair notes	5
3.1 Rules for cleanliness	5
3.2 General repair instructions	5
3.3 Contact corrosion	5
4 Technical data	6
4.1 Technical data for brakes	6
5 Brake test	9
5.1 General notes	9
5.2 Testing vehicles with front-wheel drive	9
5.3 Testing vehicles with four-wheel drive	9
5.4 Testing parking brake	10
5.5 Visible features of ceramic brake discs	10
5.6 Superficial cracks in cooling channel lands	12
5.7 Cracks in area of bolted connection on ceramic brake discs	12
5.8 Edge fractures	13
5.9 Chipping on ceramic brake discs	13
5.10 Cracks extending into cooling channels	14
5.11 Assessing degree of wear on ceramic brake discs	14
5.12 Wear assessment with tester VAS 6813	22
45 - Anti-lock brake system	28
1 General notes	28
1.1 Notes for repair work on the ABS	28
2 Overview of fitting locations	29
2.1 Overview of fitting locations - ABS/ESP	29
3 Control unit and hydraulic unit	31
3.1 Exploded view - control unit and hydraulic unit	31
3.2 Removing and installing ABS control unit J104 / ABS hydraulic unit N55	33
3.3 Separating control unit from hydraulic unit	44
3.4 Attaching control unit to hydraulic unit	46
4 Sensors	49
4.1 Exploded view - front wheel speed sensor	49
4.2 Exploded view - rear wheel speed sensor	50
4.3 Removing and installing brake light switch	51
4.4 Removing and installing brake pedal position sender	53
4.5 Removing and installing control unit for sensor electronics	54
4.6 Removing and installing front wheel speed sensor G45 / G47	55
4.7 Removing and installing rear wheel speed sensor G44 / G46	56
5 Hold assist function	58
5.1 Description of hold assist function	58
46 - Brakes - mechanism	60
1 Front brakes	60
1.1 Exploded view - front brakes	60
1.2 Removing and installing brake pads	79



1.3	Removing and installing brake caliper	108
1.4	Renewing brake caliper	124
1.5	Removing and installing brake disc	138
1.6	Renew brake disc	142
1.7	Removing and installing splash plate	144
1.8	Removing and installing pad wear indicator wire	145
2	Rear brakes	153
2.1	Exploded view - rear brakes	153
2.2	Removing and installing brake pads	159
2.3	Removing and installing brake caliper	171
2.4	Renewing brake caliper	179
2.5	Removing and installing brake disc	189
2.6	Removing and installing splash plate	193
2.7	Removing and installing pad wear indicator wire	194
3	Parking brake	198
3.1	Overview of fitting locations - parking brake	198
3.2	Removing and installing control unit for electromechanical parking brake J540	199
3.3	Removing and installing parking brake motor V282 / V283	200
3.4	Releasing parking brake manually	203
4	Brake pedal	205
4.1	Exploded view - brake pedal	205
4.2	Removing and installing mounting bracket	207
4.3	Separating brake pedal from brake servo	210
4.4	Connecting brake pedal to brake servo	211
4.5	Removing and installing brake pedal	211
47	Brakes - hydraulics	213
1	Front brake caliper	213
1.1	Exploded view - front brake caliper	213
1.2	Removing and installing brake caliper piston	216
1.3	Renewing bearing bushes and guide pins	226
2	Rear brake caliper	228
2.1	Exploded view - rear brake caliper	228
2.2	Removing and installing brake caliper piston	228
3	Brake servo / brake master cylinder	233
3.1	Exploded view - brake servo / brake master cylinder	233
3.2	Removing and installing brake servo	234
3.3	Removing and installing brake master cylinder	237
3.4	Removing and installing brake fluid reservoir	239
4	Vacuum system	243
4.1	Exploded view - electric vacuum pump	243
4.2	Exploded view - vacuum pump	244
4.3	Checking non-return valve	248
4.4	Removing and installing non-return valve	249
4.5	Removing and installing brake servo pressure sensor	252
4.6	Checking vacuum system	252
4.7	Removing and installing electric vacuum pump for brakes	256
4.8	Routing bleeder hose	258
4.9	Removing and installing vacuum pump	259
5	Brake lines	266
5.1	Connection points	266
5.2	Routing of brake lines	266
5.3	Repairing brake lines	266
6	Hydraulic system	272

6.1	General notes on brake fluid	272
6.2	Bleeding hydraulic system	273
6.3	Leak test	280