

## Contents

<b>91 - Communication . . . . .</b>	<b>1</b>
<b>1 Infotainment system . . . . .</b>	<b>1</b>
1.1 Layout - infotainment system . . . . .	1
1.2 Overview of fitting locations - infotainment system . . . . .	7
1.3 Removing and installing infotainment system display . . . . .	11
1.4 Removing and installing control unit 1 for information electronics J794 . . . . .	21
1.5 Removing and installing multimedia system operating unit E380 . . . . .	25
1.6 Pin assignment . . . . .	29
<b>2 Sound system . . . . .</b>	<b>45</b>
2.1 Layout - sound system . . . . .	45
2.2 Overview of fitting locations - sound system . . . . .	55
2.3 Overview of fitting locations - ANC microphones . . . . .	67
2.4 Removing and installing digital sound package control unit/amplifier . . . . .	69
2.5 Removing and installing rear treble loudspeakers R14/R16 . . . . .	83
2.6 Removing and installing front treble loudspeakers R20/R22 . . . . .	84
2.7 Removing and installing rear mid-range loudspeakers . . . . .	87
2.8 Removing and installing front mid-range loudspeakers . . . . .	88
2.9 Removing and installing rear mid-range and bass loudspeakers . . . . .	90
2.10 Removing and installing rear bass loudspeakers R15/R17 . . . . .	93
2.11 Removing and installing front bass loudspeakers R21/R23 . . . . .	95
2.12 Removing and installing subwoofer R211 . . . . .	100
2.13 Removing and installing effect loudspeakers . . . . .	106
2.14 Removing and installing centre loudspeaker . . . . .	109
2.15 Removing and installing ANC microphones . . . . .	111
2.16 Pin assignment . . . . .	112
<b>3 Aerial systems . . . . .</b>	<b>120</b>
3.1 Layout - aerial systems . . . . .	120
3.2 Overview of fitting locations - aerial systems . . . . .	123
3.3 Removing and installing aerial amplifier . . . . .	135
3.4 Removing and installing window aerial suppression filter C18 . . . . .	141
3.5 Removing and installing traffic data aerial . . . . .	143
3.6 Removing and installing dedicated short-range communication aerial . . . . .	144
3.7 Removing and installing emergency call module aerial . . . . .	145
3.8 Removing and installing roof aerial . . . . .	146
3.9 Removing and installing bumper aerials . . . . .	147
3.10 Pin assignment . . . . .	149
<b>4 Radio . . . . .</b>	<b>155</b>
4.1 Layout - radio . . . . .	155
4.2 Overview of fitting locations - radio . . . . .	163
4.3 Removing and installing radio . . . . .	166
4.4 Pin assignment . . . . .	168
<b>5 DVD/CD changer . . . . .</b>	<b>181</b>
5.1 Pin assignment . . . . .	181
5.2 Removing and installing CD changer . . . . .	184
5.3 Removing and installing DVD changer . . . . .	186
<b>6 Telephone system . . . . .</b>	<b>188</b>
6.1 Layout - telephone . . . . .	188
6.2 Overview of fitting locations - telephone system . . . . .	201
6.3 Assembly overview - microphone unit . . . . .	205
6.4 Removing and installing microphone unit in front roof module R164 . . . . .	206
6.5 Removing and installing aerial amplifier for mobile telephone R86 . . . . .	207
6.6 Removing and installing telephone bracket R126 . . . . .	209

6.7	Pin assignment .....	213
<b>7</b>	<b>Navigation system .....</b>	<b>236</b>
7.1	Layout - navigation system .....	236
7.2	Overview of fitting locations - navigation system .....	245
7.3	Pin assignment .....	248
7.4	Removing and installing chip card reader control unit .....	255
<b>8</b>	<b>TV system .....</b>	<b>257</b>
8.1	Layout - TV system .....	257
8.2	Overview of fitting locations - TV system .....	263
8.3	Pin assignment .....	266
8.4	Removing and installing TV tuner .....	275
8.5	Removing and installing TV card reader .....	281
<b>9</b>	<b>Reversing camera system .....</b>	<b>284</b>
9.1	Layout - reversing camera system .....	284
9.2	Overview of fitting locations - reversing camera system .....	286
9.3	Removing and installing reversing camera R189 .....	287
9.4	Calibrating reversing camera system .....	290
9.5	Removing and installing reversing camera system control unit J772 .....	297
<b>10</b>	<b>Multifunction steering wheel .....</b>	<b>300</b>
10.1	Layout - multifunction steering wheel .....	300
10.2	Assembly overview - multi-function steering wheel .....	300
10.3	Removing and installing multifunction buttons in steering wheel E441/E440 .....	302
10.4	Removing and installing tiptronic switches in steering wheel E439/E438 .....	310
<b>11</b>	<b>Voice control system .....</b>	<b>312</b>
11.1	Layout - voice control system .....	312
11.2	Removing and installing voice control system .....	313
<b>12</b>	<b>Connection for external multimedia devices .....</b>	<b>315</b>
12.1	Layout - connection for external multimedia devices .....	315
12.2	Connectors on connection for external multimedia devices .....	317
12.3	Removing and installing connection for external audio sources R199 .....	323
<b>13</b>	<b>Rear Seat Entertainment system (RSE) .....</b>	<b>327</b>
13.1	Layout - Rear Seat Entertainment system .....	327
13.2	Overview of fitting locations - Rear Seat Entertainment system .....	327
<b>14</b>	<b>Night vision system .....</b>	<b>329</b>
14.1	Overview of fitting locations - night vision system .....	329
14.2	Removing and installing camera for night vision system .....	333
14.3	Removing and installing control unit for night vision system .....	336
<b>15</b>	<b>Overhead view camera .....</b>	<b>338</b>
15.1	Layout - overhead view camera system .....	338
15.2	Overview of fitting locations - overhead view camera .....	339
15.3	Removing and installing control unit for overhead view camera J928 .....	340
15.4	Removing and installing rear overhead view camera R246 .....	342
15.5	Removing and installing front overhead view camera R243 .....	344
15.6	Calibrating overhead view camera system .....	345
<b>16</b>	<b>Mobile online services .....</b>	<b>367</b>
16.1	Layout - mobile online services .....	367
16.2	Overview of fitting locations - mobile online services .....	370
16.3	Removing and installing emergency call module control unit and communication unit J949 .....	372
16.4	Removing and installing emergency assistance call button E276 .....	373
16.5	Removing and installing loudspeaker for emergency call module R335 .....	374
16.6	Removing and installing interface control unit for telematics J1221 .....	374
16.7	Removing and installing telephone and telematics control unit J526 .....	376
16.8	Removing and installing data transmission aerial R180 .....	377