

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	2
1.2 Safety precautions when working in the vicinity of high-voltage components	3
1.3 Safety precautions when working on vehicles with start/stop system	3
1.4 Safety precautions when working on pyrotechnic components	4
1.5 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	5
1.6 Additional safety regulations for side airbags	6
1.7 Additional safety regulations for curtain airbags	7
1.8 Safety regulations for crash sensors (pressure sensors) for front side airbag	7
1.9 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	8
1.10 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	9
1.11 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	9
1.12 Checking airbag mounting components following an accident	11
1.13 Accident in which no airbag was triggered	12
1.14 Checking seat belts	12
1.15 Checking belt webbing	12
1.16 Checking automatic belt retractor (locking action)	13
1.17 Visual inspection of belt buckle	14
1.18 Functional check of belt buckle	14
1.19 Checking guide fittings and latch plate	14
1.20 Checking securing components and anchorage points following an accident	14
1.21 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	15
1.22 Checking child seat anchors following an accident	15
1.23 Safety regulations for automatic anti-dazzle interior mirror	16
2 Repair instructions	17
2.1 Contact corrosion	17
2.2 Routing and attachment of pipes, hoses and wiring	17
68 - Interior equipment	18
1 Storage compartments/covers/trim panels	18
1.1 Overview of fitting locations - storage compartments/covers/trim panels	18
1.2 Assembly overview - dash panel cover (driver side)	19
1.3 Assembly overview - steering column trim	20
1.4 Assembly overview - glove compartment	21
1.5 Removing and installing dash panel cover (driver side)	23
1.6 Removing and installing gap cover for dash panel insert	25
1.7 Removing and installing upper steering column trim	27
1.8 Removing and installing lower steering column trim	28
1.9 Removing and installing glove compartment opening mechanism	29
1.10 Removing and installing lock cylinder for glove compartment opening mechanism	30
1.11 Removing and installing glove compartment	32
1.12 Removing and installing glove compartment cover	38
1.13 Removing and installing restrictor for glove compartment cover	39
2 Equipment	40
2.1 Assembly overview - net partition	40
2.2 Assembly overview - sun visors	42
2.3 Assembly overview - sun blind	42
2.4 Assembly overview - luggage compartment cover	46



2.5	Removing and installing net partition	47
2.6	Removing and installing mounting for net partition	47
2.7	Removing and installing bracket for net partition	49
2.8	Removing and installing sun visor	50
2.9	Removing and installing sun visor centre mount	50
2.10	Removing and installing sun blind	51
2.11	Removing and installing retainer for sun blind	56
2.12	Removing and installing grab handle	56
2.13	Removing and installing luggage compartment cover	58
3	Centre console	61
3.1	Assembly overview - centre console	61
3.2	Removing and installing rear centre console trim	70
3.3	Removing and installing cover for centre console	74
3.4	Removing and installing front ashtray	75
3.5	Removing and installing ashtray trim (front)	76
3.6	Removing and installing centre console insert	76
3.7	Removing and installing front centre console storage compartment	78
3.8	Removing and installing front centre console footwell trim	78
3.9	Removing and installing centre console	79
3.10	Removing and installing cup holders	82
3.11	Removing and installing bracket for centre console	84
4	Front centre armrest	86
4.1	Assembly overview - front centre armrest	86
4.2	Removing and installing front centre armrest	87
4.3	Removing and installing upper part of centre armrest	88
5	Interior mirror	90
5.1	Assembly overview - interior mirror	90
5.2	Removing and installing interior mirror	91
5.3	Switching automatic anti-dazzle function on and off	94
5.4	Switching compass display on and off	94
5.5	Setting magnetic deflection zone	95
5.6	Calibrating digital compass	95
5.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	96
5.8	Selecting the applicable deflection zone from the map	96
5.9	Checking operation of automatic anti-dazzle interior mirror	102
69	Passenger protection	104
1	Seat belts	104
1.1	Overview of fitting locations - seat belts and anchorage points	104
1.2	Assembly overview - front three-point seat belt	106
1.3	Assembly overview - rear outer three-point seat belt	108
1.4	Assembly overview - rear centre three-point seat belt	109
1.5	Assembly overview - front belt buckle	111
1.6	Assembly overview - rear belt buckle	112
1.7	Removing and installing front three-point seat belt	116
1.8	Removing and installing rear three-point seat belt	119
1.9	Removing and installing rear belt guide	131
1.10	Removing and installing front belt guide	136
1.11	Removing and installing front belt end fitting	137
1.12	Removing and installing rear outer belt end fitting	139
1.13	Removing and installing belt height adjuster	140
1.14	Removing and installing front belt buckle	142
1.15	Removing and installing rear belt buckle	145
2	Child seat anchors	148

2.1	Assembly overview - front child seat anchors	148
2.2	Assembly overview - rear child seat anchors	149
2.3	Removing and installing front child seat anchor	151
2.4	Removing and installing rear child seat anchor	152
3	Airbag system	154
3.1	Overview of fitting locations - airbag system	154
4	Airbag control unit	157
4.1	Assembly overview - airbag control unit	157
4.2	Removing and installing airbag control unit J234	157
5	Battery isolation igniter	160
5.1	Assembly overview - battery isolation igniter	160
5.2	Removing and installing battery isolation igniter	160
6	Driver airbag	164
6.1	Assembly overview - driver airbag	164
6.2	Removing and installing airbag unit with igniters	166
6.3	Renewing connector at airbag	169
7	Front passenger airbag	172
7.1	Assembly overview - front passenger airbag	172
7.2	Removing and installing front passenger airbag unit with igniters	174
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	177
8	Side airbags	180
8.1	Assembly overview - front side airbag	180
8.2	Assembly overview - rear side airbag	182
8.3	Removing and installing front side airbag with igniter	184
8.4	Removing and installing rear side airbag with igniter	188
9	Curtain airbags	193
9.1	Assembly overview - curtain airbag	193
9.2	Removing and installing curtain airbag with igniter	195
10	Knee airbags	204
10.1	Assembly overview - knee airbag	204
10.2	Removing and installing knee airbag with igniter	207
11	Crash sensors for airbags	213
11.1	Overview of fitting locations - crash sensors for airbags	213
11.2	Removing and installing front airbag crash sensor G283/G284	215
11.3	Removing and installing front side airbag crash sensor G179/G180	217
11.4	Removing and installing rear side airbag crash sensor G256/G257	219
12	Seat position sensor	223
12.1	Assembly overview - seat position sensor	223
12.2	Removing and installing seat position sensor	223
13	Belt-fastened recognition system	228
13.1	Removing and installing seat occupied sensor on front passenger side G128	228
14	Seat occupied recognition system	233
14.1	Overview of fitting locations - seat occupied recognition system	233
14.2	Removing and installing seat occupied sensor	237
70	Trim, insulation	241
1	Front door trim	241
1.1	Assembly overview - front door trim	241
1.2	Removing and installing mid-range loudspeaker trim	245
1.3	Removing and installing bass loudspeaker trim	245
1.4	Removing and installing trim panel	246
1.5	Removing and installing front door trim	247
1.6	Removing and installing front armrest	252
1.7	Removing and installing switch trim	253



1.8	Removing and installing trim for mirror cover	253
1.9	Removing and installing interior door handle	254
1.10	Removing and installing window frame trim	255
2	Rear door trim	257
2.1	Assembly overview - rear door trim	257
2.2	Assembly overview - sun blind for door window	263
2.3	Removing and installing treble loudspeaker trim	263
2.4	Removing and installing trim panel	264
2.5	Removing and installing interior door handle	266
2.6	Removing and installing rear door trim	266
2.7	Removing and installing rear armrest	271
2.8	Removing and installing window frame trim	271
2.9	Removing and installing sun blind for door window	273
2.10	Removing and installing retainer for sun blind	274
2.11	Removing and installing rear ashtray	275
3	Dash panel	277
3.1	Assembly overview - dash panel	277
3.2	Removing and installing dash panel cover (side)	283
3.3	Removing and installing dash panel cover	284
3.4	Removing and installing trim panel for dash panel	288
3.5	Removing and installing loudspeaker trim	290
3.6	Removing and installing retaining frame for dash panel insert	292
3.7	Removing and installing dash panel	293
3.8	Removing and installing dash panel vents	298
3.9	Removing and installing front centre defroster vent	300
3.10	Removing and installing side defroster vent	301
4	Dash panel cross member	303
4.1	Assembly overview - dash panel cross member	303
4.2	Removing and installing dash panel cross member	306
4.3	Removing and installing mounting bracket	311
4.4	Removing and installing glove compartment bracket	312
4.5	Removing and installing bracket/support for dash panel cross member	313
5	Passenger compartment trim panels	316
5.1	Overview of fitting locations - passenger compartment trim panels	316
5.2	Assembly overview - sill panel moulding	318
5.3	Assembly overview - A-pillar trim	320
5.4	Assembly overview - B-pillar trim	321
5.5	Assembly overview - C-pillar trim	323
5.6	Assembly overview - D-pillar trim	324
5.7	Assembly overview - foot rest and floor covering	326
5.8	Assembly overview - rear shelf	327
5.9	Removing and installing sill panel moulding	329
5.10	Removing and installing A-pillar trim	332
5.11	Removing and installing B-pillar trim	334
5.12	Removing and installing C-pillar trim	339
5.13	Removing and installing D-pillar trim	343
5.14	Removing and installing foot rest	347
5.15	Removing and installing floor covering	347
5.16	Removing and installing rear shelf	348
5.17	Removing and installing loudspeaker trim	351
6	Luggage compartment trim panels	353
6.1	Overview of fitting locations - luggage compartment trim panels	353
6.2	Assembly overview - luggage compartment side trim	356
6.3	Assembly overview - luggage compartment floor	362
6.4	Assembly overview - lower rear lid trim	368

6.5	Assembly overview - lock carrier trim	372
6.6	Removing and installing lower rear lid trim	374
6.7	Removing and installing upper rear lid trim	379
6.8	Removing and installing luggage compartment side trim	381
6.9	Removing and installing luggage compartment floor	395
6.10	Removing and installing lock carrier trim	398
6.11	Removing and installing bracket for warning triangle	400
6.12	Removing and installing fastening ring	401
6.13	Removing and installing retainer for luggage compartment floor covering	401
6.14	Removing and installing frame for loading aid	402
6.15	Removing and installing bag hook	403
6.16	Removing and installing grip for rear luggage compartment floor	403
6.17	Removing and installing retaining rail	405
6.18	Removing and installing lining for spare wheel well	406
6.19	Removing and installing tail light cover	408
6.20	Removing and installing trim for rear lid lock	408
7	Roof trim panels	409
7.1	Overview of fitting locations - roof trim	409
7.2	Assembly overview - roof end strip	411
7.3	Assembly overview - moulded headliner	412
7.4	Removing and installing roof end strip	415
7.5	Removing and installing moulded headliner	417
7.6	Attaching roof reinforcement to body	423
72	Seat frames	428
1	Overview - seat versions	428
1.1	Overview of fitting locations - seat versions	428
1.2	Attaching front seat to seat repair stand	431
2	Front seats	432
2.1	Overview of fitting locations - electrical and electronic components	432
2.2	Assembly overview - front seat	441
2.3	Assembly overview - front seat backrest	450
2.4	Assembly overview - head restraint	460
2.5	Assembly overview - seat pan	464
2.6	Removing and installing front seat	492
2.7	Connecting and disconnecting airbag adapter	502
2.8	Removing and installing seat height adjuster	506
2.9	Removing and installing seat height adjustment unit	508
2.10	Removing and installing seat rake adjustment unit	514
2.11	Removing and installing backrest adjustment unit	519
2.12	Removing and installing front seat backrest	523
2.13	Removing and installing head restraint	544
2.14	Removing and installing head restraint guide	545
2.15	Dismantling and assembling seat pan	548
2.16	Removing and installing lumbar support adjustment switch E176/E177	608
2.17	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	608
3	Rear seats	611
3.1	Assembly overview - bench seat/individual seats	611
3.2	Assembly overview - locking mechanism	617
3.3	Assembly overview - head restraint and head restraint guide	620
3.4	Assembly overview - rear seat backrest	622
3.5	Assembly overview - centre armrest	630
3.6	Removing and installing bench seat/individual seats	642
3.7	Removing and installing centre storage compartment	648
3.8	Removing and installing lock cylinder	652



3.9	Removing and installing head restraint	656
3.10	Removing and installing head restraint guide	659
3.11	Removing and installing rear seat backrest	661
3.12	Removing and installing trim for locking mechanism	677
3.13	Removing and installing locking mechanism for rear seat backrest	679
3.14	Removing and installing trim frame for load-through hatch	683
3.15	Removing and installing flap for load-through hatch	685
3.16	Removing and installing centre armrest	687
4	Front seat pneumatic system	706
4.1	Assembly overview - pneumatic system	706
4.2	Connection diagram - pneumatic system	710
4.3	Assembly overview - pneumatic system, compressor	712
4.4	Assembly overview - pneumatic system, backrest	714
4.5	Assembly overview - pneumatic system, massage mat	717
4.6	Assembly overview - pneumatic system, seat/backrest bolster adjusters	718
4.7	Checking pneumatic system	720
4.8	Severing and connecting pneumatic lines	743
4.9	Servicing pneumatic lines	744
4.10	Removing and installing compressor/control unit for multicontour seat	745
4.11	Removing and installing module carrier with lumbar support air cushions	750
4.12	Removing and installing switch module 2 for front seat E667/E668	754
4.13	Removing and installing valve block for multicontour seat	756
4.14	Removing and installing massage mat	762
4.15	Removing and installing massage function button E670/E671	764
4.16	Removing and installing seat bolster adjuster	764
4.17	Removing and installing backrest bolster adjuster	766
5	Rear seat pneumatic system	769
5.1	Assembly overview - pneumatic system	769
5.2	Connection diagram - pneumatic system	770
5.3	Assembly overview - pneumatic system, module carrier/air cushion/lumbar support	771
5.4	Assembly overview - pneumatic system, massage mat	772
5.5	Checking pneumatic system	773
5.6	Severing and connecting pneumatic lines	780
5.7	Servicing pneumatic lines	782
5.8	Removing and installing compressor with control unit for multicontour seat	782
5.9	Removing and installing air cushion for lumbar support	784
5.10	Removing and installing valve block 1 for lumbar support N479/N481	785
5.11	Removing and installing module carrier	787
5.12	Removing and installing massage mat	789
5.13	Removing and installing valve block for massage mat	791
74	Seat - padding, covers	793
1	Covers and padding on front seats	793
1.1	Assembly overview - seat pan cover and padding	793
1.2	Assembly overview - backrest cover and padding	799
1.3	Assembly overview - head restraint cover and padding	803
1.4	Assembly overview - seat heater elements	804
1.5	Removing and installing seat pan cover and padding	808
1.6	Removing and installing backrest cover and padding	820
1.7	Separating seat pan cover and padding	832
1.8	Separating backrest cover and padding	835
1.9	Removing and installing head restraint cover and padding	837
1.10	Removing and installing seat heater element Z6/Z8	840
1.11	Removing and installing backrest heater element Z7/Z9	844
2	Covers and padding on rear seats	847

2.1	Assembly overview - cover and padding	847
2.2	Assembly overview - head restraint cover and padding	854
2.3	Assembly overview - seat heater elements	855
2.4	Removing and installing cover and padding	860
2.5	Removing and installing intermediate padding - backrest with load-through hatch	869
2.6	Detaching cover from padding	871
2.7	Removing and installing head restraint cover and padding	874
2.8	Removing and installing seat heater element	875
2.9	Removing and installing backrest heater element	877