

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Routing and attachment of lines and wiring	2
2.2 Contact corrosion	2
2.3 Bonding surfaces for self-adhesive components	2
2.4 Secure threaded connections	2
<b>50 - Body - front</b>	<b>3</b>
<b>1 Lock carrier</b>	<b>3</b>
1.1 Assembly overview - lock carrier	3
1.2 Removing and installing lock carrier	5
1.3 Setting service position and returning to normal position - S6/RS 6	13
<b>2 Wing</b>	<b>18</b>
2.1 Assembly overview - wing	18
2.2 Removing and installing wing	19
<b>3 Bulkhead</b>	<b>23</b>
3.1 Assembly overview - plenum chamber partition panel	23
3.2 Assembly overview - plenum chamber cover	23
3.3 Removing and installing plenum chamber partition panel	24
3.4 Removing and installing plenum chamber cover	28
<b>55 - Bonnet, rear lid</b>	<b>31</b>
<b>1 Bonnet</b>	<b>31</b>
1.1 Assembly overview - bonnet	31
1.2 Assembly overview - Bowden cable	35
1.3 Removing and installing bonnet	36
1.4 Adjusting bonnet	38
1.5 Removing and installing hinges	40
1.6 Removing and installing striker	41
1.7 Removing and installing gas strut	43
1.8 Releasing gas from gas strut	44
1.9 Removing and installing insulation	44
1.10 Removing and installing Bowden cable	45
1.11 Removing and installing bonnet lock	49
1.12 Removing and installing operating lever for bonnet lock	50
<b>2 Rear lid</b>	<b>53</b>
2.1 Assembly overview - rear lid	53
2.2 Removing and installing rear lid	59
2.3 Adjusting rear lid	65
2.4 Removing and installing hinges	71
2.5 Removing and installing rear lid seal	75
2.6 Removing and installing gas strut	80
2.7 Releasing gas from gas strut	81
2.8 Removing and installing striker	81
2.9 Removing and installing actuating mechanism	83
2.10 Removing and installing rear lid power opening control unit J938	90
2.11 Removing and installing rear lid power opening sender G750/G760	92
2.12 Removing and installing rear lid lock	94
2.13 Removing and installing extension spring	98
<b>3 Tank flap unit</b>	<b>101</b>



3.1	Assembly overview - tank flap unit	101
3.2	Removing and installing tank flap unit	103
<b>4</b>	<b>Charging flap unit</b>	<b>107</b>
4.1	Assembly overview - charging flap unit	107
4.2	Removing and installing charging flap unit	107
4.3	Removing and installing charging flap unit trim	109
4.4	Removing and installing manual release cable	110
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>111</b>
<b>1</b>	<b>Door</b>	<b>111</b>
1.1	Assembly overview - door	111
1.2	Assembly overview - door seals	113
1.3	Removing and installing door	114
1.4	Adjusting door	115
1.5	Adjusting striker	120
1.6	Removing and installing door arrester	120
1.7	Removing and installing inner door seal	122
1.8	Removing and installing outer door seal	123
<b>2</b>	<b>Door components</b>	<b>132</b>
2.1	Assembly overview - window regulator	132
2.2	Assembly overview - door handle and door lock	134
2.3	Assembly overview - window guides and window slot seals	138
2.4	Removing and installing window regulator	139
2.5	Removing and installing window regulator motor	141
2.6	Removing and installing door handle	142
2.7	Removing and installing mounting bracket	148
2.8	Removing and installing door lock	149
2.9	Removing and installing striker	153
2.10	Removing and installing inner door cover	154
2.11	Removing and installing power latching motor	155
2.12	Removing and installing window guide	156
2.13	Removing and installing outer window slot seal	158
<b>3</b>	<b>Central locking system</b>	<b>162</b>
3.1	Overview of fitting locations - central locking system	162
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	164
3.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	165
3.4	Removing and installing convenience system central control unit J393	166
3.5	Removing and installing interface control unit for vehicle location system J843	170
3.6	Removing and installing bonnet contact switch F266	171
3.7	Removing and installing tank filler flap locking motor V155	171
3.8	Removing and installing actuator for high-voltage charging flap lock 1 F496	172
<b>58</b>	<b>Rear doors, door components</b>	<b>174</b>
<b>1</b>	<b>Door</b>	<b>174</b>
1.1	Assembly overview - door	174
1.2	Assembly overview - door seals	176
1.3	Removing and installing door	177
1.4	Adjusting door	178
1.5	Adjusting striker	184
1.6	Removing and installing door arrester	184
1.7	Removing and installing inner door seal	185
1.8	Removing and installing outer door seal	187
<b>2</b>	<b>Door components</b>	<b>196</b>
2.1	Assembly overview - window regulator	196

2.2	Assembly overview - door handle and door lock .....	198
2.3	Assembly overview - window guides and window slot seals .....	201
2.4	Removing and installing window regulator .....	202
2.5	Removing and installing window regulator motor .....	204
2.6	Removing and installing door handle .....	206
2.7	Removing and installing mounting bracket .....	210
2.8	Removing and installing door lock .....	212
2.9	Removing and installing striker .....	216
2.10	Removing and installing inner door cover .....	216
2.11	Removing and installing power latching motor V329 .....	217
2.12	Removing and installing window guide .....	218
2.13	Removing and installing window slot seal .....	220
<b>60</b>	<b>- Sunroof .....</b>	<b>223</b>
<b>1</b>	<b>Sliding sunroof .....</b>	<b>223</b>
1.1	Assembly overview - sliding sunroof .....	223
1.2	Assembly overview - sunroof roller blind .....	228
1.3	Removing and installing sliding sunroof frame .....	229
1.4	Removing and installing sliding sunroof panel .....	233
1.5	Adjusting sliding sunroof panel .....	235
1.6	Removing and installing glass panel .....	236
1.7	Checking and adjusting zero position for guide rail .....	237
1.8	Removing and installing sliding sunroof adjustment control unit J245 .....	239
1.9	Adapting sliding sunroof adjustment control unit J245 .....	239
1.10	Removing and installing sliding sunroof seals .....	240
1.11	Removing and installing sunroof roller blind .....	242
1.12	Removing and installing cables for sunroof roller blind .....	245
1.13	Removing and installing sunroof sun blind .....	246
1.14	Removing and installing wind deflector .....	247
<b>2</b>	<b>Water drain hoses .....</b>	<b>250</b>
2.1	Assembly overview - water drain hoses .....	250
2.2	Cleaning water drain hoses .....	252
2.3	Removing and installing water drain hoses .....	253
<b>63</b>	<b>- Bumpers .....</b>	<b>258</b>
<b>1</b>	<b>Front bumper .....</b>	<b>258</b>
1.1	Assembly overview - bumper cover .....	258
1.2	Assembly overview - impact bar .....	266
1.3	Removing and installing bumper cover .....	268
1.4	Removing and installing impact bar .....	275
1.5	Removing and installing attachments .....	284
<b>2</b>	<b>Bumper (rear) .....</b>	<b>301</b>
2.1	Assembly overview - bumper cover .....	301
2.2	Assembly overview - impact bar .....	311
2.3	Removing and installing bumper cover .....	315
2.4	Removing and installing impact bar .....	320
2.5	Removing and installing cable mounting bracket .....	324
2.6	Removing and installing attachments .....	325
<b>64</b>	<b>- Glazing .....</b>	<b>339</b>
<b>1</b>	<b>Repair instructions .....</b>	<b>339</b>
1.1	Minimum drying times for bonded windows .....	339
1.2	Repairing windows .....	340
1.3	Notes on installing flush-bonded windows .....	340
1.4	Preparing undamaged windows for installation .....	343
1.5	Preparing new windows for installation .....	344



1.6	Preparing body flange for installation	346
1.7	Cleaning off adhesive sealant	346
1.8	Re-sealing windows	347
<b>2</b>	<b>Windscreen</b>	<b>348</b>
2.1	Assembly overview - windscreen	348
2.2	Removing and installing windscreen	350
<b>3</b>	<b>Rear window</b>	<b>357</b>
3.1	Assembly overview - rear window	357
3.2	Removing and installing rear window	360
<b>4</b>	<b>Side windows</b>	<b>370</b>
4.1	Assembly overview - rear side window	370
4.2	Removing and installing rear side window	371
<b>5</b>	<b>Door windows</b>	<b>376</b>
5.1	Assembly overview - front door window	376
5.2	Assembly overview - rear door window	378
5.3	Removing and installing front door window	380
5.4	Removing and installing rear door window	382
<b>66</b>	<b>Exterior equipment</b>	<b>385</b>
<b>1</b>	<b>Radiator grille/front trim</b>	<b>385</b>
1.1	Assembly overview - radiator grille	385
1.2	Removing and installing radiator grille	390
<b>2</b>	<b>Spoilers</b>	<b>396</b>
2.1	Assembly overview - spoiler	396
2.2	Removing and installing spoiler	397
<b>3</b>	<b>Strips/trim panels/extensions</b>	<b>402</b>
3.1	Assembly overview - trim strip and covers	402
3.2	Assembly overview - sill panel trim	405
3.3	Assembly overview - side member trim	406
3.4	Assembly overview - trim panel for B-pillar	411
3.5	Assembly overview - trim panel for C-pillar	412
3.6	Assembly overview - wheel arch covers	413
3.7	Assembly overview - heat shield	415
3.8	Removing and installing trim strip	418
3.9	Removing and installing sill panel trim	428
3.10	Removing and installing cover	430
3.11	Removing and installing side member trim	432
3.12	Removing and installing water deflector strip	436
3.13	Removing and installing trim panel for B-pillar on door	437
3.14	Removing and installing trim panel for C-pillar on door	439
3.15	Removing and installing wheel arch covers	440
3.16	Removing and installing heat shield for floor	445
<b>4</b>	<b>Noise insulation</b>	<b>461</b>
4.1	Assembly overview - noise insulation	461
4.2	Removing and installing noise insulation	461
<b>5</b>	<b>Underbody cladding</b>	<b>463</b>
5.1	Assembly overview - underbody cladding	463
5.2	Assembly overview - underbody struts	465
5.3	Removing and installing underbody cladding	466
5.4	Removing and installing tunnel cross-piece	472
5.5	Removing and installing diagonal struts	473
<b>6</b>	<b>Decorative film/protective film</b>	<b>475</b>
6.1	Assembly overview - protective film	475
6.2	Renewing protective film	476

<b>7</b>	<b>Roof strips/roof rails</b> .....	<b>477</b>
7.1	Assembly overview - roof rail .....	477
7.2	Removing and installing roof rail .....	477
<b>8</b>	<b>Exterior mirror</b> .....	<b>479</b>
8.1	Assembly overview - exterior mirror .....	479
8.2	Removing and installing exterior mirror .....	481
8.3	Removing and installing mirror glass .....	482
8.4	Removing and installing mirror adjustment unit .....	483
8.5	Removing and installing mirror cover .....	484
<b>9</b>	<b>Wheel housing liner</b> .....	<b>486</b>
9.1	Assembly overview - wheel housing liner (front) .....	486
9.2	Assembly overview - wheel housing liner (rear) .....	489
9.3	Removing and installing wheel housing liner (front) .....	490
9.4	Removing and installing wheel housing liner (rear) .....	496
<b>10</b>	<b>Lettering and badges</b> .....	<b>499</b>
10.1	General notes .....	499
10.2	Dimensions - lettering and badges on rear .....	499
10.3	Dimensions - lettering and badges on side .....	502
10.4	Removing and installing front badge .....	503
10.5	Removing and installing lettering .....	505
<b>11</b>	<b>Towing bracket</b> .....	<b>508</b>
11.1	Assembly overview - towing bracket .....	508
11.2	Removing and installing cable mounting bracket .....	510
11.3	Removing and installing retainer for cable mounting bracket .....	511
11.4	Removing and installing towing bracket .....	512