

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 General notes | 1 |
| 1.1 Type plates | 1 |
| 1.2 Notes on operation of auxiliary/supplementary heater on vehicles with diesel engine | 2 |
| 1.3 Starting conditions for auxiliary/supplementary heater | 2 |
| 1.4 Notes on auxiliary/supplementary heater | 2 |
| 1.5 Operating sequence for auxiliary heater | 4 |
| 1.6 Checking operation of coolant shut-off valve | 16 |
| 1.7 Rules for cleanliness when working on the auxiliary/supplementary heater and fuel system | 19 |
| 1.8 Overview of components for auxiliary heater in vehicle | 20 |
| 2 Safety precautions | 21 |
| 2.1 Safety precautions when working on the fuel system | 21 |
| 2.2 Safety precautions when working on vehicles with start/stop system | 21 |
| 2.3 Safety precautions when using testers and measuring instruments during a road test | 22 |
| 2.4 Safety precautions when working on the cooling system | 22 |
| 2.5 Safety precautions when working on vehicles with auxiliary/supplementary heater | 22 |
| 3 Repair instructions | 24 |
| 3.1 Rules for cleanliness | 24 |
| 3.2 General notes | 24 |
| 3.3 General repair instructions | 25 |
| 3.4 Contact corrosion | 25 |
| 3.5 Checking heating output | 26 |
| 3.6 Routing and attaching pipes, hoses and wiring | 26 |
| 3.7 Notes on general repairs | 26 |
| 82 - Auxiliary heating | 27 |
| 1 Overview of fitting locations - auxiliary/supplementary heater | 27 |
| 1.1 Overview of fitting locations - components not located in passenger compartment | 27 |
| 1.2 Overview of fitting locations - components in passenger compartment (front) | 31 |
| 2 Auxiliary/supplementary heater | 37 |
| 2.1 Overview of fitting locations - auxiliary/supplementary heater | 37 |
| 2.2 Exploded view - components inside auxiliary/supplementary heater | 41 |
| 2.3 Removing and installing auxiliary/supplementary heater | 45 |
| 2.4 Dismantling and assembling auxiliary/supplementary heater | 50 |
| 2.5 Removing and installing air intake silencer | 59 |
| 2.6 Removing and installing circulation pump V55 | 60 |
| 2.7 Removing and installing exhaust system | 63 |
| 2.8 Removing and installing bracket for auxiliary/supplementary heater | 64 |
| 2.9 Removing and installing flame monitor G64 | 64 |
| 2.10 Removing and installing temperature sensor G18 | 65 |
| 2.11 Removing and installing temperature sensor 2 for supplementary and auxiliary heating G587 | 67 |
| 2.12 Pin assignment for auxiliary/supplementary heater | 69 |
| 2.13 Checking electrical components on auxiliary/supplementary heater | 70 |
| 3 Coolant circuit with auxiliary/supplementary heater | 76 |
| 3.1 Connection diagram - coolant hoses | 76 |
| 3.2 Removing and installing heater coolant shut-off valve | 78 |
| 3.3 Bleeding coolant circuit | 81 |
| 4 Fuel supply system | 82 |
| 4.1 Overview of fitting locations - fuel supply system | 82 |
| 4.2 Fuel take-off from fuel tank | 85 |
| 4.3 Checking fuel delivery rate | 90 |



| | | |
|----------|---|------------|
| 4.4 | Removing and installing metering pump V54 | 94 |
| 4.5 | Routing of fuel line to auxiliary heater | 96 |
| 4.6 | Checking CO2 content in auxiliary heater exhaust gas | 98 |
| 5 | Auxiliary/supplementary heater control | 103 |
| 5.1 | Functional description | 103 |
| 5.2 | Switching auxiliary/supplementary heater on and off | 104 |
| 6 | Further control components | 110 |
| 6.1 | Removing and installing ambient temperature sensor | 110 |
| 6.2 | Removing and installing remote control receiver for auxiliary heater R64 | 110 |
| 6.3 | Functional description of remote control for auxiliary/supplementary heater | 111 |
| 6.4 | Adaption of remote control for auxiliary heater | 119 |