

Contents

00	Technical data	1
1	Identification	1
1.1	Gearbox identification	1
2	Technical data	2
2.1	Capacities	2
2.2	Allocation of gearbox to engine	2
3	Transmission layout	3
3.1	Transmission layout - front-wheel drive	3
4	Safety precautions	4
4.1	Safety precautions when working on vehicles with start/stop system	4
5	Repair instructions	5
5.1	General repair instructions	5
5.2	Contact corrosion	7
6	Electrical components	9
6.1	Overview of fitting locations - electrical components	9
30	Clutch	10
1	Clutch mechanism	10
1.1	Exploded view - pedal cluster	10
1.2	Exploded view - clutch hydraulics	13
1.3	Removing and installing clutch pedal	15
1.4	Removing and installing over-centre spring	16
1.5	Removing and installing clutch master cylinder	18
1.6	Removing and installing clutch slave cylinder	22
1.7	Bleeding clutch hydraulics	24
1.8	Checking clutch master cylinder and clutch slave cylinder	26
1.9	Servicing clutch release mechanism	27
2	Clutch	28
2.1	Exploded view - clutch module	28
2.2	Tightening sequence - clutch module to drive plate	29
2.3	Removing and installing clutch module	30
2.4	Servicing clutch	30
34	Controls, housing	31
1	Selector mechanism	31
1.1	Overview - selector mechanism	31
1.2	Exploded view - gear knob and cover	33
1.3	Exploded view - selector mechanism	34
1.4	Removing and installing gear knob	35
1.5	Removing and installing noise insulation	36
1.6	Removing and installing selector mechanism	37
1.7	Adjusting selector mechanism	43
1.8	Checking selector mechanism	46
1.9	Renewing selector shaft oil seal	47
1.10	Removing and installing gear detector switch F208	49
1.11	Removing and installing gear detection sensor G604	53
2	Removing and installing gearbox	58
2.1	Removing gearbox	58
2.2	Installing gearbox	96
2.3	Tightening torques for gearbox	117
3	Assembly mountings	120
3.1	Exploded view - assembly mountings	120



3.2	Removing and installing tunnel cross member	120
4	Transporting gearbox	123
5	Dismantling and assembling gearbox	124
6	Gear oil	125
6.1	Checking gear oil level	125
35 - Gears, shafts		126
1	Dismantling and assembling gears and shafts	126
39 - Final drive - front differential		127
1	Final drive	127
1.1	Renewing cover for final drive	127
2	Oil seals	134
2.1	Overview of fitting locations - oil seals	134
2.2	Renewing oil seal (right-side)	135
3	Differential	137
3.1	Removing and installing flange shaft (right-side)	137