

Contents

00	Technical data	1
1	Identification	1
1.1	Gearbox identification	1
2	Safety precautions	3
2.1	Safety precautions when working on vehicles with start/stop system	3
2.2	Safety precautions when working on subframe	3
3	Repair instructions	4
3.1	General repair instructions	4
3.2	Contact corrosion	6
4	Technical data	8
4.1	Allocation of gearbox to engine - Audi A6 2011 ►	8
4.2	Capacities	10
5	Transmission layout	11
5.1	Transmission layout - front-wheel drive	11
6	Electrical components	12
6.1	Overview of fitting locations - electrical components	12
30	Clutch	13
1	Clutch mechanism	13
1.1	Exploded view - pedal cluster	13
1.2	Exploded view - clutch hydraulics	16
1.3	Removing and installing over-centre spring	18
1.4	Removing and installing clutch pedal	20
1.5	Checking clutch master cylinder and clutch slave cylinder	21
1.6	Removing and installing clutch master cylinder	22
1.7	Bleeding clutch hydraulics	26
2	Clutch	29
2.1	Exploded view - clutch module	29
2.2	Tightening sequence - clutch module to drive plate	30
3	Removing and installing clutch module	33
4	Servicing clutch	34
34	Controls, housing	35
1	Selector mechanism	35
1.1	Overview - selector mechanism	35
1.2	Exploded view - gear knob and cover	37
1.3	Exploded view - selector mechanism	38
1.4	Removing and installing gear knob	39
1.5	Removing and installing noise insulation	40
1.6	Removing and installing selector mechanism	41
1.7	Adjusting selector mechanism	47
1.8	Checking selector mechanism	50
1.9	Renewing selector shaft oil seal	51
1.10	Removing and installing gear detection sensor G604	53
2	Removing and installing gearbox	58
2.1	Removing gearbox - vehicles with 4-cyl. TDI engine	58
2.2	Removing gearbox - vehicles with 4-cyl. TFSI engine	71
2.3	Installing gearbox	82
2.4	Tightening torques for gearbox	94
3	Transporting gearbox	96
4	Assembly mountings	97



4.1	Exploded view - assembly mountings	97
4.2	Removing and installing tunnel cross member	97
4.3	Removing and installing gearbox support with gearbox mounting	99
4.4	Removing and installing gearbox mounting	100
5	Gear oil	101
5.1	Checking gear oil level	101
6	Dismantling and assembling gearbox	105
35 - Gears, shafts		106
1	Dismantling and assembling gears and shafts	106
39 - Final drive - front differential		107
1	Oil seals	107
1.1	Overview of fitting locations - oil seals	107
1.2	Renewing oil seal (right-side)	108
1.3	Renewing sealing cap for output shaft in gearbox cover	109
2	Differential	111
2.1	Removing and installing flange shaft (left-side)	111
2.2	Removing and installing flange shaft (right-side)	111