

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions when working on high-voltage vehicles .....	2
2.2 Safety precautions when working on vehicles with start/stop system .....	6
2.3 Safety precautions when using testers and measuring instruments during a road test .....	7
2.4 Safety precautions when working on subframe .....	7
2.5 Safety precautions when tow-starting and towing .....	7
<b>3 Repair instructions</b> .....	<b>8</b>
3.1 Rules for cleanliness .....	8
3.2 General notes .....	8
3.3 General repair instructions .....	9
3.4 Contact corrosion .....	11
3.5 Routing and attaching lines and wiring .....	11
<b>4 Technical data</b> .....	<b>12</b>
4.1 Capacities .....	12
4.2 Allocation of gearbox to engine .....	12
<b>32 - Torque converter</b> .....	<b>14</b>
<b>1 Torque converter</b> .....	<b>14</b>
<b>37 - Controls, housing</b> .....	<b>15</b>
<b>1 Selector mechanism</b> .....	<b>15</b>
1.1 Exploded view - selector lever handle .....	15
1.2 Exploded view - selector mechanism .....	16
1.3 Exploded view - selector lever cable .....	18
1.4 Manual release from position P .....	19
1.5 Removing and installing selector lever handle .....	19
1.6 Removing and installing selector mechanism .....	22
1.7 Checking selector mechanism .....	24
1.8 Removing and installing selector lever cable .....	26
1.9 Checking and adjusting selector lever cable .....	32
1.10 Removing and installing selector lever lock solenoid N110 .....	36
1.11 Removing and installing selector lever sensors control unit J587 .....	38
1.12 Removing and installing gear selector position P switch F305 .....	38
1.13 Renewing selector shaft oil seal .....	38
<b>2 Removing and installing gearbox</b> .....	<b>41</b>
2.1 Removing gearbox .....	41
2.2 Installing gearbox .....	54
2.3 Tightening torques for gearbox .....	62
<b>3 Assembly mountings</b> .....	<b>64</b>
3.1 Exploded view - assembly mountings .....	64
3.2 Removing and installing tunnel cross member .....	64
<b>4 Transporting gearbox</b> .....	<b>67</b>
<b>5 Securing to engine and gearbox support</b> .....	<b>69</b>
<b>6 ATF circuit</b> .....	<b>70</b>
6.1 Exploded view - ATF circuit .....	70
6.2 Removing and installing ATF cooler .....	71
6.3 Removing and installing ATF lines .....	74
<b>7 ATF</b> .....	<b>79</b>



7.1	Checking ATF level	79
7.2	Draining and filling ATF	82
<b>38</b>	<b>- Gears, control</b>	<b>87</b>
<b>1</b>	<b>ATF system</b>	<b>87</b>
1.1	Removing and installing oil pan	87
1.2	Removing and installing ATF strainer	90
<b>2</b>	<b>Mechatronic unit</b>	<b>92</b>
<b>3</b>	<b>Electric drive motor</b>	<b>93</b>
3.1	Exploded view - electric drive motor	93
3.2	General description - electric drive motor	94
3.3	Performing basic setting for electric drive motor	94
3.4	Removing and installing electric drive motor	95
3.5	Checking hub of electric drive motor	102
3.6	Renewing oil seal for electric drive motor	102
<b>39</b>	<b>- Final drive - differential</b>	<b>104</b>
<b>1</b>	<b>Final drive</b>	<b>104</b>
1.1	Exploded view - final drive	104
1.2	Removing and installing gearbox end cover	107
<b>2</b>	<b>Gear oil</b>	<b>111</b>
2.1	Overview of fitting locations - drain and inspection plugs	111
2.2	Checking gear oil level	112
2.3	Draining and filling gear oil	115
<b>3</b>	<b>Oil seals</b>	<b>125</b>
3.1	Overview of fitting locations - oil seals	125
3.2	Renewing oil seal (left-side)	125
3.3	Renewing oil seal (right-side)	129
3.4	Renewing O-ring on cover for front final drive	130
<b>4</b>	<b>Differential</b>	<b>132</b>
4.1	Removing and installing flange shaft (left-side)	132
4.2	Removing and installing flange shaft (right-side)	133
4.3	Renewing ball bearing for flange shaft (left-side)	136
<b>5</b>	<b>Gearbox control system</b>	<b>139</b>
5.1	Overview of fitting locations - gearbox control system	139