

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Gearbox identification | 1 |
| 2 Safety precautions | 2 |
| 2.1 Safety precautions when working on vehicle | 2 |
| 2.2 Safety precautions when working on vehicles with start/stop system | 3 |
| 2.3 Safety precautions when using testers and measuring instruments during a road test | 3 |
| 2.4 Safety precautions when working on subframe | 3 |
| 2.5 Safety precautions when tow-starting and towing | 4 |
| 3 Repair instructions | 5 |
| 3.1 Rules for cleanliness | 5 |
| 3.2 General notes | 5 |
| 3.3 General repair instructions | 5 |
| 3.4 Contact corrosion | 7 |
| 3.5 Routing and attaching lines and wiring | 8 |
| 4 Technical data | 9 |
| 4.1 Capacities | 9 |
| 4.2 Allocation of gearbox to engine | 10 |
| 37 - Controls, housing | 12 |
| 1 Selector mechanism | 12 |
| 1.1 Exploded view - selector lever handle | 12 |
| 1.2 Exploded view - selector mechanism | 13 |
| 1.3 Exploded view - selector lever cable | 15 |
| 1.4 Manual release from position P | 15 |
| 1.5 Removing and installing selector lever handle | 16 |
| 1.6 Removing and installing selector mechanism | 19 |
| 1.7 Checking selector mechanism | 21 |
| 1.8 Removing and installing selector lever cable | 23 |
| 1.9 Checking and adjusting selector lever cable | 27 |
| 1.10 Removing and installing selector lever lock solenoid N110 | 31 |
| 1.11 Removing and installing selector lever sensors control unit J587 | 33 |
| 1.12 Removing and installing gear selector position P switch F305 | 34 |
| 1.13 Renewing selector shaft oil seal | 34 |
| 2 Removing and installing gearbox | 35 |
| 2.1 Removing gearbox | 35 |
| 2.2 Installing gearbox | 62 |
| 2.3 Tightening torques for gearbox | 70 |
| 3 Assembly mountings | 73 |
| 3.1 Exploded view - assembly mountings | 73 |
| 3.2 Removing and installing tunnel cross member | 73 |
| 4 Transporting gearbox | 76 |
| 5 Securing to engine and gearbox support | 77 |
| 6 ATF circuit | 78 |
| 6.1 Exploded view - ATF circuit | 78 |
| 6.2 Removing and installing ATF cooler | 79 |
| 6.3 Removing and installing ATF filter | 82 |
| 6.4 Removing and installing ATF lines | 84 |
| 7 ATF | 87 |
| 7.1 Checking ATF level | 87 |
| 7.2 Draining and filling ATF | 93 |



| | |
|--|------------|
| 38 - Gears, control | 99 |
| 1 Dismantling and assembling gearbox | 99 |
| 1.1 Exploded view - dual-mass flywheel | 99 |
| 1.2 Exploded view - gearbox control system | 99 |
| 1.3 Removing and installing dual-mass flywheel | 100 |
| 1.4 Removing and installing end cover | 100 |
| 39 - Final drive - differential | 103 |
| 1 Final drive | 103 |
| 1.1 Exploded view - final drive | 103 |
| 2 Gear oil | 105 |
| 2.1 Checking gear oil level | 105 |
| 2.2 Draining and filling gear oil | 106 |
| 3 Oil seals | 109 |
| 3.1 Overview of fitting locations - oil seals | 109 |
| 3.2 Renewing oil seal (left-side) | 109 |
| 3.3 Renewing oil seal (right-side) | 110 |
| 3.4 Renewing oil seal for input shaft | 110 |
| 4 Differential | 111 |
| 4.1 Removing and installing flange shaft (left-side) | 111 |
| 4.2 Removing and installing flange shaft (right-side) | 111 |
| 5 Gearbox control system | 114 |
| 5.1 Overview of fitting locations - gearbox control system | 114 |
| 5.2 Removing and installing gearbox control unit | 117 |
| 5.3 Removing and installing hydraulic control unit | 117 |