



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair instructions</b>	<b>1</b>
1.1 Rules for cleanliness	1
1.2 General repair instructions	1
1.3 Contact corrosion	3
<b>30 - Clutch</b>	<b>4</b>
<b>1 Clutch</b>	<b>4</b>
1.1 Exploded view - flywheel and dual clutch	4
1.2 Removing and installing flywheel	5
1.3 Removing dual clutch	7
1.4 Installing dual clutch	10
<b>34 - Controls, housing</b>	<b>13</b>
<b>1 Mechatronic unit</b>	<b>13</b>
1.1 Exploded view - mechatronic unit	13
1.2 Removing and installing oil pan	17
1.3 Removing and installing ATF filter	18
1.4 Removing and installing mechatronic unit	19
1.5 Exploded view - printed circuits for mechatronic unit	27
1.6 Removing and installing printed circuits for mechatronic unit	30
1.7 Removing and installing exchangeable ATF filter	32
<b>2 Transporting gearbox</b>	<b>37</b>
<b>3 Dismantling and assembling gearbox</b>	<b>39</b>
3.1 Exploded view - transmission unit	39
3.2 Removing and installing sensor module with integrated senders and sensors G612 , G632 , G676 and printed circuit 3	41
3.3 Removing and installing oil pump and suction-jet pump	53
3.4 Renewing oil seals for partition in gearbox housing	56
<b>4 Securing to engine and gearbox support</b>	<b>60</b>
<b>5 ATF</b>	<b>62</b>
5.1 Exploded view - ATF drain, filler and inspection plugs	62
5.2 Draining and filling ATF	62
<b>35 - Gears, shafts</b>	<b>65</b>
<b>1 Input shaft</b>	<b>65</b>
1.1 Renewing ball bearing for input shaft	65
1.2 Renewing input shaft oil seal	68
<b>39 - Final drive - front differential</b>	<b>70</b>
<b>1 Final drive</b>	<b>70</b>
1.1 Exploded view - final drive	70
<b>2 Gear oil</b>	<b>72</b>
2.1 Exploded view - gear oil drain and inspection plugs	72
2.2 Draining and filling gear oil	72
2.3 Removing and installing gearbox oil temperature sender 2 G754	75
<b>3 Oil seals</b>	<b>77</b>
3.1 Renewing oil seal (left-side)	77
3.2 Renewing oil seal (right-side)	79
3.3 Renewing selector shaft oil seal	80
<b>4 Differential</b>	<b>81</b>
4.1 Removing and installing flange shaft (left-side)	81



4.2	Checking and adjusting preload of ball bearing for flange shaft (left-side) .....	83
4.3	Renewing mounting bracket and ball bearing for flange shaft (left-side) .....	89
4.4	Removing and installing flange shaft (right-side) .....	91
<b>5</b>	<b>Centre differential</b> .....	<b>94</b>
5.1	Exploded view - centre differential .....	94
5.2	Removing and installing centre differential .....	98
5.3	Servicing centre differential housing .....	105
5.4	Renewing oil seal for rear splined shaft .....	113