

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Identification</b>	1
2 <b>Safety precautions</b>	2
2.1     Safety precautions when working on the high-voltage system	2
2.2     Safety precautions when working in the vicinity of high-voltage components	3
2.3     Safety precautions for all vehicles	3
3 <b>Repair instructions</b>	4
<b>10 - Removing and installing engine</b>	<b>5</b>
1 <b>Removing and installing engine</b>	5
1.1     Removing engine	5
1.2     Securing engine to engine and gearbox support	32
1.3     Installing engine	32
2 <b>Assembly mountings</b>	39
2.1     Exploded view - assembly mountings	39
2.2     Supporting engine in installation position	42
2.3     Removing and installing engine mountings	43
2.4     Removing and installing torque reaction support and cross member	44
2.5     Removing and installing gearbox mounting	47
3 <b>Engine cover panel</b>	50
<b>13 - Crankshaft group</b>	<b>51</b>
1 <b>Cylinder block (pulley end)</b>	51
1.1     Exploded view - cylinder block (pulley end)	51
1.2     Removing and installing poly V-belt	51
1.3     Removing and installing tensioner for poly V-belt	51
1.4     Removing and installing vibration damper	51
1.5     Removing and installing bracket for ancillaries	51
2 <b>Cylinder block (gearbox end)</b>	55
3 <b>Crankshaft</b>	56
4 <b>Balance shaft</b>	57
5 <b>Pistons and conrods</b>	58
<b>15 - Cylinder head, valve gear</b>	<b>59</b>
1 <b>Timing chain cover</b>	59
2 <b>Chain drive</b>	60
2.1     Exploded view - camshaft timing chains	60
2.2     Exploded view - drive chain for balance shaft	60
2.3     Removing and installing bearing saddle	60
2.4     Removing camshaft timing chain from camshafts	60
2.5     Removing and installing camshaft timing chain	60
2.6     Removing and installing drive chain for balance shaft	61
2.7     Checking valve timing	61
3 <b>Cylinder head</b>	62
3.1     Exploded view - cylinder head	62
3.2     Removing and installing cylinder head	62
3.3     Checking compression	66
4 <b>Valve gear</b>	67
4.1     Exploded view - valve gear	67
4.2     Installing ball for slider	67
4.3     Removing and installing actuators for camshaft adjustment	67

4.4	Removing and installing camshaft .....	67
4.5	Removing and installing camshaft control valve 1 N205 .....	68
4.6	Removing and installing valve stem oil seals .....	68
5	Inlet and exhaust valves .....	69
<b>17 - Lubrication</b>	.....	<b>70</b>
1	<b>Sump/oil pump</b> .....	70
1.1	Exploded view - sump/oil pump .....	70
1.2	Engine oil .....	70
1.3	Removing and installing sump (bottom section) .....	70
1.4	Removing and installing oil pump .....	70
1.5	Removing and installing sump (top section) .....	70
1.6	Removing and installing oil level and oil temperature sender G266 .....	71
2	<b>Engine oil cooler</b> .....	72
3	<b>Crankcase breather</b> .....	73
3.1	Exploded view - crankcase breather system .....	73
3.2	Removing and installing oil separator .....	73
4	<b>Oil filter/oil pressure switches</b> .....	75
<b>19 - Cooling</b>	.....	<b>76</b>
1	<b>Cooling system/coolant</b> .....	76
1.1	Connection diagram - coolant hoses .....	76
1.2	Checking cooling system for leaks .....	83
1.3	Draining and filling cooling system .....	83
2	<b>Coolant pump/thermostat assembly</b> .....	90
2.1	Exploded view - coolant pump/thermostat .....	90
2.2	Exploded view - electric coolant pump .....	90
2.3	Removing and installing electric coolant pump .....	95
2.4	Removing and installing coolant pump .....	103
2.5	Removing and installing toothed belt for coolant pump .....	104
2.6	Removing and installing thermostat .....	105
2.7	Checking thermostat .....	105
2.8	Removing and installing coolant temperature sender G62 .....	105
2.9	Removing and installing coolant valves .....	106
3	<b>Coolant pipes</b> .....	108
3.1	Exploded view - coolant pipes .....	108
3.2	Removing and installing coolant pipes .....	111
4	<b>Radiator/radiator fans</b> .....	118
4.1	Exploded view - radiator/radiator fans .....	118
4.2	Exploded view - radiator cowl and radiator fans .....	120
4.3	Removing and installing radiator .....	120
4.4	Removing and installing radiator cowl .....	124
4.5	Removing and installing radiator fan V7 .....	127
4.6	Removing and installing radiator fan control unit J293 / J671 .....	128
4.7	Removing and installing auxiliary radiator .....	128
<b>21 - Turbocharging/supercharging</b>	.....	<b>130</b>
1	<b>Turbocharger</b> .....	130
1.1	Exploded view - turbocharger .....	130
1.2	Removing and installing turbocharger .....	130
1.3	Checking vacuum unit for turbocharger .....	132
2	<b>Charge air system</b> .....	133
2.1	Exploded view - charge air system .....	133
2.2	Exploded view - hose connections for charge air system .....	136

2.3	Removing and installing charge air cooler .....	136
2.4	Removing and installing charge pressure sender G31 .....	139
2.5	Checking charge air system for leaks .....	140
<b>24 - Mixture preparation - injection</b>	.....	<b>141</b>
1	<b>Injection system</b> .....	141
1.1	Overview of fitting locations - injection system .....	141
1.2	Checking fuel system for leaks .....	149
2	<b>Vacuum system</b> .....	150
3	<b>Air cleaner</b> .....	151
3.1	Exploded view - air cleaner housing .....	151
3.2	Removing and installing air cleaner housing .....	152
4	<b>Intake manifold</b> .....	154
4.1	Exploded view - intake manifold .....	154
4.2	Removing and installing intake manifold .....	154
4.3	Removing and installing throttle valve module J338 .....	164
4.4	Cleaning throttle valve module .....	165
4.5	Checking intake manifold change-over function .....	165
5	<b>Injectors</b> .....	166
6	<b>Senders and sensors</b> .....	167
6.1	Removing and installing intake air temperature sender G42 .....	167
6.2	Removing and installing air mass meter G70 .....	167
6.3	Removing and installing fuel pressure sender G247 .....	167
6.4	Checking fuel pressure sender G247 .....	167
7	<b>High-pressure pump</b> .....	168
8	<b>Lambda probe</b> .....	169
8.1	Exploded view - Lambda probe .....	169
8.2	Removing and installing Lambda probe .....	169
9	<b>Engine control unit</b> .....	172
9.1	Removing and installing engine/motor control unit J623 .....	172
9.2	Wiring and component check .....	174
<b>26 - Exhaust system</b>	.....	<b>175</b>
1	<b>Exhaust pipes/silencers</b> .....	175
1.1	Exploded view - silencers .....	175
1.2	Separating exhaust pipes/silencers .....	179
1.3	Removing and installing front silencer .....	181
1.4	Stress-free alignment of exhaust system .....	182
1.5	Checking exhaust system for leaks .....	183
2	<b>Emission control system</b> .....	184
2.1	Exploded view - emission control system .....	184
2.2	Removing and installing catalytic converter .....	184
2.3	Removing and installing exhaust flap control unit J883 .....	187
3	<b>Secondary air system</b> .....	189
3.1	Exploded view - secondary air system .....	189
3.2	Removing and installing secondary air pump motor V101 .....	190
3.3	Removing and installing secondary air inlet valve N112 .....	190
3.4	Removing and installing sender 1 for secondary air pressure G609 .....	191
4	<b>Exhaust manifold</b> .....	193
<b>28 - Ignition system</b>	.....	<b>194</b>
1	<b>Ignition system</b> .....	194
1.1	Exploded view - ignition system .....	194
1.2	Removing and installing ignition coils with output stages .....	194

1.3	Removing and installing knock sensor 1 G61	194
1.4	Removing and installing Hall sender	194
1.5	Removing and installing engine speed sender G28	195