

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine identification number/engine data	1
<b>2 Safety information</b>	<b>4</b>
2.1 Safety precautions when working on the fuel supply system	4
2.2 Safety precautions when working on vehicles with start/stop system	5
2.3 Safety precautions when using testers and measuring instruments during a road test	6
2.4 Safety precautions when working on the subframe	6
2.5 Safety precautions when working on the cooling system	6
2.6 Safety precautions when working on the ignition system	7
<b>3 Repair instructions</b>	<b>8</b>
3.1 Rules for cleanliness	8
3.2 Foreign material in engine	8
3.3 Contact corrosion	8
3.4 Routing and attachment of pipes, hoses and wiring	9
3.5 Installing radiators and condensers	9
3.6 Checking vacuum system	9
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Removing and installing engine</b>	<b>11</b>
1.1 Removing engine	11
1.2 Separating engine and gearbox	34
1.3 Securing engine to engine and gearbox support	56
1.4 Installing engine	60
<b>2 Assembly mountings</b>	<b>69</b>
2.1 Assembly overview - assembly mountings	69
2.2 Removing and installing engine mountings	72
2.3 Removing and installing gearbox mounting	78
<b>3 Engine cover panel</b>	<b>82</b>
3.1 Removing and installing engine cover panel	82
<b>13 - Crankshaft group</b>	<b>83</b>
<b>1 Cylinder block (pulley end)</b>	<b>83</b>
1.1 Assembly overview - poly V-belt drive	83
1.2 Removing and installing poly V-belt	85
1.3 Removing and installing poly V-belt tensioner	87
1.4 Removing and installing vibration damper	87
1.5 Removing and installing sealing flange (pulley end)	88
<b>2 Cylinder block (gearbox end)</b>	<b>93</b>
2.1 Assembly overview - cylinder block (gearbox end)	93
2.2 Removing and installing drive plate	95
2.3 Removing and installing sender wheel	96
2.4 Checking sender wheel	97
2.5 Renewing crankshaft oil seal (gearbox end)	98
2.6 Renewing needle bearing in drive plate	101
<b>3 Crankshaft</b>	<b>104</b>
3.1 Assembly overview - crankshaft	104
3.2 Crankshaft dimensions	109
3.3 Measuring axial clearance of crankshaft	109
3.4 Measuring radial clearance of crankshaft	110
<b>4 Balance shaft</b>	<b>112</b>
4.1 Assembly overview - balance shaft	112



4.2	Removing and installing balance shaft	112
<b>5</b>	<b>Pistons and conrods</b>	<b>115</b>
5.1	Assembly overview - pistons and conrods	115
5.2	Removing and installing pistons	118
5.3	Checking pistons and cylinder bores	120
5.4	Checking radial clearance of conrod bearings	121
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>123</b>
<b>1</b>	<b>Timing chain cover</b>	<b>123</b>
1.1	Assembly overview - timing chain cover	123
1.2	Removing and installing timing chain cover	127
<b>2</b>	<b>Chain drive</b>	<b>140</b>
2.1	Assembly overview - camshaft timing chains	140
2.2	Assembly overview - drive chain for valve gear	144
2.3	Assembly overview - drive chain for balance shaft and oil pump	146
2.4	Removing camshaft timing chain from camshafts	147
2.5	Removing and installing camshaft timing chain	162
2.6	Removing and installing drive chain for valve gear	164
2.7	Removing and installing drive chain for balance shaft and oil pump	166
<b>3</b>	<b>Cylinder head</b>	<b>172</b>
3.1	Assembly overview - cylinder head	172
3.2	Removing and installing cylinder head	178
3.3	Removing and installing cylinder head cover	208
3.4	Checking compression	210
<b>4</b>	<b>Valve gear</b>	<b>213</b>
4.1	Assembly overview - valve gear	213
4.2	Measuring axial clearance of camshaft	218
4.3	Measuring radial clearance of camshaft	219
4.4	Removing and installing camshaft	220
4.5	Removing and installing cam actuators	228
4.6	Removing and installing camshaft control valves	230
4.7	Checking hydraulic compensation elements	231
4.8	Removing and installing valve stem oil seals	233
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>244</b>
5.1	Checking valve guides	244
5.2	Checking valves	245
5.3	Valve dimensions	245
<b>17</b>	<b>- Lubrication</b>	<b>247</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>247</b>
1.1	Assembly overview - sump/oil pump	247
1.2	Engine oil	250
1.3	Removing and installing lower part of sump	251
1.4	Removing and installing upper part of sump	254
1.5	Removing and installing oil pump	258
1.6	Removing and installing oil level and oil temperature sender G266	259
<b>2</b>	<b>Engine oil cooler</b>	<b>260</b>
2.1	Removing and installing engine oil cooler	260
<b>3</b>	<b>Crankcase breather</b>	<b>262</b>
3.1	Assembly overview - crankcase breather system	262
3.2	Removing and installing crankcase breather hoses	264
3.3	Removing and installing oil separator	265
3.4	Removing and installing pressure regulating valve	266
3.5	Removing and installing oil drain valve	268
3.6	Removing and installing crankcase breather shut-off valve N548	269

<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>271</b>
4.1	Exploded view - oil filter housing/oil pressure switches	271
4.2	Removing and installing oil pressure switch F22	274
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	274
4.4	Checking oil pressure	276
4.5	Removing and installing oil filter housing	276
4.6	Removing and installing valve for oil pressure control N428	279
<b>19</b>	<b>Cooling</b>	<b>281</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>281</b>
1.1	Connection diagram - coolant hoses	281
1.2	Checking cooling system for leaks	285
1.3	Draining and filling cooling system	287
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>297</b>
2.1	Assembly overview - coolant pump/thermostat	297
2.2	Assembly overview - electric coolant pump	298
2.3	Removing and installing electric coolant pump	298
2.4	Removing and installing coolant pump	300
2.5	Removing and installing thermostat	301
2.6	Removing and installing coolant temperature sender G62	302
2.7	Removing and installing temperature sender for engine temperature regulation G694	303
2.8	Removing and installing coolant valves	304
<b>3</b>	<b>Coolant pipes</b>	<b>306</b>
3.1	Assembly overview - coolant pipes	306
3.2	Removing and installing coolant pipes	310
<b>4</b>	<b>Radiator/radiator fans</b>	<b>324</b>
4.1	Exploded view - radiator/radiator fans	324
4.2	Removing and installing radiator	326
4.3	Removing and installing radiator cowl	332
4.4	Removing and installing radiator fan V7	339
4.5	Removing and installing radiator fan control unit J293	340
<b>24</b>	<b>Mixture preparation - injection</b>	<b>342</b>
<b>1</b>	<b>Injection system</b>	<b>342</b>
1.1	Overview of fitting locations - injection system	342
1.2	Reducing fuel pressure in high-pressure section	363
1.3	Checking fuel system for leaks	364
<b>2</b>	<b>Air filter</b>	<b>365</b>
2.1	Assembly overview - air filter housing	365
2.2	Removing and installing air filter housing	366
<b>3</b>	<b>Intake manifold</b>	<b>369</b>
3.1	Exploded view - intake manifold	369
3.2	Assembly overview - lower part of intake manifold with fuel rail	373
3.3	Removing and installing intake manifold	375
3.4	Removing and installing upper part of intake manifold	378
3.5	Removing and installing lower part of intake manifold	381
3.6	Removing and installing throttle valve module J338	383
<b>4</b>	<b>Injectors</b>	<b>385</b>
4.1	Assembly overview - fuel rail with injectors	385
4.2	Removing and installing fuel rail	387
4.3	Removing and installing injectors	388
<b>5</b>	<b>Senders and sensors</b>	<b>402</b>
5.1	Removing and installing fuel pressure sender G247	402
<b>6</b>	<b>High-pressure pump</b>	<b>404</b>



6.1	Assembly overview - high-pressure pump	404
6.2	Removing and installing high-pressure pump	407
6.3	Removing and installing high-pressure pipe	412
<b>7</b>	<b>Lambda probe</b>	<b>415</b>
7.1	Assembly overview - Lambda probe	415
7.2	Removing and installing Lambda probe	416
<b>8</b>	<b>Engine control unit</b>	<b>424</b>
8.1	Wiring and component check	424
8.2	Removing and installing engine/motor control unit J623	426
<b>26</b>	<b>- Exhaust system</b>	<b>431</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>431</b>
1.1	Assembly overview - silencers	431
1.2	Separating exhaust pipes/silencers	436
1.3	Removing and installing front silencer	438
1.4	Stress-free alignment of exhaust system	439
1.5	Checking exhaust system for leaks	441
<b>2</b>	<b>Emission control system</b>	<b>442</b>
2.1	Removing and installing catalytic converter	442
<b>3</b>	<b>Secondary air system</b>	<b>455</b>
3.1	Assembly overview - secondary air system	455
3.2	Removing and installing secondary air pump motor V101	456
3.3	Checking combination valve for secondary air system	458
3.4	Removing and installing combination valve	462
<b>4</b>	<b>Exhaust manifolds</b>	<b>467</b>
4.1	Assembly overview - exhaust manifolds	467
4.2	Removing and installing exhaust manifolds	469
<b>28</b>	<b>- Ignition system</b>	<b>479</b>
<b>1</b>	<b>Ignition system</b>	<b>479</b>
1.1	Assembly overview - ignition system	479
1.2	Test data - spark plugs	483
1.3	Removing and installing ignition coils with output stages	483
1.4	Removing and installing knock sensor	486
1.5	Removing and installing Hall senders	490
1.6	Removing and installing engine speed sender G28	493