

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine number/engine data .....	1
<b>2 Safety information</b> .....	<b>2</b>
2.1 Safety precautions when working on the fuel supply system .....	2
2.2 Safety precautions when working on vehicles with start/stop system .....	2
2.3 Safety precautions after working in the engine compartment .....	3
2.4 Safety precautions when using testers and measuring instruments during a road test .....	3
2.5 Safety precautions when working on the cooling system .....	3
2.6 Safety precautions when working on the exhaust system .....	3
2.7 Safety precautions when working on the ignition system .....	4
2.8 Safety precautions when working on the subframe .....	4
<b>3 Repair instructions</b> .....	<b>5</b>
3.1 Rules for cleanliness .....	5
3.2 Foreign material in engine .....	5
3.3 Contact corrosion .....	6
3.4 Routing and attachment of pipes, hoses and wiring .....	6
3.5 Nuts, bolts .....	6
3.6 Identification plates .....	6
3.7 Use of impact wrenches .....	7
3.8 Installing radiators and condensers .....	7
<b>10 - Removing and installing engine</b> .....	<b>8</b>
<b>1 Removing and installing engine</b> .....	<b>8</b>
1.1 Removing engine .....	8
1.2 Separating engine and gearbox .....	52
1.3 Removing engine from scissor-type assembly platform .....	69
1.4 Securing engine to engine and gearbox support .....	72
1.5 Installing engine .....	74
<b>2 Assembly mountings</b> .....	<b>79</b>
2.1 Assembly overview - assembly mountings .....	79
2.2 Supporting engine in installation position .....	83
2.3 Removing and installing engine mountings .....	85
2.4 Removing and installing gearbox mounting .....	96
2.5 Removing and installing power unit mounting senders .....	98
2.6 Removing and installing power unit mounting control unit J931 .....	100
2.7 Calibrating electrohydraulic engine mounting .....	100
<b>3 Engine cover panel</b> .....	<b>102</b>
3.1 Removing and installing engine cover panel .....	102
<b>13 - Crankshaft group</b> .....	<b>104</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>104</b>
1.1 Assembly overview - poly V-belt drive .....	104
1.2 Removing and installing poly V-belt .....	106
1.3 Removing and installing poly V-belt tensioner .....	108
1.4 Removing and installing vibration damper .....	110
1.5 Renewing crankshaft oil seal (pulley end) .....	111
<b>2 Cylinder block (gearbox end)</b> .....	<b>114</b>
2.1 Assembly overview - cylinder block (gearbox end) .....	114
2.2 Removing and installing drive plate .....	114
2.3 Renewing crankshaft oil seal (gearbox end) .....	116
<b>3 Crankshaft</b> .....	<b>119</b>



3.1	Assembly overview - crankshaft	119
3.2	Crankshaft dimensions	124
3.3	Allocation of main bearing shells	125
3.4	Measuring axial clearance of crankshaft	128
3.5	Measuring radial clearance of crankshaft	129
3.6	Removing and installing sender wheel	130
3.7	Checking sender wheel	130
<b>4</b>	<b>Auxiliary drive</b>	<b>132</b>
4.1	Assembly overview - auxiliary drive	132
4.2	Removing and installing spur gear drive	133
4.3	Renewing oil seal for power steering vane pump drive	136
4.4	Renewing oil seal for AC compressor drive	138
<b>5</b>	<b>Pistons and conrods</b>	<b>141</b>
5.1	Assembly overview - pistons and conrods	141
5.2	Removing and installing pistons	144
5.3	Checking pistons and cylinder bores	146
5.4	Checking radial clearance of conrod bearings	148
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>150</b>
<b>1</b>	<b>Timing chain cover</b>	<b>150</b>
1.1	Assembly overview - timing chain cover	150
1.2	Removing and installing timing chain cover	154
<b>2</b>	<b>Chain drive</b>	<b>172</b>
2.1	Assembly overview - camshaft timing chains	172
2.2	Assembly overview - drive chain for valve gear	176
2.3	Assembly overview - drive chain for auxiliary drive	178
2.4	Removing camshaft timing chain from camshafts	178
2.5	Removing and installing camshaft timing chain	196
2.6	Removing and installing chain tensioner for camshaft timing chain	196
2.7	Removing and installing drive chain for valve gear	198
2.8	Removing and installing drive chain for auxiliary drive	200
<b>3</b>	<b>Cylinder head</b>	<b>202</b>
3.1	Assembly overview - cylinder head	202
3.2	Removing and installing cylinder head	205
3.3	Checking compression	219
<b>4</b>	<b>Valve gear</b>	<b>221</b>
4.1	Assembly overview - valve gear	221
4.2	Measuring axial clearance of camshaft	226
4.3	Measuring radial clearance of camshaft	227
4.4	Removing and installing camshaft	227
4.5	Removing and installing cam actuators	249
4.6	Removing and installing camshaft control valves	251
4.7	Removing and installing valve stem oil seals	254
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>266</b>
5.1	Checking valve guides	266
5.2	Checking valves	267
5.3	Valve dimensions	267
<b>17</b>	<b>Lubrication</b>	<b>269</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>269</b>
1.1	Assembly overview - sump/oil pump	269
1.2	Engine oil	273
1.3	Removing and installing lower part of sump	274
1.4	Removing and installing upper part of sump	277
1.5	Removing and installing oil pump	282

1.6	Removing and installing oil level and oil temperature sender G266	285
<b>2</b>	<b>Engine oil cooler</b>	<b>286</b>
2.1	Assembly overview - engine oil cooler	286
2.2	Removing and installing engine oil cooler	288
<b>3</b>	<b>Crankcase breather</b>	<b>294</b>
3.1	Assembly overview - crankcase breather system	294
3.2	Removing and installing oil separator	295
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>296</b>
4.1	Assembly overview - oil filter	296
4.2	Assembly overview - oil pressure switches/oil pressure control	296
4.3	Removing and installing oil pressure switches F22/F378	298
4.4	Removing and installing stage 3 oil pressure switch F447	300
4.5	Removing and installing oil temperature sender 2 G664	301
4.6	Checking oil pressure	301
4.7	Removing and installing valve for oil pressure control N428	302
4.8	Removing and installing piston cooling jet control valve N522	303
<b>5</b>	<b>Oil circuit</b>	<b>304</b>
5.1	Assembly overview - mechanical switching valve, non-return valve, cover in inner V of engine	304
5.2	Removing and installing cover in inner V of engine	306
5.3	Removing and installing non-return valve	308
5.4	Removing and installing mechanical switching valve	308
<b>19</b>	<b>Cooling</b>	<b>310</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>310</b>
1.1	Connection diagram - coolant hoses	310
1.2	Checking cooling system for leaks	316
1.3	Draining and filling cooling system	319
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>330</b>
2.1	Assembly overview - coolant pump/thermostat	330
2.2	Assembly overview - electric coolant pump	332
2.3	Assembly overview - coolant temperature senders	335
2.4	Removing and installing electric coolant pump	336
2.5	Removing and installing coolant pump	345
2.6	Checking thermostat	348
2.7	Removing and installing map-controlled engine cooling system thermostat F265	348
2.8	Removing and installing coolant temperature senders G62/G694	349
2.9	Removing and installing radiator outlet coolant temperature sender G83	351
2.10	Removing and installing coolant valves	352
<b>3</b>	<b>Coolant pipes</b>	<b>355</b>
3.1	Assembly overview - coolant pipes	355
3.2	Removing and installing coolant pipes	359
<b>4</b>	<b>Radiators/radiator fans</b>	<b>383</b>
4.1	Assembly overview - radiators/radiator fans	383
4.2	Assembly overview - auxiliary radiator	387
4.3	Assembly overview - radiator cowl and radiator fans	390
4.4	Removing and installing radiator	391
4.5	Removing and installing water radiator for charge air cooling circuit	404
4.6	Removing and installing radiator cowl	409
4.7	Removing and installing radiator fan V7	413
4.8	Removing and installing auxiliary radiator	414
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>422</b>
<b>1</b>	<b>Turbochargers</b>	<b>422</b>
1.1	Assembly overview - turbocharger	422



1.2	Removing and installing turbocharger	426
1.3	Removing and installing temperature sender for engine cover panel G765	434
<b>2</b>	<b>Charge air system</b>	<b>437</b>
2.1	Assembly overview - charge air system	437
2.2	Assembly overview - hose connections for charge air system	439
2.3	Removing and installing charge air cooler housing	440
2.4	Removing and installing charge air cooler	442
2.5	Removing and installing charge pressure sender G31	444
2.6	Removing and installing charge pressure sender 2 G447	446
2.7	Removing and installing turbocharger air recirculation valve N249	447
2.8	Removing and installing turbocharger air recirculation valve, cylinder bank 2 N427	449
<b>24</b>	<b>Mixture preparation - injection</b>	<b>451</b>
<b>1</b>	<b>Injection system</b>	<b>451</b>
1.1	Overview of fitting locations - injection system	451
1.2	Checking fuel system for leaks	463
<b>2</b>	<b>Vacuum system</b>	<b>464</b>
2.1	Connection diagram - vacuum system	464
2.2	Checking vacuum system	465
2.3	Removing and installing vacuum unit for intake manifold flap	466
2.4	Removing and installing charge pressure control solenoid valve N75	471
2.5	Removing and installing secondary air inlet valve N112/N320	471
2.6	Removing and installing intake manifold flap valve N316	479
2.7	Removing and installing coolant valve for cylinder head N489	480
<b>3</b>	<b>Air filter</b>	<b>481</b>
3.1	Assembly overview - air filter housing	481
3.2	Removing and installing air filter housing	481
<b>4</b>	<b>Intake manifold</b>	<b>484</b>
4.1	Assembly overview - intake manifold	484
4.2	Assembly overview - throttle valve module	486
4.3	Removing and installing intake manifold	488
4.4	Removing and installing throttle valve module J338	496
4.5	Removing and installing intake manifold flap potentiometer G336	499
4.6	Removing and installing intake manifold flap potentiometer 2 G512	502
<b>5</b>	<b>Injectors</b>	<b>504</b>
5.1	Removing and installing injectors	504
5.2	Cleaning injectors	508
<b>6</b>	<b>Senders and sensors</b>	<b>510</b>
6.1	Removing and installing actuator for structure-borne sound R214	510
6.2	Removing and installing control unit for structure-borne sound J869	511
6.3	Removing and installing fuel pressure sender G247	511
6.4	Removing and installing fuel pressure sender 2 G624	513
6.5	Removing and installing fuel pressure sender for low pressure G410	514
6.6	Removing and installing temperature senders for charge air cooler G763/G764	515
6.7	Removing and installing intake air temperature sender G42	516
6.8	Removing and installing intake manifold pressure sender G71	517
<b>7</b>	<b>High-pressure pump</b>	<b>518</b>
7.1	Assembly overview - high-pressure pump	518
7.2	Assembly overview - fuel pipes and fuel rail	520
7.3	Removing and installing high-pressure pump	524
7.4	Removing and installing high-pressure pipe	529
<b>8</b>	<b>Lambda probe</b>	<b>535</b>
8.1	Assembly overview - Lambda probe	535
8.2	Removing and installing Lambda probe	535

<b>9</b>	<b>Engine control unit</b> .....	<b>541</b>
9.1	Wiring and component check .....	541
9.2	Removing and installing engine control unit J623 .....	543
<b>26</b>	<b>- Exhaust system</b> .....	<b>547</b>
<b>1</b>	<b>Exhaust pipes/silencers</b> .....	<b>547</b>
1.1	Assembly overview - silencers .....	547
1.2	Separating exhaust pipes/silencers .....	551
1.3	Removing and installing front silencers .....	552
1.4	Removing and installing silencer .....	554
1.5	Stress-free alignment of exhaust system .....	555
1.6	Checking exhaust system for leaks .....	556
<b>2</b>	<b>Emission control system</b> .....	<b>557</b>
2.1	Removing and installing catalytic converter .....	557
2.2	Removing and installing exhaust flap control unit J883 / exhaust flap control unit 2 J945 ..	561
<b>3</b>	<b>Secondary air system</b> .....	<b>563</b>
3.1	Assembly overview - secondary air system .....	563
3.2	Removing and installing secondary air pump motor V101 .....	565
3.3	Checking secondary air inlet valve .....	568
3.4	Removing and installing combination valve .....	570
3.5	Removing and installing sender 1 for secondary air pressure G609 .....	571
<b>28</b>	<b>- Ignition system</b> .....	<b>572</b>
<b>1</b>	<b>Ignition system</b> .....	<b>572</b>
1.1	Assembly overview - ignition system .....	572
1.2	Test data - spark plugs .....	574
1.3	Removing and installing ignition coils with output stages .....	574
1.4	Removing and installing knock sensor .....	580
1.5	Removing and installing Hall senders .....	586
1.6	Removing and installing engine speed sender G28 .....	590