

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Rules for cleanliness when working on the injection system	3
1.6 Important: Required procedure prior to opening high-pressure injection system	4
1.7 Checking for leaks in the fuel system	5
1.8 Checking vacuum system	5
2 Technical data	6
3 Overview of fitting locations	7
4 Air cleaner	16
4.1 Air cleaner - exploded view	16
4.2 Removing and installing air filter element	17
4.3 Removing air cleaner housing	19
5 Intake manifold, fuel rail and injectors	21
5.1 Intake manifold - exploded view	21
5.2 Removing and installing intake manifold	22
5.3 Fuel rail - exploded view	24
5.4 Removing and installing fuel rail	25
5.5 Removing and installing injectors	26
5.6 Removing and installing fuel pressure sender G247	30
6 High-pressure pump	31
6.1 High-pressure pump - exploded view	31
6.2 Removing and installing high-pressure pipes	33
6.3 Removing and installing high-pressure pump	34
7 Lambda probes	39
7.1 Lambda probes - overview	39
7.2 Removing and installing Lambda probes	40
8 Engine control unit	47
8.1 Wiring and component check with test box V.A.G 1598/42	47
8.2 Removing and installing engine control unit J623	49
28 - Ignition system	52
1 General notes and safety precautions	52
1.1 General notes on ignition system	52
1.2 Safety precautions when working on the injection and ignition system	52
1.3 Safety precautions when working on vehicles with start/stop system	53
1.4 Safety precautions when using testers and measuring instruments during a road test	53
2 Servicing ignition system	54
2.1 Test data	54
2.2 Ignition system - exploded view	55
2.3 Removing and installing ignition coils	56
2.4 Removing and installing knock sensors	58
2.5 Removing and installing Hall senders	59
2.6 Removing and installing engine speed sender G28	61