

## Contents

<b>24 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 General notes on self-diagnosis .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	2
1.3 Safety precautions for vehicles with start/stop system .....	2
1.4 Safety precautions when working on the fuel system .....	2
1.5 Safety precautions when working on the ignition system .....	3
1.6 Warning instructions when working on vehicles with high-voltage system .....	4
1.7 Reducing pressure in high-pressure section of injection system .....	8
1.8 Checking vacuum system .....	11
<b>2 Injection system</b> .....	<b>13</b>
2.1 Technical data .....	13
2.2 Overview of fitting locations - injection system (CAEB, CDNB and CDZA) .....	13
2.3 Overview of fitting locations - injection system (vehicles with hybrid drive - CHJA) .....	22
<b>3 Air cleaner</b> .....	<b>33</b>
3.1 Exploded view - air cleaner housing .....	33
3.2 Removing and installing engine cover panel .....	34
3.3 Removing and installing air filter element .....	34
3.4 Removing and installing air cleaner housing .....	36
<b>4 Intake manifold</b> .....	<b>37</b>
4.1 Exploded view - intake manifold .....	37
4.2 Removing and installing intake manifold (CAEB, CDNB and CDZA) .....	38
4.3 Removing and installing intake manifold (vehicles with hybrid drive - CHJA) .....	42
4.4 Exploded view - fuel rail .....	48
4.5 Removing and installing fuel rail .....	50
4.6 Removing and installing throttle valve module J338 (vehicles without hybrid drive) .....	51
4.7 Removing and installing throttle valve module J338 (vehicles with hybrid drive - CHJA) ..	52
4.8 Cleaning throttle valve module J338 .....	53
4.9 Checking intake manifold change-over function .....	54
<b>5 Injectors</b> .....	<b>56</b>
5.1 Removing and installing injectors .....	56
5.2 Cleaning injectors .....	60
<b>6 High-pressure pump</b> .....	<b>62</b>
6.1 Exploded view - high-pressure pump .....	62
6.2 Removing and installing high-pressure pump .....	63
<b>7 Senders and sensors</b> .....	<b>66</b>
7.1 Removing and installing air mass meter G70 .....	66
7.2 Removing and installing fuel pressure sender G247 .....	66
7.3 Checking fuel pressure sender G247 .....	68
7.4 Checking residual pressure in fuel system (up to high-pressure pump) .....	70
7.5 Checking dual non-return valve .....	72
<b>8 Lambda probe</b> .....	<b>74</b>
8.1 Exploded view - Lambda probe .....	74
8.2 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter .....	75
8.3 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29 .....	75
<b>9 Engine control unit</b> .....	<b>77</b>
9.1 Wiring and component check with test box V.A.G 1598/42 (engine codes CAEB, CDNB, CDZA) .....	77
9.2 Wiring and component check with isolator box, 198-pin VAS 6606 for vehicles with hybrid drive (engine code CHJA) .....	79



9.3	Removing and installing engine control unit J623 .....	80
<b>28</b>	<b>- Ignition system .....</b>	<b>83</b>
<b>1</b>	<b>General notes and safety precautions .....</b>	<b>83</b>
1.1	General notes on ignition system .....	83
1.2	Safety precautions .....	83
<b>2</b>	<b>Ignition system .....</b>	<b>85</b>
2.1	Test data .....	85
2.2	Exploded view - ignition system .....	85
2.3	Removing and installing ignition coils with output stages .....	86
2.4	Removing knock sensor 1 G61 .....	88
2.5	Removing and installing engine speed sender G28 .....	89