

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	27
1.3 Securing engine to engine and gearbox support	38
1.4 Installing engine	43
2 Assembly mountings	53
2.1 Assembly overview - assembly mountings	53
2.2 Supporting engine in installation position	54
2.3 Removing and installing engine mountings	56
2.4 Removing and installing gearbox mountings	58
3 Engine cover panel	60
3.1 Removing and installing engine cover panel	60
13 - Crankshaft group	61
1 Cylinder block (pulley end)	61
1.1 Assembly overview - cylinder block (pulley end)	61
1.2 Assembly overview - sealing flange (pulley end)	63
1.3 Removing and installing poly V-belts	65
1.4 Removing and installing poly V-belt tensioner	65
1.5 Removing and installing vibration damper	65
1.6 Removing and installing bracket for ancillaries	66
1.7 Renewing crankshaft oil seal (pulley end)	66
1.8 Removing and installing sealing flange (pulley end)	66
2 Cylinder block (gearbox end)	68
3 Crankshaft	69
4 Balance shaft	70
5 Pistons and conrods	71
15 - Cylinder head, valve gear	72
1 Timing chain cover	72
1.1 Assembly overview - timing chain cover	72
1.2 Removing and installing timing chain cover	75
2 Chain drive	76
3 Cylinder head	77
3.1 Assembly overview - cylinder head	77
3.2 Assembly overview - cylinder head cover	79
3.3 Removing and installing cylinder head	81
3.4 Removing and installing cylinder head cover	82
3.5 Removing and installing seals for injectors	86
3.6 Checking compression	86
4 Valve gear	87
5 Inlet and exhaust valves	88
17 - Lubrication	89
1 Sump/oil pump	89



1.1	Assembly overview - sump/oil pump	89
1.2	Engine oil	93
1.3	Removing and installing lower part of sump	93
1.4	Removing and installing upper part of sump	93
1.5	Removing and installing oil pump	93
1.6	Removing and installing oil level and oil temperature sender G266	93
2	Engine oil cooler	94
3	Oil filter/oil pressure switch	95
3.1	Assembly overview - oil filter	95
3.2	Removing and installing oil pressure sender G10	97
3.3	Checking oil pressure	98
3.4	Removing and installing oil filter housing	98
3.5	Removing and installing valve for oil pressure control N428	98
3.6	Removing and installing oil temperature sender 2 G664	98
19	Cooling	99
1	Cooling system/coolant	99
1.1	Connection diagram - coolant hoses	99
1.2	Checking cooling system for leaks	103
1.3	Draining and filling cooling system	103
2	Coolant pump/thermostat assembly	108
2.1	Assembly overview - coolant pump	108
2.2	Assembly overview - thermostat	109
2.3	Assembly overview - coolant temperature senders	112
2.4	Removing and installing coolant pump	114
2.5	Removing and installing thermostat housing	114
2.6	Removing and installing map-controlled engine cooling system thermostat F265	114
2.7	Removing and installing coolant temperature sender G62	114
2.8	Removing and installing temperature sender for engine temperature regulation G694	114
2.9	Removing and installing coolant temperature sender 2 G802	114
2.10	Removing and installing coolant valves	115
3	Coolant pipes	117
3.1	Assembly overview - coolant pipes	117
3.2	Removing and installing coolant pipes	120
4	Radiator/radiator fans	127
4.1	Assembly overview - radiator/radiator fans	127
4.2	Removing and installing radiator	130
4.3	Removing and installing radiator cowl	134
4.4	Removing and installing radiator fan V7	139
21	Turbocharging/supercharging	140
1	Turbochargers	140
1.1	Assembly overview - turbocharger	140
1.2	Removing and installing turbocharger	143
2	Charge air system	144
2.1	Assembly overview - charge air system	144
2.2	Assembly overview - hose connections for charge air system	146
2.3	Removing and installing charge air cooler	146
2.4	Removing and installing charge pressure sender G31	148
2.5	Checking charge air system for leaks	149
23	Mixture preparation - injection	150
1	Injection system	150
1.1	Overview - fuel system	150
1.2	Overview of fitting locations - injection system	150

1.3	Filling and bleeding fuel system	156
1.4	Checking fuel system for leaks	156
2	Vacuum system	157
2.1	Connection diagram - vacuum system	157
2.2	Checking vacuum system	157
3	Air filter	158
3.1	Assembly overview - air filter housing	158
3.2	Removing and installing air filter housing	159
4	Intake manifold	161
4.1	Assembly overview - intake manifold	161
4.2	Removing and installing upper part of intake manifold	164
4.3	Removing and installing lower part of intake manifold	164
4.4	Removing and installing intake manifold flap motor V157	164
4.5	Removing and installing throttle valve module J338	165
5	Injectors/high-pressure reservoir (rail)	166
5.1	Assembly overview - injectors	166
5.2	Checking injectors	168
5.3	Performing adaption of correction values for injectors	168
5.4	Checking for injectors sticking open	168
5.5	Checking return flow rate of injectors with engine running	168
5.6	Checking return flow rate of injectors at starter cranking speed	169
5.7	Checking restrictor in fuel return line	169
5.8	Removing and installing injectors	169
5.9	Removing and installing high-pressure pipes	171
5.10	Removing and installing high-pressure reservoir (rail)	171
6	Senders and sensors	172
6.1	Removing and installing intake air temperature sender G42	172
6.2	Removing and installing air mass meter G70	173
6.3	Removing and installing fuel temperature sender G81	174
6.4	Removing and installing fuel pressure sender G247	174
6.5	Removing and installing fuel pressure sender for low pressure G410	174
6.6	Removing and installing pressure differential sender G505	174
6.7	Checking fuel pressure regulating valve N276	177
6.8	Removing and installing fuel pressure regulating valve N276	179
7	High-pressure pump	180
8	Lambda probe	181
8.1	Assembly overview - Lambda probe	181
8.2	Removing and installing Lambda probe	183
8.3	Removing and installing NOx senders	183
9	Engine control unit	186
9.1	Removing and installing engine control unit J623	186
26 - Exhaust system		188
1	Exhaust pipes/silencers	188
1.1	Assembly overview - silencers	188
1.2	Removing and installing front exhaust pipe	191
1.3	Separating exhaust pipes/silencers	192
1.4	Removing and installing silencers	194
1.5	Stress-free alignment of exhaust system	195
1.6	Checking exhaust system for leaks	197
2	Emission control system	198
2.1	Assembly overview - emission control system	198
2.2	Removing and installing ammonia trap	201
2.3	Removing and installing emission control module	203



3	SCR (selective catalytic reduction) system	207
3.1	Assembly overview - reducing agent tank	207
3.2	Assembly overview - reducing agent supply line	208
3.3	Assembly overview - delivery unit for reducing agent	208
3.4	Assembly overview - control unit for reducing agent metering system J880	208
3.5	Draining reducing agent tank	209
3.6	Removing and installing reducing agent tank	211
3.7	Removing and installing delivery unit for reducing agent	214
3.8	Removing and installing injector for reducing agent N474	216
3.9	Removing and installing control unit for reducing agent metering system J880	217
4	Exhaust gas temperature regulation	219
4.1	Assembly overview - exhaust gas temperature regulation	219
4.2	Removing and installing exhaust gas temperature senders	221
5	Exhaust gas recirculation	223
5.1	Assembly overview - exhaust gas recirculation system	223
5.2	Removing and installing exhaust gas recirculation cooler	225
5.3	Removing and installing exhaust gas recirculation temperature sensor G98	225
6	Exhaust manifolds	226
6.1	Assembly overview - exhaust manifold	226
6.2	Removing and installing exhaust manifolds	227
28	Glow plug system	234
1	Glow plug system	234
1.1	Assembly overview - glow plug system	234
1.2	Removing and installing glow plug	235
1.3	Removing and installing Hall sender G40	236
1.4	Removing and installing engine speed sender G28	236