

## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b>   | <b>1</b>  |
| <b>1 Safety information</b>  | <b>1</b>  |
| 1.1 Safety precautions when working on the fuel system   | 1         |
| 1.2 Safety precautions when working on vehicles with start/stop system                           | 3         |
| 1.3 Safety precautions when using testers and measuring instruments during a road test           | 3         |
| <b>2 Repair instructions</b>   | <b>4</b>  |
| 2.1 Rules for cleanliness  | 4         |
| 2.2 Test conditions  | 4         |
| 2.3 Contact corrosion  | 4         |
| 2.4 Routing and attachment of pipes, hoses and wiring  | 5         |
| <b>20 - Fuel supply system</b>   | <b>6</b>  |
| <b>1 Fuel tank</b>   | <b>6</b>  |
| 1.1 Exploded view - fuel tank  | 6         |
| 1.2 Draining fuel tank   | 11        |
| 1.3 Removing and installing fuel tank  | 13        |
| <b>2 Fuel delivery unit/fuel gauge senders</b>   | <b>20</b> |
| 2.1 Assembly overview - fuel delivery unit/fuel gauge sender                                     | 20        |
| 2.2 Removing and installing fuel delivery unit/fuel gauge senders                                | 24        |
| 2.3 Filling and bleeding fuel system   | 30        |
| 2.4 Checking fuel gauge sender G   | 31        |
| 2.5 Removing and installing fuel gauge sender G  | 34        |
| 2.6 Checking fuel gauge sender 2 G169  | 35        |
| 2.7 Removing and installing fuel gauge sender 2 G169   | 37        |
| <b>3 Plug-in connectors</b>  | <b>43</b> |
| 3.1 Disconnecting plug-in connectors   | 43        |
| <b>4 Fuel filter</b>   | <b>47</b> |
| 4.1 Assembly overview - fuel filter  | 47        |
| 4.2 Removing and installing fuel filter  | 48        |
| <b>5 Activated charcoal filter system</b>  | <b>49</b> |
| 5.1 Connection diagram - activated charcoal filter system  | 49        |
| 5.2 Assembly overview - activated charcoal filter system   | 50        |
| 5.3 Removing and installing activated charcoal filter  | 55        |
| 5.4 Checking fuel system for leaks   | 59        |
| 5.5 Removing and installing fuel system diagnostic pump  | 60        |
| <b>6 Accelerator mechanism</b>   | <b>61</b> |
| 6.1 Assembly overview - accelerator pedal module   | 61        |
| 6.2 Removing and installing accelerator pedal module with accelerator position sender G79 / G185 | 62        |
| <b>7 Fuel pump</b>   | <b>63</b> |
| 7.1 Checking fuel system pressurisation pump G6  | 63        |
| 7.2 Removing and installing fuel pump control unit J538  | 68        |