

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety precautions</b>	<b>1</b>
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	3
1.3 Safety precautions when using testers and measuring instruments during a road test	3
1.4 Safety precautions when working on the SCR system	4
<b>2 Repair instructions</b>	<b>5</b>
2.1 Rules for cleanliness	5
2.2 Test conditions	5
2.3 Contact corrosion	5
2.4 Routing and attachment of pipes, hoses and wiring	6
<b>20 - Fuel supply system</b>	<b>7</b>
<b>1 Fuel tank</b>	<b>7</b>
1.1 Exploded view - fuel tank	7
1.2 Draining fuel tank	10
1.3 Removing and installing fuel tank	11
1.4 Deactivating misfuelling prevention device	17
<b>2 Fuel delivery unit/fuel gauge senders</b>	<b>19</b>
2.1 Exploded view - fuel delivery unit/fuel gauge senders	19
2.2 Removing and installing fuel delivery unit/fuel gauge senders	21
2.3 Checking fuel gauge sender G	29
2.4 Removing and installing fuel gauge sender G	32
2.5 Checking fuel gauge sender 2 G169	32
2.6 Removing and installing fuel gauge sender 2 G169	35
<b>3 Plug-in connectors</b>	<b>41</b>
3.1 Disconnecting plug-in connectors	41
<b>4 Fuel cooler</b>	<b>46</b>
4.1 Exploded view - fuel cooler	46
4.2 Removing and installing fuel cooler	46
<b>5 Fuel filter</b>	<b>49</b>
5.1 Exploded view - fuel filter	49
5.2 Removing and installing fuel filter	51
5.3 Removing and installing water level sender G120	51
<b>6 Accelerator mechanism</b>	<b>52</b>
6.1 Exploded view - accelerator pedal module	52
6.2 Removing and installing accelerator pedal module with accelerator position sender G79/ G185	53
<b>7 Fuel pump</b>	<b>55</b>
7.1 Checking fuel system pressurisation pump G6	55
7.2 Removing and installing fuel pump control unit J538	62