

Contents

00 - Technical data	1
1 General notes	1
1.1 Running gear	1
1.2 Steering	1
1.3 Types of tyre	1
1.4 General notes on drive shaft	1
2 Safety information	2
2.1 Safety precautions when working in the vicinity of high-voltage components	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	2
3 Repair instructions	4
3.1 General repair instructions	4
3.2 Safety precautions when working on the subframe	4
3.3 Identification plates	5
3.4 Use of impact wrenches	5
3.5 Routing and attachment of pipes, hoses and wiring	5
3.6 Leaks at shock absorbers	6
3.7 Checking shock absorbers when removed	7
3.8 Checking shock absorbers on shock tester	8
3.9 Maximum values "a" in mm	9
3.10 Rules for cleanliness	9
3.11 General notes	10
3.12 Contact corrosion	10
3.13 Gaskets, seals	11
3.14 Nuts, bolts	11
3.15 Electrical components	11
3.16 Repairing damaged threads in longitudinal member (subframe to body)	12
3.17 Lifting suspension to unladen position - vehicles with coil springs	12
3.18 Lifting suspension to normal level - vehicles with air suspension	14
3.19 Raising and lowering vehicle when air spring system has/has not been opened	17
4 Disposal	18
4.1 Releasing gas and draining front gas-filled shock absorbers	18
4.2 Releasing gas and draining rear gas-filled shock absorbers	19
4.3 Discharging suspension strut (air suspension)	20
4.4 Discharging accumulator	20
5 Electrical components	22
5.1 Starting diagnosis	22
40 - Front suspension	25
1 Safety information	25
2 Front axle	26
2.1 Overview - front axle	26
3 Subframe	27
3.1 Assembly overview - subframe	27
3.2 Fixing subframe in position	33
3.3 Lowering subframe	39
3.4 Removing and installing subframe with steering rack	45
3.5 Lowering subframe cross brace	56
3.6 Removing and installing subframe cross brace	66
3.7 Removing and installing subframe shield	84
4 Anti-roll bar	90
4.1 Assembly overview - anti-roll bar	90



4.2	Removing and installing anti-roll bar	91
4.3	Removing and installing coupling rod	92
5	Suspension strut, upper suspension links	93
5.1	Assembly overview - suspension strut, upper suspension links	93
5.2	Assembly overview - strut brace	97
5.3	Removing and installing suspension strut	98
5.4	Servicing suspension strut	101
5.5	Removing and installing upper suspension links	104
5.6	Renewing bush for upper suspension link	106
5.7	Charging suspension strut	108
5.8	Removing and installing shock absorber fork	111
5.9	Removing and installing strut brace	113
6	Lower suspension links, swivel joint	114
6.1	Assembly overview - lower suspension links, swivel joint	114
6.2	Removing and installing track control link	116
6.3	Removing and installing guide link	121
6.4	Renewing bush for track control link	124
6.5	Removing and installing swivel joint	129
6.6	Removing and installing bonded rubber bush for guide link	131
7	Wheel bearing	135
7.1	Assembly overview - wheel bearing	135
7.2	Removing and installing wheel bearing housing	136
7.3	Removing and installing wheel bearing unit	140
7.4	Servicing wheel bearing unit	141
8	Drive shaft	146
8.1	Assembly overview - drive shaft	146
8.2	Removing and installing drive shaft	148
8.3	Removing and installing heat shield for drive shaft	149
8.4	Loosening and tightening bolt securing drive shaft	150
8.5	Dismantling and assembling drive shaft	151
8.6	Servicing constant velocity joint	166
8.7	Checking outer constant velocity joint	168
8.8	Tightening hose clip on triple roller joint and outer joint	169
42 - Rear suspension		172
1	Safety information	172
2	Rear axle	173
2.1	Overview of fitting locations - rear axle	173
3	Subframe	174
3.1	Assembly overview - subframe	174
3.2	Fixing subframe in position	177
3.3	Removing and installing subframe	180
3.4	Servicing subframe	185
4	Anti-roll bar	198
4.1	Assembly overview - anti-roll bar	198
4.2	Removing and installing anti-roll bar	199
4.3	Removing and installing coupling rod	201
5	Suspension links, track rod	202
5.1	Assembly overview - transverse links	202
5.2	Removing and installing upper transverse links	206
5.3	Removing and installing wind deflector	212
5.4	Removing and installing lower transverse links	213
5.5	Removing and installing track rod	217
6	Suspension strut/shock absorber, spring	220

6.1	Assembly overview - suspension strut/shock absorber, spring	220
6.2	Removing and installing shock absorber	226
6.3	Removing and installing spring	229
7	Wheel bearing, trailing arm	241
7.1	Assembly overview - wheel bearing	241
7.2	Removing and installing wheel bearing housing	244
7.3	Removing and installing wheel bearing unit	248
7.4	Servicing wheel bearing unit	251
8	Drive shaft	256
8.1	Assembly overview - drive shaft	256
8.2	Removing and installing drive shaft	259
8.3	Loosening and tightening bolt securing drive shaft	261
8.4	Dismantling and assembling drive shaft	262
8.5	Checking outer constant velocity joint	270
8.6	Checking inner constant velocity joint	270
43	Self-levelling suspension	274
1	Safety information	274
2	Electronic damping control	275
2.1	Overview of fitting locations - electronic damping control	275
2.2	Basic setting of electronic damper control	276
2.3	Removing and installing running gear control unit J775	276
3	Vehicle level senders	279
3.1	Assembly overview - front vehicle level senders	279
3.2	Assembly overview - rear vehicle level senders	279
3.3	Removing and installing front vehicle level sender G78/G289	280
3.4	Removing and installing rear vehicle level sender G76/G77	281
4	Air suspension	282
4.1	Overview of fitting locations - electrical components	282
4.2	Overview of fitting locations - air suspension	284
4.3	Assembly overview - air pipes	284
4.4	Assembly overview - pressure accumulator	286
4.5	Assembly overview - air supply unit	287
4.6	Setting normal level and permanently disabling control	289
4.7	Re-adapting normal level	289
4.8	Bleeding and charging air spring system	290
4.9	Checking air suspension for leaks	290
4.10	Removing and installing adaptive suspension compressor electronics J1135	292
4.11	Servicing air pipe	294
4.12	Renewing connection piece	297
4.13	Removing and installing air supply unit	299
4.14	Removing and installing filter	303
4.15	Removing and installing solenoid valve block	303
4.16	Removing and installing accumulator	305
5	Dynamic Ride Control (DRC)	306
5.1	System description - DRC	306
5.2	Overview of fitting locations - DRC	306
5.3	Assembly overview - central valve	307
5.4	Assembly overview - front shock absorber	309
5.5	Assembly overview - rear shock absorber	309
5.6	Removing and installing central valve	310
5.7	Checking DRC system	312
5.8	Checking DRC system pressure	313
5.9	Discharging and charging DRC system	315



44 - Wheels, tyres, vehicle geometry	325
1 Safety information	325
2 Wheels, tyres	326
3 Tyre Pressure Monitoring System	327
3.1 Assembly overview - tyre pressure sensor	327
3.2 Removing and installing Tyre Pressure Monitoring System control unit J502	329
3.3 Changing tyres on vehicles with Tyre Pressure Monitoring System	329
3.4 Removing and installing metal valve body	330
4 Wheel alignment	332
4.1 Notes on wheel alignment	332
4.2 Test requirements for wheel alignment	332
4.3 Preparations for measurement	333
4.4 When does wheel alignment have to be checked?	335
4.5 Wheel alignment procedure	337
4.6 Explanatory notes on production control numbers (PR numbers)	338
4.7 Wheel runout compensation	339
4.8 Checking maximum steering angle	339
4.9 Checking unladen position for wheel alignment - vehicles with coil springs	340
4.10 Checking normal level for wheel alignment - vehicles with air suspension	343
4.11 Wheel alignment specifications	345
4.12 Adjusting camber at rear wheels	351
4.13 Adjusting toe setting at rear wheels	351
4.14 Centralising camber at front wheels	352
4.15 Adjusting toe setting at front wheels	356
4.16 Basic setting for steering angle sender G85	356
5 Dynamic steering	358
5.1 Assembly overview - dynamic steering	358
5.2 Removing and installing active steering control unit J792	358
5.3 Basic setting for dynamic steering	359
6 Adaptive cruise control	361
6.1 Adjusting adaptive cruise control	361
7 Front camera for driver assist systems	362
7.1 Calibrating front camera for driver assist systems	362
8 Night vision system	363
8.1 Calibrating night vision system	363
48 - Steering	364
1 Safety information	364
2 Steering wheel	365
2.1 Assembly overview - steering wheel	365
2.2 Removing and installing steering wheel	367
3 Steering column	368
3.1 Assembly overview - steering column	368
3.2 Checking steering column for damage	372
3.3 Handling and transporting steering column	373
3.4 Removing and installing steering column	374
3.5 Removing and installing safety lock for active steering (locking solenoid)	378
3.6 Removing and installing intermediate steering shaft	380
3.7 Removing and installing control unit for electronic steering column lock J764	382
3.8 Removing and installing control unit for electrically adjustable steering column J866	383
4 Steering rack	385
4.1 Assembly overview - steering rack	385
4.2 Handling and transporting steering rack	389

4.3	Removing and installing steering rack	390
4.4	Removing and installing boot	394
4.5	Removing and installing track rod	396
4.6	Removing and installing track rod ball joint	397
5	Rear wheel steering rack	401
5.1	Assembly overview - rear wheel steering	401
5.2	Aligning rear wheel steering rack	401
5.3	Bringing rear wheel steering rack into zero position	403
5.4	Removing and installing rear wheel steering rack	403