

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety precautions when working on the high-voltage system .....	1
1.2 Safety precautions when working in the vicinity of high-voltage components .....	2
1.3 Safety precautions when working on vehicles with start/stop system .....	2
1.4 Safety precautions when using testers and measuring instruments during a road test .....	3
<b>2 Repair instructions</b> .....	<b>4</b>
2.1 Rules for cleanliness .....	4
2.2 General notes .....	4
2.3 Contact corrosion .....	5
2.4 ESD (electrostatic discharge) workplace .....	5
2.5 Routing and attachment of pipes, hoses and wiring .....	5
2.6 Identification plates .....	5
2.7 Use of impact wrenches .....	6
<b>91 - Communication</b> .....	<b>7</b>
<b>1 Safety information</b> .....	<b>7</b>
<b>2 Infotainment system</b> .....	<b>8</b>
2.1 Layout - infotainment system .....	8
2.2 Overview of fitting locations - infotainment system .....	15
2.3 Removing and installing infotainment system display .....	16
2.4 Removing and installing control unit 1 for information electronics J794 .....	18
2.5 Removing and installing driver side volume regulator E67 .....	21
2.6 Removing and installing additional display and operating unit 1 E857 .....	22
2.7 Removing and installing wireless operating unit 1 E859 .....	22
<b>3 Sound system</b> .....	<b>24</b>
3.1 Layout - sound system .....	24
3.2 Overview of fitting locations - sound system .....	34
3.3 Removing and installing digital sound package control unit/amplifier .....	42
3.4 Removing and installing rear treble loudspeakers R14 / R16 .....	48
3.5 Removing and installing rear treble loudspeakers 2 R217 / R218 .....	48
3.6 Removing and installing front treble loudspeakers R20 / R22 .....	49
3.7 Removing and installing front treble loudspeakers 2 R220 / R221 .....	50
3.8 Removing and installing rear mid-range loudspeakers 2 R341 / R340 .....	51
3.9 Removing and installing front mid-range loudspeakers R103 / R104 .....	52
3.10 Removing and installing front mid-range loudspeakers 2 R276 / R277 .....	52
3.11 Removing and installing rear bass loudspeakers R15 / R17 .....	53
3.12 Removing and installing front bass loudspeakers R21 / R23 .....	54
3.13 Removing and installing subwoofer R211 .....	55
3.14 Removing and installing effect loudspeakers .....	58
3.15 Removing and installing centre loudspeaker R208 .....	61
3.16 Removing and installing centre loudspeaker 2 R219 .....	61
3.17 Removing and installing internal microphone R74 .....	62
<b>4 Aerial systems</b> .....	<b>64</b>
4.1 Layout - aerial systems .....	64
4.2 Overview of fitting locations - aerial systems .....	71
4.3 Removing and installing aerial amplifier .....	81
4.4 Removing and installing window aerial suppression filter .....	85
4.5 Removing and installing roof aerial .....	87
4.6 Removing and installing GPS aerial .....	88
4.7 Removing and installing LTE aerials .....	88
4.8 Removing and installing satellite tuner aerial R172 .....	89



4.9	Removing and installing digital radio aerial	89
4.10	Removing and installing emergency call module aerials	90
4.11	Removing and installing bumper aerials	91
4.12	Removing and installing traffic data aerial	92
4.13	Removing and installing dedicated short-range communication aerial	93
4.14	Removing and installing internal vehicle communication aerial R364	94
4.15	Removing and installing wireless data transfer aerial R336	94
4.16	Removing and installing wireless data transfer aerial 2 R366	96
4.17	Removing and installing near field communication aerial R350	96
4.18	Removing and installing near field communication aerial 2 R351	97
4.19	Removing and installing near field communication control unit 2 J1170	97
4.20	Removing and installing roof aerial control unit JX3	98
<b>5</b>	<b>Radio</b>	<b>99</b>
5.1	Layout - radio	99
5.2	Overview of fitting locations - radio	99
5.3	Removing and installing radio	99
5.4	Removing and installing digital radio	99
<b>6</b>	<b>DVD/CD changer</b>	<b>100</b>
6.1	Removing and installing DVD player R7	100
<b>7</b>	<b>Telephone system</b>	<b>102</b>
7.1	Layout - telephone	102
7.2	Overview of fitting locations - telephone system	113
7.3	Assembly overview - microphone unit	117
7.4	Removing and installing front microphone R140 / R141	119
7.5	Removing and installing aerial amplifier for mobile telephone R86	120
7.6	Removing and installing telephone bracket	121
<b>8</b>	<b>Navigation system</b>	<b>123</b>
8.1	Layout - navigation system	123
8.2	Overview of fitting locations - navigation system	123
8.3	Removing and installing control unit for navigation system	123
8.4	Removing and installing chip card reader control unit	123
<b>9</b>	<b>TV system</b>	<b>125</b>
9.1	Layout - TV system	125
9.2	Overview of fitting locations - TV system	127
9.3	Removing and installing TV tuner	129
9.4	Removing and installing TV card reader	133
<b>10</b>	<b>Reversing camera system</b>	<b>135</b>
<b>11</b>	<b>Multifunction steering wheel</b>	<b>136</b>
11.1	Layout - multifunction steering wheel	136
11.2	Assembly overview - multi-function steering wheel	136
11.3	Removing and installing multifunction buttons in steering wheel E441 / E440	138
11.4	Removing and installing Tiptronic switches in steering wheel E480 / E479	139
<b>12</b>	<b>Voice control system</b>	<b>141</b>
12.1	Layout - voice control system	141
12.2	Removing and installing voice control system	141
<b>13</b>	<b>Connection for external multimedia devices</b>	<b>142</b>
13.1	Layout - external multimedia devices	142
13.2	Removing and installing connection for external multimedia devices	143
13.3	Removing and installing USB connection 1 U41	144
13.4	Removing and installing control unit with Android operating system J1243	144
<b>14</b>	<b>Rear Seat Entertainment system (RSE)</b>	<b>146</b>
14.1	Layout - Rear Seat Entertainment system	146
14.2	Removing and installing multimedia system display unit Y31 / Y32	146
<b>15</b>	<b>Night vision system</b>	<b>147</b>

<b>16</b>	<b>Overhead view camera</b> .....	<b>148</b>
<b>17</b>	<b>Online services</b> .....	<b>149</b>
17.1	Layout - online services .....	149
17.2	Overview of fitting locations - mobile online services .....	152
17.3	Removing and installing emergency call module control unit and communication unit J949 .....	157
17.4	Removing and installing emergency battery, telematics A16 .....	158
17.5	Removing and installing loudspeaker for emergency call module R335 .....	159
17.6	Removing and installing interface control unit for telematics J1221 .....	160
17.7	Removing and installing telephone and telematics control unit J526 .....	162
17.8	Removing and installing data transmission aerials .....	164