

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on pyrotechnic components	2
1.2 Safety precautions when working on vehicles with high-voltage system	4
1.3 Safety precautions when working in the vicinity of high-voltage components	5
1.4 Safety precautions when working on the high-voltage system	5
1.5 Safety precautions when working on vehicles with start/stop system	6
1.6 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	7
1.7 Additional safety regulations for side airbags	7
1.8 Additional safety regulations for curtain airbags	8
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbag	8
1.10 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	9
1.11 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	9
1.12 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	10
1.13 Checking airbag mounting components following an accident	11
1.14 Accident in which no airbag was triggered	11
1.15 Checking seat belts	11
1.16 Checking belt webbing	12
1.17 Checking automatic belt retractor (locking action)	13
1.18 Visual inspection of belt buckle	13
1.19 Functional check of belt buckle	14
1.20 Checking guide fittings and latch plate	14
1.21 Checking securing components and anchorage points following an accident	14
1.22 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	14
1.23 Checking child seat anchors following an accident	15
1.24 Safety regulations for automatic anti-dazzle interior mirror	15
2 Repair instructions	16
2.1 Contact corrosion	16
2.2 Routing and attachment of pipes, hoses and wiring	16
2.3 Use of impact wrenches	16
2.4 Identification plates	17
68 - Interior equipment	18
1 Safety information	18
2 Storage compartments/covers/trim panels	19
2.1 Overview of fitting locations - storage compartments/covers/trim panels	19
2.2 Assembly overview - dash panel cover (driver side)	20
2.3 Assembly overview - steering column trim	21
2.4 Assembly overview - glove compartment	22
2.5 Removing and installing dash panel cover (driver side)	23
2.6 Removing and installing footwell cover (driver side)	25
2.7 Removing and installing upper steering column trim	26
2.8 Removing and installing lower steering column trim	28
2.9 Removing and installing glove compartment opening mechanism	30
2.10 Removing and installing lock cylinder for glove compartment opening mechanism	30
2.11 Removing and installing glove compartment	32
3 Equipment	35
3.1 Assembly overview - net partition	35
3.2 Assembly overview - sun visors	36



3.3	Assembly overview - sun blind	37
3.4	Assembly overview - luggage compartment cover	38
3.5	Removing and installing retainer for net partition	40
3.6	Removing and installing mounting for net partition	40
3.7	Removing and installing bracket for net partition	41
3.8	Removing and installing sun visor	42
3.9	Removing and installing sun visor centre mount	43
3.10	Removing and installing sun blind	44
3.11	Removing and installing grab handle	48
3.12	Removing and installing luggage compartment cover	49
4	Centre console	53
4.1	Assembly overview - centre console	53
4.2	Removing and installing centre console trim (rear)	58
4.3	Removing and installing centre console trim (side)	60
4.4	Removing and installing cover for centre console	61
4.5	Removing and installing centre console insert	62
4.6	Removing and installing front centre console storage compartment	64
4.7	Removing and installing centre console trim	65
4.8	Removing and installing front centre console footwell trim	66
4.9	Removing and installing centre console	67
4.10	Removing and installing cup holder	69
4.11	Removing and installing vent (rear) in centre console	70
4.12	Removing and installing trim	71
5	Front centre armrest	72
5.1	Assembly overview - front centre armrest	72
5.2	Removing and installing front centre armrest	72
5.3	Removing and installing upper part of centre armrest	73
6	Interior mirror	76
6.1	Assembly overview - interior mirror	76
6.2	Removing and installing interior mirror	76
69	Passenger protection	80
1	Safety information	80
2	Seat belts	81
2.1	Overview of fitting locations - seat belts and anchorage points	81
2.2	Assembly overview - front three-point seat belt	83
2.3	Assembly overview - rear outer three-point seat belt	86
2.4	Assembly overview - rear centre three-point seat belt	88
2.5	Assembly overview - front belt buckle	89
2.6	Assembly overview - rear belt buckle	90
2.7	Removing and installing front three-point seat belt	92
2.8	Removing and installing rear three-point seat belt	97
2.9	Removing and installing rear belt guide	105
2.10	Removing and installing front belt guide	111
2.11	Removing and installing front belt end fitting	112
2.12	Removing and installing rear outer belt end fitting	114
2.13	Removing and installing belt height adjuster	115
2.14	Removing and installing front belt buckle	116
2.15	Removing and installing rear belt buckle	117
3	Child seat anchors	119
3.1	Assembly overview - front child seat anchors	119
3.2	Assembly overview - rear child seat anchors	119
3.3	Removing and installing front child seat anchor	120
3.4	Removing and installing rear child seat anchor	122
4	Airbag system	124

4.1	Overview of fitting locations - airbag system	124
5	Airbag control unit	127
5.1	Assembly overview - airbag control unit	127
5.2	Removing and installing airbag control unit J234	127
6	Battery isolation igniter	131
6.1	Assembly overview - battery isolation igniter	131
6.2	Removing and installing battery isolation igniter	133
6.3	Removing and installing battery isolation igniter, 48 V N751	135
7	Driver airbag	136
7.1	Assembly overview - driver airbag	136
7.2	Removing and installing airbag unit with igniters	136
7.3	Removing and installing connector at airbag	141
8	Front passenger airbag	144
8.1	Assembly overview - front passenger airbag	144
8.2	Removing and installing front passenger airbag unit with igniters	144
8.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	147
9	Side airbags	150
9.1	Assembly overview - front side airbag	150
9.2	Assembly overview - rear side airbag	150
9.3	Removing and installing front side airbag with igniter	151
9.4	Removing and installing rear side airbag with igniter	154
9.5	Removing and installing wire for front side airbag	157
10	Curtain airbags	160
10.1	Assembly overview - curtain airbag	160
10.2	Removing and installing curtain airbag with igniter	160
11	Knee airbags	165
11.1	Assembly overview - knee airbag	165
11.2	Removing and installing knee airbag with igniter	166
12	Crash sensors for airbags	172
12.1	Overview of fitting locations - crash sensors for airbags	172
12.2	Removing and installing front airbag crash sensor for driver side G283	174
12.3	Removing and installing front side airbag crash sensor G179/G180	180
12.4	Removing and installing rear side airbag crash sensor G256/G257	182
13	Seat position sensor	185
13.1	Assembly overview - seat position sensor	185
13.2	Removing and installing seat position sensor	185
14	Belt-fastened recognition system	189
14.1	Assembly overview - seat occupied sensor	189
14.2	Removing and installing seat occupied sensor on front passenger side G128	189
14.3	Removing and installing seat occupied sensor (rear) G177/G178/G1010	190
15	Seat occupied recognition system	192
15.1	Overview of fitting locations - seat occupied recognition system	192
15.2	Removing and installing seat occupied sensor	194
16	Pedestrian protection	197
16.1	Assembly overview - pedestrian protection	197
16.2	Removing and installing crash sensor for pedestrian protection G570/G571	199
16.3	Removing and installing centre crash sensor for pedestrian protection G693	201
16.4	Removing and installing trigger for pedestrian protection G598/G599	203
16.5	Removing and installing front pressure hose sensor for pedestrian protection G579	204
16.6	Resetting triggered pedestrian protection system	206
70	Trim, insulation	207
1	Safety information	207



2	Trim panels/insulation	208
2.1	Overview of fitting locations - trim/insulation	208
3	Front door trim	209
3.1	Assembly overview - front door trim	209
3.2	Removing and installing loudspeaker trim in door trim	211
3.3	Removing and installing trim panel	212
3.4	Removing and installing front door trim	213
3.5	Removing and installing front door puller	216
3.6	Removing and installing interior door handle	217
3.7	Removing and installing window frame trim	218
4	Rear door trim	221
4.1	Assembly overview - rear door trim	221
4.2	Assembly overview - sun blind for door window	223
4.3	Removing and installing loudspeaker trim in door trim	223
4.4	Removing and installing trim panel	224
4.5	Removing and installing interior door handle	225
4.6	Removing and installing rear door trim	226
4.7	Removing and installing rear door puller	228
4.8	Removing and installing window frame trim	230
4.9	Removing and installing sun blind for door window	232
4.10	Removing and installing retainer for sun blind	233
5	Dash panel	234
5.1	Assembly overview - dash panel	234
5.2	Removing and installing dash panel cover (side)	238
5.3	Removing and installing trim panel for dash panel	239
5.4	Removing and installing trim for dash panel insert	245
5.5	Removing and installing loudspeaker trim	246
5.6	Removing and installing carrier for trim panel for dash panel	247
5.7	Removing and installing dash panel	249
5.8	Removing and installing cover for dash panel/head-up display	254
5.9	Removing and installing loudspeaker mounting	255
5.10	Removing and installing outer dash panel vent	256
5.11	Removing and installing centre vent	256
5.12	Removing and installing front centre defroster vent	257
6	Dash panel cross member	259
6.1	Assembly overview - dash panel cross member	259
6.2	Removing and installing dash panel cross member	262
6.3	Removing and installing support for knee bolster	267
7	Passenger compartment trim panels	269
7.1	Overview of fitting locations - passenger compartment trim panels	269
7.2	Assembly overview - sill panel moulding	271
7.3	Assembly overview - A-pillar trim	272
7.4	Assembly overview - B-pillar trim	274
7.5	Assembly overview - C-pillar trim	275
7.6	Assembly overview - D-pillar trim	276
7.7	Assembly overview - foot rest and floor covering	277
7.8	Assembly overview - rear shelf	279
7.9	Removing and installing sill panel moulding	280
7.10	Removing and installing A-pillar trim	282
7.11	Removing and installing B-pillar trim	287
7.12	Removing and installing C-pillar trim	291
7.13	Removing and installing D-pillar trim	296
7.14	Removing and installing foot rest	300
7.15	Removing and installing floor covering	301
7.16	Removing and installing rear shelf	303

7.17	Removing and installing loudspeaker trim	306
8	Luggage compartment trim panels	307
8.1	Overview of fitting locations - luggage compartment trim panels	307
8.2	Assembly overview - luggage compartment side trim	309
8.3	Assembly overview - luggage compartment floor	319
8.4	Assembly overview - lower rear lid trim	324
8.5	Removing and installing lower rear lid trim	328
8.6	Removing and installing upper rear lid trim	334
8.7	Removing and installing luggage compartment side trim	335
8.8	Removing and installing luggage compartment floor	344
8.9	Removing and installing back panel trim (in luggage compartment)	346
8.10	Removing and installing lock carrier trim	347
8.11	Removing and installing fastening ring	348
8.12	Removing and installing frame for loading aid	348
8.13	Removing and installing bag hook	350
8.14	Removing and installing grip for rear luggage compartment floor	350
8.15	Removing and installing retaining rail	351
8.16	Removing and installing lining for spare wheel well	352
8.17	Removing and installing tail light cover	353
8.18	Removing and installing mounting for vehicle tool kit	353
9	Roof trim panels	355
9.1	Assembly overview - moulded headliner	355
9.2	Removing and installing roof end strip	359
9.3	Removing and installing moulded headliner	360
9.4	Lowering moulded headliner	363
9.5	Removing and installing roof reinforcement	373