

## Contents

|   |           |
|---|-----------|
| <b>00 - Technical data</b> .....  | <b>1</b>  |
| <b>1 Safety precautions</b> .....   | <b>1</b>  |
| 1.1 Safety precautions when working on vehicles with high-voltage system .....  | 1         |
| 1.2 Safety precautions when working in the vicinity of high-voltage components .....  | 2         |
| 1.3 Safety precautions when working on vehicles with start/stop system .....  | 2         |
| 1.4 Safety precautions when working on the fuel system .....  | 2         |
| 1.5 Safety precautions when using testers and measuring instruments during a road test .....                                    | 3         |
| 1.6 Safety precautions when working on the cooling system .....   | 3         |
| 1.7 Safety precautions when working on vehicles with auxiliary/supplementary heater .....                                       | 3         |
| <b>2 General notes</b> .....  | <b>5</b>  |
| 2.1 Type plates .....   | 5         |
| 2.2 Notes on operation of auxiliary/supplementary heater on vehicles with diesel engine .....                                   | 5         |
| 2.3 Notes on operation of auxiliary/supplementary heater with biofuel .....   | 6         |
| 2.4 Starting conditions for auxiliary/supplementary heater .....  | 6         |
| 2.5 Rules for cleanliness when working on the auxiliary/supplementary heater and fuel system .....                              | 6         |
| <b>3 Repair instructions</b> .....  | <b>8</b>  |
| 3.1 Rules for cleanliness .....   | 8         |
| 3.2 General repair instructions .....   | 8         |
| 3.3 Contact corrosion .....   | 9         |
| 3.4 Checking heating output .....   | 9         |
| 3.5 Routing and attaching pipes, hoses and wiring .....   | 10        |
| 3.6 Use of impact wrenches .....  | 10        |
| 3.7 Identification plates .....   | 10        |
| <b>82 - Auxiliary heating</b> .....   | <b>12</b> |
| <b>1 Overview of fitting locations - auxiliary/supplementary heater</b> .....   | <b>12</b> |
| <b>2 Auxiliary/supplementary heater</b> .....   | <b>14</b> |
| 2.1 Overview of fitting locations - auxiliary/supplementary heater .....  | 14        |
| 2.2 Exploded view - attachments for auxiliary/supplementary heater .....  | 16        |
| 2.3 Exploded view - components inside auxiliary/supplementary heater .....  | 20        |
| 2.4 Removing and installing auxiliary/supplementary heater .....  | 23        |
| 2.5 Removing and installing bracket for auxiliary/supplementary heater .....  | 33        |
| 2.6 Dismantling and assembling auxiliary/supplementary heater .....   | 35        |
| 2.7 Removing and installing air intake silencer .....   | 43        |
| 2.8 Removing and installing circulation pump V55 .....  | 45        |
| 2.9 Removing and installing exhaust system .....  | 47        |
| 2.10 Removing and installing temperature sensor G18 and temperature sensor 2 for supplementary and auxiliary heating G587 ..... | 49        |
| 2.11 Pin assignment for auxiliary/supplementary heater .....  | 51        |
| <b>3 Coolant circuit with auxiliary/supplementary heater</b> .....  | <b>53</b> |
| 3.1 Connection diagram - coolant hoses .....  | 53        |
| 3.2 Exploded view - coolant shut-off valve .....  | 58        |
| 3.3 Removing and installing heater coolant shut-off valve .....   | 60        |
| <b>4 Fuel supply system</b> .....   | <b>65</b> |
| 4.1 Overview of fitting locations - fuel supply system .....  | 65        |
| 4.2 Fuel take-off from fuel tank .....  | 66        |
| 4.3 Checking CO <sub>2</sub> content in exhaust gas of auxiliary/supplementary heater .....                                     | 71        |
| 4.4 Checking fuel delivery rate .....   | 74        |
| 4.5 Removing and installing metering pump V54 .....   | 78        |
| <b>5 Auxiliary/supplementary heater control</b> .....   | <b>81</b> |
| 5.1 Switching auxiliary/supplementary heater and auxiliary ventilation on and off .....   | 81        |



|          |   |           |
|----------|---|-----------|
| <b>6</b> | <b>Further control components</b> .....   | <b>82</b> |
| 6.1      | Removing and installing ambient temperature sensor .....                          | 82        |
| 6.2      | Removing and installing remote control receiver for auxiliary heater R64 .....    | 82        |
| 6.3      | Adapting remote control for auxiliary heater .....                                | 82        |
| 6.4      | Functional description of remote control for auxiliary/supplementary heater ..... | 83        |