

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Gearbox identification	1
1.2 Capacities	2
<b>2 Electrical components</b>	<b>3</b>
<b>3 Safety information</b>	<b>4</b>
3.1 General safety regulations	4
3.2 Safety precautions when working on vehicles with start/stop system	5
3.3 Safety precautions when using testers and measuring instruments during a road test	5
3.4 Safety precautions when working on the subframe	5
3.5 Safety precautions when tow-starting and towing	5
<b>4 Repair instructions</b>	<b>6</b>
4.1 Rules for cleanliness	6
4.2 General repair instructions	6
4.3 Deactivating ATF pump and discharging hydraulic accumulator	8
4.4 Contact corrosion	8
4.5 Safety functions of gearbox control unit	9
<b>5 Overview - power transmission</b>	<b>10</b>
5.1 Overview - power transmission, all-wheel drive	10
<b>30 - Clutch</b>	<b>12</b>
<b>1 Clutch</b>	<b>12</b>
<b>34 - Controls, housing</b>	<b>13</b>
<b>1 Selector mechanism</b>	<b>13</b>
1.1 Assembly overview - selector mechanism	13
1.2 Assembly overview - manual release mechanism for parking lock	16
1.3 Checking selector mechanism	16
1.4 Manual release from position P	21
1.5 Removing and installing selector lever handle	22
1.6 Detaching and attaching selector lever boot on selector lever handle	24
1.7 Removing and installing selector mechanism	24
1.8 Removing and installing manual release cable for parking lock	25
1.9 Removing and installing parking lock solenoid N486/gear sensor G676	28
1.10 Renewing seal for parking lock shaft	33
<b>2 Removing and installing gearbox</b>	<b>36</b>
2.1 Removing gearbox	36
2.2 Installing gearbox	64
2.3 Tightening torques for gearbox	74
<b>3 Transporting gearbox</b>	<b>78</b>
<b>4 Securing to engine and gearbox support</b>	<b>79</b>
<b>5 Assembly mountings</b>	<b>80</b>
5.1 Assembly overview - assembly mountings	80
5.2 Removing and installing tunnel cross member	81
<b>6 Gear oil circuit</b>	<b>84</b>
6.1 Assembly overview - gear oil circuit	84
6.2 Removing and installing gear oil pump	85
<b>7 ATF circuit</b>	<b>88</b>
7.1 Assembly overview - ATF circuit	88
7.2 Removing and installing ATF cooler	90
<b>8 Gear oil</b>	<b>95</b>



8.1	Checking gear oil level	95
8.2	Draining and filling gear oil	96
<b>9</b>	<b>ATF</b>	<b>101</b>
9.1	Checking ATF level	101
9.2	Draining and filling ATF	105
<b>10</b>	<b>Mechatronic unit</b>	<b>110</b>
10.1	Assembly overview - mechatronic unit	110
10.2	Removing and installing oil pan	112
10.3	Removing and installing mechatronic unit	114
<b>35</b>	<b>Gears, shafts</b>	<b>116</b>
1	Dismantling and assembling gears and shafts	116
<b>39</b>	<b>Final drive - differential</b>	<b>117</b>
<b>1</b>	<b>Gearbox control system</b>	<b>117</b>
1.1	Overview of fitting locations - gearbox control system	117
<b>2</b>	<b>Oil seals</b>	<b>120</b>
2.1	Overview of fitting locations - oil seals	120
<b>3</b>	<b>Differential</b>	<b>121</b>
3.1	Assembly overview - differential	121
<b>4</b>	<b>All-wheel drive coupling</b>	<b>124</b>