

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the SCR system	4
3 Repair instructions	6
3.1 Identification plates	6
3.2 Use of impact wrenches	6
3.3 Rules for cleanliness	7
3.4 General notes	7
3.5 General repair instructions	9
3.6 Foreign material in engine	11
3.7 Cleaning engine	11
3.8 Contact corrosion	11
3.9 Routing and attachment of pipes, hoses and wiring	12
3.10 Installing radiators and condensers	12
3.11 Performing adaptations after renewing a component	12
10 - Removing and installing engine	14
1 Removing and installing engine	14
1.1 Removing engine	14
1.2 Separating engine and gearbox	64
1.3 Securing engine to engine and gearbox support	73
1.4 Installing engine	75
2 Assembly mountings	80
2.1 Assembly overview - assembly mountings	80
2.2 Supporting engine in installation position	84
2.3 Removing and installing engine mountings	93
2.4 Removing and installing gearbox mounting	97
3 Engine cover panel	99
3.1 Removing and installing engine cover panel	99
13 - Crankshaft group	100
1 Cylinder block (pulley end)	100
1.1 Assembly overview - cylinder block (pulley end)	100
1.2 Assembly overview - sealing flange (pulley end)	103
1.3 Removing and installing poly V-belts	105
1.4 Removing and installing poly V-belt tensioner	108
1.5 Removing and installing vibration damper	113
1.6 Removing and installing bracket for ancillaries	129
1.7 Removing and installing engine support	132
1.8 Renewing crankshaft oil seal (pulley end)	133
1.9 Removing and installing sealing flange (pulley end)	135
2 Cylinder block (gearbox end)	140
2.1 Assembly overview - cylinder block (gearbox end)	140
2.2 Removing and installing drive plate	141
2.3 Renewing crankshaft oil seal (gearbox end)	142



3	Crankshaft	145
3.1	Assembly overview - crankshaft	145
3.2	Crankshaft dimensions	147
3.3	Allocation of main bearing shells	148
3.4	Measuring axial clearance of crankshaft	151
3.5	Measuring radial clearance of crankshaft	151
3.6	Checking sender wheel	152
4	Balance shaft	154
4.1	Assembly overview - balance shaft	154
4.2	Removing and installing balance shaft	155
4.3	Renewing roller bearing	161
5	Pistons and conrods	164
5.1	Assembly overview - pistons and conrods	164
5.2	Removing and installing pistons	167
5.3	Measuring piston projection at TDC	168
5.4	Checking pistons and cylinder bores	170
5.5	Checking radial clearance of conrod bearings	171
15	Cylinder head, valve gear	173
1	Timing chain cover	173
1.1	Assembly overview - timing chain cover	173
1.2	Removing and installing timing chain cover	177
2	Chain drive	186
2.1	Assembly overview - camshaft timing chains	186
2.2	Assembly overview - drive chain	188
2.3	Removing camshaft timing chain from camshafts	190
2.4	Removing and installing camshaft timing chain	199
2.5	Removing and installing drive chain for high-pressure pump	208
2.6	Installing intermediate drive	209
3	Cylinder head	216
3.1	Assembly overview - cylinder head	216
3.2	Assembly overview - cylinder head cover	219
3.3	Removing and installing cylinder head	222
3.4	Removing and installing cylinder head cover	230
3.5	Removing and installing seals for injectors	235
3.6	Checking compression	236
4	Valve gear	238
4.1	Assembly overview - valve gear	238
4.2	Measuring axial clearance of camshaft	245
4.3	Measuring radial clearance of camshaft	247
4.4	Removing and installing camshaft	247
4.5	Removing and installing valve stem oil seals	260
5	Inlet and exhaust valves	268
5.1	Reworking valve seats	268
5.2	Checking valve guides	268
5.3	Checking valves	269
5.4	Valve dimensions	269
17	Lubrication	270
1	Sump/oil pump	270
1.1	Assembly overview - sump/oil pump	270
1.2	Engine oil	274
1.3	Removing and installing lower part of sump	274
1.4	Removing and installing upper part of sump	277
1.5	Removing and installing oil pump	279

1.6	Removing and installing oil level and oil temperature sender G266	281
2	Engine oil cooler	282
2.1	Assembly overview - engine oil cooler	282
2.2	Removing and installing engine oil cooler	283
2.3	Removing and installing temperature regulator for engine oil cooler	284
3	Oil filter/oil pressure switch	286
3.1	Assembly overview - oil filter	286
3.2	Removing and installing oil filter housing	288
3.3	Removing and installing oil pressure sender G10	290
3.4	Checking oil pressure	291
3.5	Removing and installing valve for oil pressure control N428	292
3.6	Removing and installing oil temperature sender 2 G664	292
19	- Cooling	294
1	Cooling system/coolant	294
1.1	Connection diagram - coolant hoses	294
1.2	Assembly overview - coolant expansion tank	302
1.3	Checking cooling system for leaks	305
1.4	Draining and filling cooling system	309
2	Coolant pump/thermostat assembly	320
2.1	Assembly overview - coolant pump	320
2.2	Assembly overview - electric coolant pump	322
2.3	Assembly overview - thermostat	324
2.4	Assembly overview - coolant valves	326
2.5	Assembly overview - coolant temperature senders	330
2.6	Removing and installing electric coolant pump	332
2.7	Removing and installing coolant pump	336
2.8	Removing and installing map-controlled engine cooling system thermostat F265	339
2.9	Removing and installing housing for map-controlled engine cooling system thermostat F265	339
2.10	Removing and installing coolant temperature sender G62	340
2.11	Removing and installing temperature sender for engine temperature regulation G694	340
2.12	Removing and installing coolant temperature sender 2 G802	342
2.13	Removing and installing coolant temperature sender for charge air cooler G1130	343
2.14	Removing and installing coolant valves	344
3	Coolant pipes	353
3.1	Assembly overview - coolant pipes	353
3.2	Removing and installing coolant pipes	359
3.3	Removing and installing coolant line	390
4	Radiators/radiator fans	392
4.1	Assembly overview - radiators/radiator fans	392
4.2	Assembly overview - radiator cowl and radiator fans	395
4.3	Assembly overview - radiator blind	396
4.4	Assembly overview - auxiliary radiator	396
4.5	Removing and installing radiator	397
4.6	Removing and installing radiator blind	412
4.7	Removing and installing water radiator for charge air cooling circuit	412
4.8	Removing and installing radiator cowl	418
4.9	Removing and installing radiator fans	427
4.10	Removing and installing auxiliary radiator	428
21	- Turbocharging/supercharging	431
1	Turbocharger	431
1.1	Assembly overview - turbocharger	431
1.2	Assembly overview - electric compressor with control unit for electric compressor J1123	435



1.3	Removing and installing turbocharger	437
1.4	Removing and installing electric compressor with control unit for electric compressor J1123	440
1.5	Removing and installing sender 1 for turbocharger speed G688	442
2	Charge air system	444
2.1	Assembly overview - charge air system	444
2.2	Assembly overview - hose connections for charge air system	446
2.3	Removing and installing charge air cooler	447
2.4	Removing and installing overrun air recirculation valve for bank 1 N625	449
2.5	Removing and installing charge pressure sender G31	449
2.6	Removing and installing charge air temperature sender	450
2.7	Checking charge air system for leaks	451
23	Mixture preparation - injection	456
1	Injection system	456
1.1	Overview - fuel system	456
1.2	Overview of fitting locations - injection system	457
1.3	Filling and bleeding fuel system	464
1.4	Checking fuel system for leaks	465
2	Vacuum system	466
2.1	Connection diagram - vacuum system	466
2.2	Checking vacuum system	466
3	Air filter	468
3.1	Assembly overview - air filter housing	468
3.2	Removing and installing air filter housing	473
4	Intake manifold	476
4.1	Assembly overview - intake manifold	476
4.2	Removing and installing upper part of intake manifold	479
4.3	Removing and installing lower part of intake manifold	482
4.4	Removing and installing intake manifold flap control unit GX14	483
4.5	Removing and installing throttle valve module GX3	484
5	Injectors/high-pressure reservoir (rail)	486
5.1	Assembly overview - injectors	486
5.2	Checking injectors	490
5.3	Performing adaptation of correction values for injectors	491
5.4	Checking return flow rate of injectors with engine running	491
5.5	Checking return flow rate of injectors at starter cranking speed	495
5.6	Removing and installing injectors	498
5.7	Removing and installing high-pressure pipes	510
5.8	Removing and installing high-pressure reservoir (rail)	512
6	Senders and sensors	518
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	518
6.2	Assembly overview - actuator for engine sound generator and engine sound generator control unit	520
6.3	Removing and installing actuator for structure-borne sound R214	522
6.4	Removing and installing control unit for structure-borne sound J869	523
6.5	Removing and installing actuator 1 for engine sound generator R257 - Audi S4/S5	524
6.6	Removing and installing engine sound generator control unit J943	524
6.7	Removing and installing air mass meter G70	525
6.8	Removing and installing fuel temperature sender G81	527
6.9	Removing and installing fuel pressure sender G247	528
6.10	Removing and installing fuel pressure sender for low pressure G410	530
6.11	Checking fuel pressure regulating valve N276	531
6.12	Removing and installing fuel pressure regulating valve N276	533

6.13	Removing and installing pressure differential senders	535
6.14	Removing and installing NOx senders	539
6.15	Removing and installing particulate sensor G784	544
7	High-pressure pump	547
7.1	Assembly overview - high-pressure pump	547
7.2	Removing and installing high-pressure pump	549
8	Lambda probe	555
8.1	Assembly overview - Lambda probe	555
8.2	Removing and installing Lambda probe	559
9	Engine control unit	563
9.1	Assembly overview - engine control unit	563
9.2	Removing and installing engine control unit J623	565
26	Exhaust system	567
1	Exhaust pipes/silencers	567
1.1	Assembly overview - silencers	567
1.2	Removing and installing front exhaust pipe	573
1.3	Removing and installing silencer	576
1.4	Stress-free alignment of exhaust system	581
1.5	Checking exhaust system for leaks	582
2	Emission control system	583
2.1	Assembly overview - emission control system	583
2.2	Removing and installing emission control module	586
2.3	Removing and installing ammonia trap	589
2.4	Removing and installing exhaust flap control unit J883	590
2.5	Removing and installing exhaust flap control unit 2 J945	591
3	SCR (selective catalytic reduction) system	593
3.1	Assembly overview - reducing agent tank	593
3.2	Assembly overview - delivery unit for reducing agent metering system	599
3.3	Assembly overview - injector for reducing agent	601
3.4	Assembly overview - reducing agent supply line	603
3.5	Releasing pressure in SCR system	606
3.6	Disconnecting reducing agent supply line	607
3.7	Draining reducing agent tank	609
3.8	Removing and installing reducing agent tank	612
3.9	Removing and installing front reducing agent supply line	617
3.10	Removing and installing injector for reducing agent N474	619
3.11	Removing and installing injector 2 for reducing agent N758	621
3.12	Removing and installing control unit for reducing agent metering system J880	622
3.13	Removing and installing reducing agent quality sensor G849	624
3.14	Removing and installing pump for reducing agent V437	625
3.15	Removing and installing pressure sender for reducing agent metering system G686	627
3.16	Removing and installing connection for SCR supply line	629
4	Exhaust gas temperature regulation	630
4.1	Assembly overview - exhaust gas temperature regulation	630
4.2	Removing and installing exhaust gas temperature sender 1 G235	631
4.3	Removing and installing exhaust gas temperature sender 2 G448	632
4.4	Removing and installing exhaust gas temperature sender 3 G495	633
4.5	Removing and installing exhaust gas temperature sender 4 G648	635
5	Exhaust gas recirculation	636
5.1	Assembly overview - exhaust gas recirculation system	636
5.2	Removing and installing exhaust gas recirculation cooler	642
5.3	Removing and installing exhaust gas recirculation valve 2 GX6	648
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	648
5.5	Removing and installing pressure sender for exhaust gas recirculation G691	649



6	Exhaust manifold	651
6.1	Assembly overview - exhaust manifold	651
6.2	Removing and installing exhaust manifolds	652
28	Glow plug system	656
1	Glow plug system	656
1.1	Assembly overview - glow plug system	656
1.2	Removing and installing glow plug	658
1.3	Removing and installing automatic glow period control unit J179	662
1.4	Removing and installing Hall sender G40	663
1.5	Removing and installing engine speed sender G28	664