

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number / engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the SCR system	4
2.7 Safety precautions when working on the glow plug system	5
3 Repair instructions	6
3.1 Identification plates	6
3.2 Use of impact wrenches	6
3.3 Rules for cleanliness	7
3.4 General notes	7
3.5 General repair instructions	9
3.6 Foreign material in engine	10
3.7 Cleaning engine	10
3.8 Contact corrosion	10
3.9 Routing and attachment of pipes, hoses and wiring	11
3.10 Installing radiators and condensers	11
3.11 Performing adaptations after renewing a component	11
10 - Removing and installing engine	13
1 Removing and installing engine	13
2 Assembly mountings	14
3 Engine cover panel	15
3.1 Removing and installing engine cover panel	15
13 - Crankshaft group	16
1 Cylinder block (pulley end)	16
1.1 Assembly overview - cylinder block (pulley end)	16
1.2 Assembly overview - sealing flange (pulley end)	23
1.3 Removing and installing poly V-belts	24
1.4 Removing and installing poly V-belt tensioner	29
1.5 Removing and installing vibration damper	31
1.6 Removing and installing bracket for ancillaries	33
1.7 Removing and installing engine support	37
1.8 Renewing crankshaft oil seal (pulley end)	37
1.9 Removing and installing sealing flange (pulley end)	39
2 Cylinder block (gearbox end)	43
2.1 Assembly overview - cylinder block (gearbox end)	43
2.2 Removing and installing drive plate	43
2.3 Renewing crankshaft oil seal (gearbox end)	46
3 Crankshaft	49
3.1 Assembly overview - crankshaft	49
3.2 Crankshaft dimensions	52
3.3 Allocation of main bearing shells	52
3.4 Measuring axial clearance of crankshaft	55
3.5 Measuring radial clearance of crankshaft	56
3.6 Checking sender wheel	57



4	Balance shaft	59
4.1	Assembly overview - balance shaft	59
4.2	Removing and installing balance shaft	59
4.3	Renewing roller bearing	67
5	Pistons and conrods	70
5.1	Assembly overview - pistons and conrods	70
5.2	Removing and installing pistons	74
5.3	Measuring piston projection at TDC	75
5.4	Checking pistons and cylinder bores	78
5.5	Checking radial clearance of conrod bearings	80
15	- Cylinder head, valve gear	81
1	Timing chain cover	81
1.1	Assembly overview - timing chain cover	81
1.2	Removing and installing timing chain cover	85
2	Chain drive	99
2.1	Assembly overview - camshaft timing chains	99
2.2	Assembly overview - drive chain for high-pressure pump	101
2.3	Assembly overview - drive chain for oil pump	102
2.4	Assembly overview - intermediate drive	103
2.5	Removing camshaft timing chain from camshafts	104
2.6	Removing and installing camshaft timing chain	117
2.7	Removing and installing drive chain for high-pressure pump	129
2.8	Installing intermediate drive	131
3	Cylinder head	140
3.1	Assembly overview - cylinder head	140
3.2	Assembly overview - cylinder head cover	143
3.3	Removing and installing cylinder head	149
3.4	Removing and installing cylinder head cover	158
3.5	Removing and installing seals for injectors	163
3.6	Checking compression	164
4	Valve gear	167
4.1	Assembly overview - valve gear	167
4.2	Measuring axial clearance of camshaft	176
4.3	Measuring radial clearance of camshaft	178
4.4	Removing and installing camshaft	179
4.5	Removing and installing valve stem oil seals	196
5	Inlet and exhaust valves	207
5.1	Reworking valve seats	207
5.2	Checking valve guides	207
5.3	Checking valves	208
5.4	Valve dimensions	208
17	- Lubrication	210
1	Sump/oil pump	210
1.1	Assembly overview - sump/oil pump	210
1.2	Engine oil	215
1.3	Removing and installing lower part of sump	215
1.4	Removing and installing upper part of sump	219
1.5	Removing and installing oil pump	222
1.6	Removing and installing oil level and oil temperature sender G266	224
2	Engine oil cooler	226
2.1	Assembly overview - engine oil cooler	226
2.2	Removing and installing engine oil cooler	228
2.3	Removing and installing temperature regulator for engine oil cooler	229

3	Crankcase breather	232
3.1	Assembly overview - crankcase breather system	232
3.2	Removing and installing oil separator	233
4	Oil filter/oil pressure switch	234
4.1	Assembly overview - oil filter	234
4.2	Removing and installing oil filter housing	236
4.3	Removing and installing oil pressure sender G10	237
4.4	Checking oil pressure	238
4.5	Removing and installing valve for oil pressure control N428	238
4.6	Removing and installing oil temperature sender 2 G664	239
19	- Cooling	243
1	Cooling system/coolant	243
1.1	Connection diagram - coolant hoses	243
1.2	Checking cooling system for leaks	243
1.3	Draining and filling cooling system	247
2	Coolant pump/thermostat assembly	250
2.1	Assembly overview - coolant pump	250
2.2	Assembly overview - electric coolant pump	251
2.3	Assembly overview - thermostat	251
2.4	Assembly overview - coolant temperature senders	253
2.5	Removing and installing electric coolant pump	254
2.6	Removing and installing coolant pump	254
2.7	Removing and installing thermostat	257
2.8	Removing and installing thermostat housing	258
2.9	Removing and installing coolant temperature sender G62	258
2.10	Removing and installing temperature sender for engine temperature regulation G694	260
2.11	Removing and installing coolant valves	261
3	Coolant pipes	263
4	Radiator/radiator fans	264
21	- Turbocharging/supercharging	265
1	Turbocharger	265
1.1	Assembly overview - turbocharger	265
1.2	Removing and installing turbocharger	270
2	Charge air system	276
2.1	Assembly overview - charge air system	276
2.2	Assembly overview - hose connections for charge air system	276
2.3	Removing and installing charge air cooler	277
2.4	Removing and installing charge pressure sender G31	277
2.5	Removing and installing charge air temperature sender	278
2.6	Checking charge air system for leaks	278
23	- Mixture preparation - injection	283
1	Injection system	283
1.1	Overview - fuel system	283
1.2	Overview of fitting locations - injection system	283
1.3	Filling and bleeding fuel system	283
1.4	Checking fuel system for leaks	284
2	Vacuum system	285
2.1	Connection diagram - vacuum system	285
2.2	Checking vacuum system	285
3	Air filter	287
4	Intake manifold	288



4.1	Assembly overview - intake manifold	288
4.2	Removing and installing upper part of intake manifold	295
4.3	Removing and installing lower part of intake manifold	301
4.4	Removing and installing intake manifold flap control unit GX14	303
4.5	Removing and installing throttle valve module GX3	305
5	Injectors/high-pressure reservoir (rail)	307
5.1	Assembly overview - injectors	307
5.2	Checking injectors	312
5.3	Performing adaption of correction values for injectors	312
5.4	Checking return flow rate of injectors with engine running	313
5.5	Checking return flow rate of injectors at starter cranking speed	318
5.6	Checking pressure retention valve in fuel return line	321
5.7	Checking for injectors sticking open	323
5.8	Removing and installing injectors	326
5.9	Installing high-pressure pipes	339
5.10	Removing and installing high-pressure reservoir (rail)	341
6	Senders and sensors	347
6.1	Removing and installing air mass meter G70	347
6.2	Removing and installing fuel temperature sender G81	347
6.3	Removing and installing fuel pressure sender G247	348
6.4	Removing and installing fuel pressure sender for low pressure G410	350
6.5	Checking fuel pressure regulating valve N276	351
6.6	Removing and installing fuel pressure regulating valve N276	351
6.7	Removing and installing pressure differential sender G505	357
7	High-pressure pump	358
7.1	Assembly overview - high-pressure pump	358
7.2	Removing and installing high-pressure pump	361
8	Lambda probe	369
8.1	Assembly overview - Lambda probe	369
8.2	Removing and installing Lambda probe	371
8.3	Removing and installing NOx senders	372
8.4	Removing and installing particulate sensor G784	372
9	Engine control unit	373
26 - Exhaust system		374
1	Exhaust pipes/silencers	374
1.1	Assembly overview - silencers	374
1.2	Removing and installing front exhaust pipe	374
1.3	Separating exhaust pipes/silencers	374
1.4	Removing and installing silencers	374
1.5	Stress-free alignment of exhaust system	374
1.6	Checking exhaust system for leaks	374
2	Emission control system	376
2.1	Assembly overview - emission control system	376
2.2	Removing and installing emission control module	382
2.3	Removing and installing ammonia trap	382
2.4	Removing and installing exhaust flap control unit J883	385
3	SCR (selective catalytic reduction) system	387
3.1	Assembly overview - reducing agent tank	387
3.2	Assembly overview - reducing agent supply line	387
3.3	Assembly overview - reducing agent supply line	389
3.4	Removing and installing front reducing agent supply line	390
3.5	Releasing pressure in SCR system	393
3.6	Draining reducing agent tank	394
3.7	Removing and installing reducing agent tank	394

3.8	Removing and installing injector for reducing agent N474	394
3.9	Removing and installing control unit for reducing agent metering system J880	396
4	Exhaust gas temperature regulation	397
4.1	Assembly overview - exhaust gas temperature regulation	397
4.2	Removing and installing exhaust gas temperature sender 1 G235	398
4.3	Removing and installing exhaust gas temperature sender 2 G448	400
4.4	Removing and installing exhaust gas temperature sender 3 G495	401
4.5	Removing and installing exhaust gas temperature sender 4 G648	403
5	Exhaust gas recirculation	405
5.1	Assembly overview - exhaust gas recirculation system	405
5.2	Removing and installing exhaust gas recirculation cooler	410
5.3	Installing repair kit for exhaust gas recirculation cooler	414
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	417
5.5	Removing and installing pressure sender for exhaust gas recirculation G691	418
6	Exhaust manifold	420
6.1	Assembly overview - exhaust manifold	420
6.2	Removing and installing exhaust manifold	420
28	Glow plug system	421
1	Glow plug system	421
1.1	Assembly overview - glow plug system	421
1.2	Removing and installing glow plug	424
1.3	Removing and installing automatic glow period control unit J179	427
1.4	Removing and installing Hall sender G40	429
1.5	Removing and installing engine speed sender G28	429