

001 - 3.0l petrol engine , DLZA	1-23
1. 3.0l petrol engine , DLZA	1
2. Main relay, Engine component power supply relay, Fuse holder A	2
3. Starter-alternator, Fuse holder A, Starter-alternator coolant pump	3
4. Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	4
5. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	5
6. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	6
7. Coolant temperature sender, Oil level and oil temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit	7
8. Oil pressure switch, Oil temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Coolant valve for cylinder block, Switch valve for mechanical coolant pump	8
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	9
10. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	10
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 6, Fuel metering valve	11
12. Inlet cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Overrun air recirculation valve for bank 1	12
13. Map-controlled engine cooling system thermostat, Inlet cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Engine/motor control unit, Continued coolant circulation pump	13
14. Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2, Piston cooling jet control valve	14
15. Engine speed sender, Charge pressure sender, Knock sensor 1, Knock sensor 2, Intake manifold pressure sender, Engine/motor control unit	15
16. Hall sender, Hall sender 2, Hall sender 3, Hall sender 4, Temperature sender for engine cover panel, Engine/motor control unit	16
17. Throttle valve module, Oil pressure sender, Engine/motor control unit	17
18. Radiator outlet coolant temperature sender, Fuel pressure sender, Fuel pressure sender for low pressure, Tank breather pressure sensor 1, Engine/motor control unit, Valve for oil pressure control	18
19. Brake pedal switch, Pressure differential sender for particulate filter, ABS control unit, Engine/motor control unit, Coolant circulation pump	19
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Fuel tank leak detection module, Engine/motor control unit	20
21. Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit, Radiator fan, Radiator fan 2	21
22. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor regulating valve, Air conditioner compressor	22
23. Radiator fan single fuse, Terminal 30 wiring junction, Terminal 30a wiring junction	23
002 - 3.0l diesel engine , DDVB,DDVE,DDVF	24-46
1. 3.0l diesel engine , DDVB,DDVE,DDVF	24
2. Main relay, Fuse holder A	25
3. Fuse holder A	26
4. Automatic glow period control unit, Glow plug 1, Glow plug 6	27
5. Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	28
6. Accelerator pedal module, Automatic gearbox control unit, Steering column electronics control unit, Engine/motor control unit	29
7. Starter-alternator, Engine/motor control unit	30
8. Air mass meter, Engine/motor control unit, Injector for reducing agent, Air conditioner compressor	31
9. Charge air temperature sender after charge air cooler, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	32
10. Exhaust gas recirculation valve 1, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit, Fuel metering valve	33
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 6, Valve for oil pressure control	34
12. Oil level and oil temperature sender, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Coolant valve for cylinder head, Coolant circulation pump	35
13. Intake manifold flap control unit, Engine/motor control unit, Exhaust flap control unit	36
14. Oil pressure sender, Engine speed sender, Fuel pressure sender for low pressure, Pressure differential sender. Engine/motor control unit	37

15. Throttle valve module, Charge pressure sender, Hall sender, Fuel pressure sender, Engine/motor control unit	38
16. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Pressure differential sender 2, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Fuel pressure regulating valve	39
17. Exhaust gas recirculation valve 2, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Engine/motor control unit, Turbocharger 1 control unit	40
18. Lambda probe 1 before catalytic converter, Control unit 2 for NOx sender, Particulate sensor, Engine/motor control unit	41
19. Control unit for NOx sender, Engine/motor control unit, Radiator fan, Radiator fan 2	42
20. Brake pedal switch, Fuel pump control unit, Engine/motor control unit	43
21. Data bus diagnostic interface, Engine/motor control unit	44
22. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	45
23. Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30a wiring junction	46
003 - 8-speed automatic gearbox 0D5/0D6 , (G1G),(1VG),(1VH)	47-53
1. 8-speed automatic gearbox 0D5/0D6 , (G1G),(1VG),(1VH)	47
2. Automatic gearbox control unit, Automatic gearbox control unit fuse	48
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Temperature sender in control unit, Parking lock sender, Automatic gearbox control unit, Gearbox oil cooling valve	49
4. Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Auxiliary hydraulic pump 1 for gearbox oil	50
5. Selector lever, Sender for lateral selector lever lock, Data bus diagnostic interface	51
6. Selector lever, Selector lever position sender, Selector lever lock solenoid, Motor for lateral selector lever lock, Selector lever position display	52
7. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp	53
004 - Dual clutch gearbox (DSG) , (G1C),(G1D),(0K0),(0K4)	54-60
1. Dual clutch gearbox (DSG) , (G1C),(G1D),(0K0),(0K4)	54
2. Automatic gearbox control unit fuse	55
3. Gearbox oil temperature sender, Gear selector movement sensor 1, Gear selector movement sensor 3, Temperature sender in control unit, Hydraulic pressure sender 1, Gear sensor, Automatic gearbox control unit	56
4. Automatic gearbox control unit, Solenoid valve 1, Solenoid valve 4, Automatic gearbox pressure regulating valve 1	57
5. Selector lever, Gearbox input speed sender 1, Rotor position sender for gearbox auxiliary hydraulic pump, Automatic gearbox control unit, Gearbox auxiliary hydraulic pump, Electric pump 2 for gearbox	58
6. Selector lever, Data bus diagnostic interface, Selector lever lock solenoid, Parking lock solenoid	59
7. Selector lever, Selector lever position sender, Sender for lateral selector lever lock, All-wheel drive control unit, Selector lever position display	60
005 - Fuse assignment , (LOL)	61-94
1. Fuse assignment , (LOL)	61
2. Power steering control unit, Battery isolation igniter	62
3. Battery isolation igniter	63
4. Automatic glow period control unit, Secondary air pump relay, Terminal 30 wiring junction, Terminal 30a wiring junction, Radiator fan, Radiator fan 2	64
5. Starter, Terminal 30 wiring junction	65
6. Heated windscreen control unit, Rear wheel steering control unit, Brake servo, Wiring junction	66
7. Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Engine electronics fuse	67
8. Main relay, Terminal 15 voltage supply relay, Relay and fuse carrier 2	68
9. Engine component power supply relay, Relay and fuse carrier 2, Driver seat adjustment thermal fuse 1, Automatic gearbox control unit fuse	69
10. Fuse holder B, Relay and fuse carrier 2, ABS control unit fuse 1, ABS control unit fuse 2	70
11. Onboard supply control unit, Fuse holder B	71
12. Onboard supply control unit, Fuse holder B	72
13. Second battery, Onboard supply control unit, Fuse holder B	73
14. Fuse holder C	74
15. Fuse holder C	75
16. Fuse holder C, Fuse holder D	76
17. Fuse holder D	77
18. Fuse holder E	78
19. Fuse holder E	79
20. Fuse holder E	80

21. Low heat output relay, High heat output relay, Fuse holder F, Relay and fuse carrier 3	81
22. Fuse holder F	82
23. Fuse holder F, Fuse holder G	83
24. Fuse holder G	84
25. Heated rear window relay, Heated rear window fuse, Front passenger seat adjustment thermal fuse 1	85
26. Fuse holder H, Levelling system fuse	86
27. Fuse holder H	87
28. Convenience system central control unit, Fuse holder H	88
29. Fuse holder J	89
30. Fuse holder J, Fuse holder M	90
31. Fuse holder M	91
32. Fuse holder M, Fuse holder N	92
33. Fuse holder N	93
34. Fuse holder N	94
006 - Convenience system, left-hand drive , (L0L)	95-109
1. Convenience system, left-hand drive , (L0L)	95
2. Onboard supply control unit	96
3. Onboard supply control unit	97
4. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	98
5. Valet parking button, Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit	99
6. Glove compartment light switch, Valet parking button, Onboard supply control unit, Front right footwell illumination bulb, Glove compartment light	100
7. Onboard supply control unit, Front left footwell illumination bulb, Light 1 for dash panel contour lighting, Light 3 for dash panel background lighting	101
8. Onboard supply control unit, Light 1 for dash panel background lighting, Light 2 for dash panel background lighting	102
9. Onboard supply control unit, Light 1 for front centre console background lighting, Light 3 for front centre console background lighting	103
10. Onboard supply control unit, Centre console rear storage compartment illumination bulb, Light 2 for front centre console background lighting, Light 4 for front centre console background lighting, Right centre armrest illumination bulb	104
11. Light 1 for centre console contour lighting, Light 2 for centre console contour lighting	105
12. Convenience system central control unit, Rear roller blind motor, Left luggage compartment light, Right luggage compartment light	106
13. Convenience system central control unit, High-level brake light bulb, Left number plate light, Right number plate light	107
14. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Tank filler flap locking motor	108
15. Convenience system central control unit, Central locking and anti-theft alarm system aerial	109
007 - Airbag systems for LHD vehicles , (4UE),(4UF)	110-125
1. Airbag systems for LHD vehicles , (4UE),(4UF)	110
2. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	111
3. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	112
4. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Onboard supply control unit, Warning lamp for airbag deactivated on front passenger side, Front passenger airbag unit	113
5. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	114
6. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit	115
7. Twin belt buckle, Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Airbag control unit, Side airbag igniter on front passenger side	116
8. Passenger side belt buckle, seat row 2, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	117
9. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	118
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	119
11. Second battery, Battery, 48 V, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection. Airbaa control unit. Ianiter for driver side seat belt tensioner 2. Ianiter for front	120

passenger side seat belt tensioner 2	
12. Airbag control unit, Control unit for rear left belt tensioner, Control unit for rear right belt tensioner	121
13. Airbag control unit, Front left seat belt	122
14. Airbag control unit, Front right seat belt	123
15. Front pressure hose sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Coupling point on high-voltage battery	124
16. Lane change assist control unit 2	125
008 - 48 V system , (VH2),(VH3)	126-130
1. 48 V system , (VH2),(VH3)	126
2. Battery, 48 V, Voltage converter (48 V/12 V), Battery isolation igniter, Voltage converter fan	127
3. Battery, 48 V, Battery fan 1, Battery fan 2	128
4. Starter-alternator, Terminal 40 wiring junction, Terminal 40 wiring junction 2	129
5. Control unit for electric compressor, Fuse holder A	130
009 - All-wheel drive , (GH2)	131-134
1. All-wheel drive , (GH2)	131
2. Differential lock control unit	132
3. Differential lock control unit	133
4. Differential lock control unit	134
010 - All-wheel drive , (GH4)	135-137
1. All-wheel drive , (GH4)	135
2. Clutch position sender for all-wheel drive, Propshaft speed sender, All-wheel drive control unit, Clutch actuator for all-wheel drive, Clutch actuator 2 for all-wheel drive	136
3. Automatic gearbox control unit, Data bus diagnostic interface	137
011 - Anti-lock brake system (ABS)	138-148
1. Anti-lock brake system (ABS)	138
2. ABS control unit, Relay and fuse carrier 2, ABS control unit fuse 1, ABS control unit fuse 2	139
3. Rear right speed sensor, Front right speed sensor, Front left speed sensor, Vacuum sender, ABS control unit	140
4. Rear left speed sensor, ABS control unit, Left parking brake motor, Right parking brake motor	141
5. Parking brake button, Electromechanical parking brake button, ABS control unit	142
6. ABS control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	143
7. Onboard supply control unit	144
8. Brake pedal switch, Brake servo, Fuse holder N, Wiring junction	145
9. Brake servo	146
10. Brake servo, Brake system pressure accumulator	147
11. Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Rear right brake pad wear sender	148
012 - Automatic anti-dazzle interior mirror, rain sensor , (QK1)	149-151
1. Automatic anti-dazzle interior mirror, rain sensor , (QK1)	149
2. Interior mirror, Light sensor	150
3. Humidity sender, Rain and light sensor	151
013 - Data bus network	152-176
1. Data bus network	152
2. Battery monitor control unit, Data bus diagnostic interface, Fuse holder B	153
3. Data bus diagnostic interface, Diagnostic connection	154
4. Automatic glow period control unit, Data bus diagnostic interface, Engine/motor control unit	155
5. Starter-alternator, Control unit for NOx sender, Control unit 2 for NOx sender, Data bus diagnostic interface, Engine/motor control unit	156
6. Control unit 3 for NOx sender, Particulate sensor, Data bus diagnostic interface	157
7. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2, Reversing camera system control unit, Control unit for reducing agent metering system	158
8. Interior mirror, Data bus diagnostic interface, Control unit for night vision system, Control unit for structure-borne sound, Power unit mounting control unit	159
9. High-pressure sender, Auxiliary heater control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Control unit 1 for information electronics, Remote control receiver for auxiliary heater, Roof aerial	160
10. Control unit for seat and steering column adjustment with memory function, Driver door control unit, Data bus diagnostic interface, Near field communication control unit	161
11. Additional display and operating unit 1, Control unit in dash panel insert, Data bus diagnostic interface, Control unit for head-up display	162
12. Driver side volume regulator, Sliding sunroof adjustment control unit, Control unit for front passenger seat adjustment with memory function, Data bus diagnostic interface, Charging unit 1 for mobile devices. Light 1 for centre console contour lighting	163

13. Trailer detector control unit, Front passenger door control unit, Rear sliding sunroof control unit, Data bus diagnostic interface, Rear lid control unit, Control unit for rear seat adjustment, passenger side	164
14. Second battery, Charging unit 1 for high-voltage battery, Battery, 48 V, Voltage converter (48 V/12 V), Data bus diagnostic interface	165
15. Power and control electronics for electric drive, Data bus diagnostic interface, Battery regulation control unit, Thermal management control unit, Interface control unit for telematics	166
16. Hybrid battery unit, Telephone and telematics control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Interface control unit for telematics	167
17. Operating and display unit for rear air conditioning system, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	168
18. External air quality and air humidity sensor, Onboard supply control unit, Driver assist systems control unit, Front left headlight, Front right headlight, Left B-pillar and footwell shut-off flap control motor	169
19. Wiper motor control unit, Onboard supply control unit, Windscreen washer pump control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 3 for front centre console background lighting, Light 4 for front centre console background lighting	170
20. Rain and light sensor, Onboard supply control unit, Garage door operation control unit, Control unit for electrically adjustable steering column, Front roof module	171
21. Light switch, Centre switch module in dash panel, Switch module 1 in centre console, Onboard supply control unit, Rear driver side door control unit, Rear passenger side door control unit, Coupling point in rear right door	172
22. Air conditioner sensor for fine particle concentration, Fresh air blower control unit, Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system, Light 1 for dash panel background lighting, Light 2 for dash panel background lighting	173
23. Alarm horn, Convenience system central control unit, Near field communication control unit 2, Light 1 for dash panel contour lighting, Light 3 for dash panel background lighting	174
24. Anti-theft alarm sensor, Convenience system central control unit, Heated windscreen control unit, Rear lid power opening control unit, Left tail light cluster 2, Right tail light cluster 2	175
25. Automatic gearbox control unit, Airbag control unit, Running gear control unit, Control unit for rear left belt tensioner, Control unit for rear right belt tensioner, Front left seat belt, Front right seat belt, Electric pump 2 for gearbox	176
014 - Parking aid (PDC) , (7X2)	177-181
1. Parking aid (PDC) , (7X2)	177
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Onboard supply control unit	178
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	179
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Onboard supply control unit	180
5. Switch module 1 in centre console, Data bus diagnostic interface, Reversing camera system control unit	181
015 - Parking aid (PDC) , (7X5),(KA0),(KA2)	182-187
1. Parking aid (PDC) , (7X5),(KA0),(KA2)	182
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Onboard supply control unit	183
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	184
4. Rear left parking aid sender, Rear centre left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Onboard supply control unit	185
5. Rear centre right parking aid sender, Rear right parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Onboard supply control unit	186
6. Switch module 1 in centre console, Data bus diagnostic interface, Reversing camera system control unit	187
016 - Parking aid (PDC) , (KA6)	188-193
1. Parking aid (PDC) , (KA6)	188
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Driver assist systems control unit	189
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Driver assist systems control unit	190
4. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Driver assist systems control unit	191
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Driver assist systems control unit	192
6. Control unit 1 for information electronics. Driver assist svstems control unit	193

017 - Overhead view camera , (KA6)	194-198
1. Overhead view camera , (KA6)	194
2. Switch module 1 in centre console, Onboard supply control unit, Driver assist systems control unit	195
3. Driver assist systems control unit, Front overhead view camera, Left overhead view camera, Right overhead view camera, Rear overhead view camera	196
4. Control unit in dash panel insert, Control unit 1 for information electronics, Driver assist systems control unit	197
5. Roof aerial control unit, Roof aerial	198
018 - Electromechanical steering	199-202
1. Electromechanical steering	199
2. Convenience system central control unit, Power steering control unit, Battery isolation igniter, Electromechanical power steering motor	200
3. Steering moment sender, Automatic gearbox control unit, Power steering control unit, Data bus diagnostic interface	201
4. Automatic gearbox control unit	202
019 - Adjustable driver and front passenger seats , (3L4),(4D0),(4V0),(L0L)	203-210
1. Adjustable driver and front passenger seats , (3L4),(4D0),(4V0),(L0L)	203
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	204
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function	205
4. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	206
5. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	207
6. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit, Rear right footwell light	208
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	209
8. Front passenger seat lumbar support adjustment switch, Onboard supply control unit, Data bus diagnostic interface, Front passenger seat lumbar support height adjustment motor	210
020 - Data bus network (FlexRay bus)	211-222
1. Data bus network (FlexRay bus)	211
2. Data bus diagnostic interface, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection, Driver assist systems control unit	212
3. Data bus diagnostic interface, Running gear control unit, Driver assist systems control unit	213
4. Data bus diagnostic interface, Engine/motor control unit, Driver assist systems control unit	214
5. ABS control unit, Adaptive cruise control unit, Data bus diagnostic interface, Engine/motor control unit, Control unit for laser distance control	215
6. Power and control electronics for electric drive, Differential lock control unit, Data bus diagnostic interface, Rear wheel steering control unit	216
7. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	217
8. Automatic gearbox control unit, All-wheel drive control unit, Data bus diagnostic interface, Brake servo	218
9. Automatic gearbox control unit, All-wheel drive control unit, Data bus diagnostic interface	219
10. Power steering control unit	220
11. Active steering control unit	221
12. Steering column electronics control unit, Active steering control unit	222
021 - Head-up display , (KS1)	223-225
1. Head-up display , (KS1)	223
2. Control unit for head-up display	224
3. Control unit for head-up display	225
022 - Garage door opener , (VC2)	226-227
1. Garage door opener , (VC2)	226
2. Garage door operation control unit	227
023 - Adjustable driver and front passenger seats , (3L3),(L0L),(Q1A),(Q1D),(Q4P)	228-231
1. Adjustable driver and front passenger seats , (3L3),(L0L),(Q1A),(Q1D),(Q4P)	228
2. Driver seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Rear left footwell light	229
3. Front passenger seat lumbar support adjustment switch, Front passenger seat lumbar support longitudinal adjustment motor. Front passenger seat lumbar support height adjustment motor. Rear	230

right footwell light	231
4. Onboard supply control unit	231
024 - Infotainment MOST bus	232-234
1. Infotainment MOST bus	232
2. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for head-up display	233
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, Control unit for head-up display, TV tuner	234
025 - Multifunction steering wheel	235-240
1. Multifunction steering wheel	235
2. Steering column electronics control unit	236
3. Steering column electronics control unit, Engine/motor control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Heated steering wheel	237
4. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection	238
5. Multifunction buttons on left in steering wheel, Tiptronic switch (shift down), Heated steering wheel sender, Multifunction steering wheel control unit	239
6. Tiptronic switch (shift up), Steering wheel heater button, Multifunction steering wheel control unit	240
026 - Reversing camera (Rear Assist) , (KA2)	241-242
1. Reversing camera (Rear Assist) , (KA2)	241
2. Data bus diagnostic interface, Reversing camera system control unit, Reversing camera, Fuse holder M	242
027 - Dash panel insert	243-246
1. Dash panel insert	243
2. Control unit in dash panel insert	244
3. Control unit in dash panel insert	245
4. Control unit in dash panel insert	246
028 - Automatic anti-dazzle interior mirror, rain sensor , (QK0)	247-248
1. Automatic anti-dazzle interior mirror, rain sensor , (QK0)	247
2. Interior mirror, Rain and light sensor, Light sensor	248
029 - Front seat heating , (4A3),(4A4),(L0L)	249-252
1. Front seat heating , (4A3),(4A4),(L0L)	249
2. Onboard supply control unit	250
3. Onboard supply control unit	251
4. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	252
030 - Entry and start authorisation , (2F0)	253-258
1. Entry and start authorisation , (2F0)	253
2. Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Front aerial for entry and start authorisation	254
3. Entry and start authorisation button, Convenience system central control unit	255
4. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit	256
5. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	257
6. Convenience system central control unit, Control unit for electronic steering column lock	258
031 - Electromechanical rear wheel steering , (0N5)	259-260
1. Electromechanical rear wheel steering , (0N5)	259
2. Rear wheel steering sender 1, Rear wheel steering sender 2, Differential lock control unit, Data bus diagnostic interface, Rear wheel steering control unit	260
032 - Steering column adjustment , (2C7)	261-262
1. Steering column adjustment , (2C7)	261
2. Steering column adjustment switch, Control unit for electrically adjustable steering column	262
033 - Light switch	263-264
1. Light switch	263
2. Light switch, Onboard supply control unit	264
034 - Lane change assist , (7Y1)	265-267
1. Lane change assist , (7Y1)	265
2. Data bus diagnostic interface, Lane change assist control unit	266
3. Lane change assist control unit, Lane change assist control unit 2	267
035 - Centre console switches	268-270
1. Centre console switches	268
2. Centre switch module in dash panel, Operating unit 1 for driver and convenience functions, Onboard supply control unit	269

3. Centre switch module in dash panel, Switch module 1 in centre console, Driver assist systems control unit	270
036 - Tyre Pressure Monitoring System , (7K4),(7K3)	271-272
1. Tyre Pressure Monitoring System , (7K4),(7K3)	271
2. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Fuse holder M	272
037 - LED matrix beam headlights , (8G5)	273-291
1. LED matrix beam headlights , (8G5)	273
2. Onboard supply control unit	274
3. Output module 1 for left LED headlight, Front left headlight, Front left dynamic turn signal	275
4. Output module 1 for left LED headlight, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Front left dynamic turn signal	276
5. Output module 1 for left LED headlight, Output module 2 for left LED headlight, Left LED module for daytime running light and side light, Front left headlight, Left headlight dipped beam bulb	277
6. Output module 1 for left LED headlight, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb	278
7. Output module 1 for left LED headlight, Front left headlight, Left headlight main beam bulb	279
8. Output module 1 for left LED headlight, Output module for left matrix headlight, Front left headlight, Left headlight main beam bulb	280
9. Output module 1 for left LED headlight, Output module for left matrix headlight, Front left headlight, Left static cornering light, Left headlight fan	281
10. Output module 1 for left LED headlight, Front left headlight, Left headlight range control motor	282
11. Output module 1 for right LED headlight, Front right headlight, Front right dynamic turn signal	283
12. Output module 1 for right LED headlight, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Front right dynamic turn signal	284
13. Output module 1 for right LED headlight, Output module 2 for right LED headlight, Right LED module for daytime running light and side light, Front right headlight, Right headlight dipped beam bulb	285
14. Output module 1 for right LED headlight, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	286
15. Output module 1 for right LED headlight, Front right headlight, Right headlight main beam bulb	287
16. Output module 1 for right LED headlight, Output module for right matrix headlight, Front right headlight, Right headlight main beam bulb	288
17. Output module 1 for right LED headlight, Output module for right matrix headlight, Front right headlight, Right static cornering light, Right headlight fan	289
18. Output module 1 for right LED headlight, Front right headlight, Right headlight range control motor	290
19. Rear left vehicle level sender, Front left vehicle level sender, Convenience system central control unit	291
038 - Night vision system , (9R1)	292-293
1. Night vision system , (9R1)	292
2. Control unit for night vision system, Camera for night vision system	293
039 - Window wash/wipe system, heated washer jets, headlight washer system , (9PF)	294-296
1. Window wash/wipe system, heated washer jets, headlight washer system , (9PF)	294
2. Rain and light sensor, Onboard supply control unit, Headlight washer system pump	295
3. Wiper motor control unit, Windscreen washer pump control unit, Washer pump, Heater element 1, in driver side wiper arm, Heater element 1, in passenger side wiper arm	296
040 - Adaptive chassis control DCC , (1BK),(1BL),(1BQ),(1BY),(2MA),(2MC)	297-302
1. Adaptive chassis control DCC , (1BK),(1BL),(1BQ),(1BY),(2MA),(2MC)	297
2. Running gear control unit, Front left shock absorber damping adjustment valve	298
3. Running gear control unit, Adaptive suspension compressor electronics, Adaptive suspension drain valve, Rear left shock absorber damping adjustment valve	299
4. Running gear control unit, Valve block for adaptive suspension	300
5. Rear left vehicle level sender, Front left vehicle level sender, Running gear control unit	301
6. Running gear control unit, Active steering control unit	302
041 - Tail light clusters with LEDs , (8SK)	303-305
1. Tail light clusters with LEDs , (8SK)	303
2. Convenience system central control unit, Left tail light cluster	304
3. Convenience system central control unit, Right tail light cluster, Left tail light cluster 2, Right tail light cluster 2	305
042 - Tail light clusters with LEDs , (8SQ)	306-309
1. Tail light clusters with LEDs , (8SQ)	306
2. Convenience system central control unit, Left tail light cluster	307
3. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	308
4. Convenience system central control unit, Right tail light cluster	309
043 - Cigarette lighter and 12 V sockets	310-312
1. Cigarette lighter and 12 V sockets	310

2. Onboard supply control unit, Rear cigarette lighter	311
3. Data bus diagnostic interface, 12 V socket, DC/AC converter with socket, 12 V - 230 V, 12 V socket 3	312
044 - Entry and start authorisation , (2F1)	313-320
1. Entry and start authorisation , (2F1)	313
2. Convenience system central control unit	314
3. Entry and start authorisation button, Convenience system central control unit, Data bus diagnostic interface	315
4. Convenience system central control unit, Near field communication control unit	316
5. Contact sensor for front right exterior door handle, Convenience system central control unit	317
6. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	318
7. Convenience system central control unit, Near field communication control unit 2, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Front aerial for entry and start authorisation	319
8. Control unit for electronic steering column lock, Charging unit 1 for mobile devices, Near field communication control unit 2, Near field communication aerial 2	320
045 - Digital TV tuner , (Q0A),(Q0B),(QU1),(QV1)	321-325
1. Digital TV tuner , (Q0A),(Q0B),(QU1),(QV1)	321
2. TV tuner, TV card reader	322
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, Control unit for head-up display, TV tuner	323
4. Aerial amplifier, TV tuner, Aerial amplifier 3 for TV	324
5. TV tuner, Aerial amplifier 2 for TV, Aerial amplifier 2	325
046 - Driver door , (L0L)	326-338
1. Driver door , (L0L)	326
2. Driver door control unit, Driver assist systems control unit, Light for sill panel moulding background lighting, driver side	327
3. Driver door control unit, Light for exterior door handle illumination, driver side, Driver door power latching motor	328
4. Driver door control unit, Driver door lock unit, Driver side window regulator motor	329
5. Operating unit for window regulator in driver door, Driver door control unit	330
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit	331
7. Exterior mirror adjuster, Driver operating unit for memory settings, Driver door control unit, Light for driver side interior door handle illumination, Exit warning lamp, driver side	332
8. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side door loudspeaker trim, Light for front left door contour lighting, Light for driver door background lighting	333
9. Alarm system off switch, Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Light for front left door contour lighting, Light for left door storage compartment illumination	334
10. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver side exterior mirror, Driver side entry light	335
11. Driver door control unit, Driver side exterior mirror	336
12. Driver door control unit, Onboard supply control unit, Driver side exterior mirror	337
13. Front passenger door control unit, Rear driver side door control unit, Rear passenger side door control unit	338
047 - Front passenger door , (L0L)	339-348
1. Front passenger door , (L0L)	339
2. Front passenger door control unit, Driver assist systems control unit, Fuse holder B, Light for sill panel moulding background lighting, front passenger side	340
3. Front passenger door control unit, Light for exterior door handle illumination, front passenger side, Front passenger door power latching motor	341
4. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor	342
5. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Light for passenger side interior door handle illumination, Passenger side entry light	343
6. Front passenger operating unit for memory settings, Front passenger door control unit, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Exit warning lamp, front passenger side	344
7. Front passenger door control unit, Light 1 for front right door background lighting, Light for front right door contour lighting, Light for right door storage compartment illumination, Passenger side exterior mirror	345

8. Front passenger door control unit, Passenger side exterior mirror	346
9. Front passenger door control unit, Onboard supply control unit, Passenger side exterior mirror	347
10. Driver door control unit, Onboard supply control unit, Rear driver side door control unit, Rear passenger side door control unit	348
048 - Rear left door , (L0L)	349-355
1. Rear left door , (L0L)	349
2. Onboard supply control unit, Rear driver side door control unit, Light for rear sill panel moulding background lighting, driver side	350
3. Rear driver side door control unit, Rear door lock unit, driver side, Rear door power latching motor, driver side	351
4. Operating unit in rear door, driver side, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side, Rear driver side window regulator motor	352
5. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear driver side door loudspeaker trim, Rear driver side entry light, Light for rear door background lighting, driver side, Rear exit warning lamp, driver side	353
6. Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear left door storage compartment illumination	354
7. Driver door control unit, Front passenger door control unit, Rear passenger side door control unit	355
049 - Rear right door , (L0L)	356-362
1. Rear right door , (L0L)	356
2. Rear passenger side door control unit, Light for rear sill panel moulding background lighting, passenger side	357
3. Rear passenger side door control unit, Rear door lock unit, passenger side, Rear door power latching motor, passenger side	358
4. Operating unit in rear door, passenger side, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear passenger side window regulator motor	359
5. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Light for rear passenger side door loudspeaker trim, Rear passenger side entry light, Light for rear door background lighting, passenger side, Rear exit warning lamp, passenger side	360
6. Light 1 for rear right door background lighting, Light for rear right door contour lighting, Light for rear right door storage compartment illumination	361
7. Driver door control unit, Front passenger door control unit, Rear driver side door control unit	362
050 - Emergency call module , (IV0),(IW1),(IW3),(IW5),(L0L)	363-367
1. Emergency call module , (IV0),(IW1),(IW3),(IW5),(L0L)	363
2. Airbag control unit, Data bus diagnostic interface	364
3. Data bus diagnostic interface, Control unit 1 for information electronics, Loudspeaker for emergency call module	365
4. Data bus diagnostic interface, Control unit 1 for information electronics, Front left microphone, Front right microphone, Microphone unit in front roof module	366
5. Data bus diagnostic interface, Control unit 1 for information electronics, Roof aerial, Emergency call module aerial, LTE aerial 2	367
051 - Adaptive cruise control , (8T3),(8T8)	368-370
1. Adaptive cruise control , (8T3),(8T8)	368
2. Adaptive cruise control unit, Data bus diagnostic interface, Control unit for laser distance control, Heater element for adaptive cruise control radar sensor	369
3. ABS control unit, Adaptive cruise control unit	370
052 - Adjustable driver and front passenger seats , (L0L),(Q2J)	371-384
1. Adjustable driver and front passenger seats , (L0L),(Q2J)	371
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	372
3. Control unit for seat and steering column adjustment with memory function, Valve block 1 in driver seat, Valve block 2 in driver seat	373
4. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	374
5. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat depth adjustment motor	375
6. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Compressor for multicontour driver seat	376
7. Coupling point for driver seat backrest	377
8. Control unit for front passenger seat adjustment with memory function, Rear right footwell light	378
9. Control unit for front passenger seat adjustment with memory function, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat	379
10. Front passenger seat adjustment operating unit. Control unit for front passenger seat adjustment	380

with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor	
11. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat rake adjustment motor, Front passenger seat depth adjustment motor	381
12. Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Compressor for multicontour front passenger seat	382
13. Onboard supply control unit	383
14. Earth point, on right A-pillar, Earth point under seat on front left	384
053 - Front seat heating , (L0L),(Q4Q)	385-387
1. Front seat heating , (L0L),(Q4Q)	385
2. Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater, Heated seat extension for driver seat	386
3. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater, Heated seat extension for front passenger seat	387
054 - Rear seat heating , (4A4),(L0L)	388-390
1. Rear seat heating , (4A4),(L0L)	388
2. Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	389
3. Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	390
055 - Electrically operated rear lid , (4E7),(4E9)	391-395
1. Electrically operated rear lid , (4E7),(4E9)	391
2. Operating unit for rear lid control, Button to close rear lid in luggage compartment, Rear lid control unit, Power latching for rear lid	392
3. Convenience system central control unit, Rear lid control unit, Rear lid drive unit, Motor 1 for rear lid	393
4. Convenience system central control unit, Rear lid lock unit	394
5. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit	395
056 - Heated windscreen, heated rear window	396-399
1. Heated windscreen, heated rear window	396
2. Heated rear window relay, Heated windscreen control unit, Heated rear window single fuse, Heated windscreen	397
3. Window aerial suppression filter, Heated rear window	398
4. Centre switch module in dash panel, Onboard supply control unit	399
057 - Assist systems , (JX1)	400-401
1. Assist systems , (JX1)	400
2. Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	401
058 - Tail light clusters with LEDs , (8SP)	402-405
1. Tail light clusters with LEDs , (8SP)	402
2. Convenience system central control unit, Left tail light cluster, Fuse holder H, Fuse holder M	403
3. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	404
4. Convenience system central control unit, Right tail light cluster	405
059 - Front camera for driver assist systems , (QK1)	406-408
1. Front camera for driver assist systems , (QK1)	406
2. Front camera for driver assist systems, Windscreen heater for front sensors	407
3. Data bus diagnostic interface, Running gear control unit, Control unit 1 for information electronics	408
060 - Adjustable driver and front passenger seats , (3L4),(4D3),(4V0),(L0L)	409-416
1. Adjustable driver and front passenger seats , (3L4),(4D3),(4V0),(L0L)	409
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	410
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	411
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	412
5. Driver seat lumbar support adjustment switch, Driver seat lumbar support height adjustment motor	413
6. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit, Rear right footwell light	414
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat rake adjustment motor	415
8. Front passenger seat lumbar support adjustment switch, Onboard supply control unit, Data bus diagnostic interface, Front passenger seat lumbar support height adjustment motor	416
061 - Adjustable driver and front passenger seats . (4V1).(L0L).(Q1A).(Q1D).(Q4Q)	417-426

1. Adjustable driver and front passenger seats , (4V1),(L0L),(Q1A),(Q1D),(Q4Q)	417
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	418
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function	419
4. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	420
5. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	421
6. Control unit for front passenger seat adjustment with memory function, Rear right footwell light	422
7. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function	423
8. Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	424
9. Front passenger seat lumbar support adjustment switch, Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	425
10. Onboard supply control unit, Data bus diagnostic interface	426
062 - Mobile telephone systems , (9ZE),(9ZV),(9ZX)	427-434
1. Mobile telephone systems , (9ZE),(9ZV),(9ZX)	427
2. Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	428
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	429
4. Control unit 1 for information electronics	430
5. Control unit 1 for information electronics, Aerial for Bluetooth	431
6. Control unit 1 for information electronics, Microphone unit in front roof module	432
7. Charging unit 1 for mobile devices, Near field communication control unit 2, Aerial amplifier for mobile telephone	433
8. Aerial amplifier for mobile telephone, Roof aerial, LTE aerial 3	434
063 - CD changer , (7D5)	435-436
1. CD changer , (7D5)	435
2. Onboard supply control unit, Control unit 1 for information electronics, DVD player	436
064 - Sound system , (8RM),(9VD)	437-441
1. Sound system , (8RM),(9VD)	437
2. Control unit 1 for information electronics, Centre loudspeaker, Subwoofer	438
3. Control unit 1 for information electronics, Rear left treble loudspeaker, Front left treble loudspeaker	439
4. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	440
5. Rear right treble loudspeaker, Rear right bass loudspeaker	441
065 - Sound system , (9VS)	442-447
1. Sound system , (9VS)	442
2. Digital sound package control unit, Control unit 1 for information electronics, Microphone unit in front roof module, Digital sound package fuse	443
3. Digital sound package control unit, Front left door loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker, Centre loudspeaker	444
4. Digital sound package control unit, Front right door loudspeaker, Rear left treble loudspeaker, Rear left bass loudspeaker	445
5. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	446
6. Digital sound package control unit, Emergency call module control unit and communication unit, Left effect loudspeaker, Right effect loudspeaker, Subwoofer	447
066 - Fuel system , (1VH)	448-449
1. Fuel system , (1VH)	448
2. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	449
067 - Multimedia system , (9WQ)	450-451
1. Multimedia system , (9WQ)	450
2. Coupling point for seat, driver side, Coupling point for seat, passenger side	451
068 - Batterv. starter and alternator . (0K4).(1VG)	452-458

1. Battery, starter and alternator , (0K4),(1VG)	452
2. Battery, Battery monitor control unit, Power steering control unit, Battery isolation igniter	453
3. Airbag control unit, Battery isolation igniter, Wiring junction, Terminal 30 wiring junction	454
4. Second battery, Starter, Data bus diagnostic interface	455
5. Engine/motor control unit, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Fuse holder C, Fuse holder E	456
6. Starter-alternator, Fuse holder A	457
7. Coupling point in engine compartment, left, Coupling point 1 for engine prewiring harness	458
069 - Sound system , (8RF)	459-465
1. Sound system , (8RF)	459
2. Digital sound package control unit, Microphone unit in front roof module, Subwoofer, Relay and fuse carrier 4, Digital sound package fuse	460
3. Digital sound package control unit, Front left treble loudspeaker, Centre loudspeaker, Centre loudspeaker 2	461
4. Digital sound package control unit, Front left door loudspeaker, Front right treble loudspeaker	462
5. Digital sound package control unit, Front right door loudspeaker, Rear left treble loudspeaker, Rear left bass loudspeaker	463
6. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	464
7. Digital sound package control unit, Left effect loudspeaker, Right effect loudspeaker, Rear right mid-range loudspeaker 2, Rear left mid-range loudspeaker 2	465
070 - Window wash/wipe system, heated washer jets, headlight washer system , (9PA)	466-469
1. Window wash/wipe system, heated washer jets, headlight washer system , (9PA)	466
2. Rain and light sensor, Onboard supply control unit, Rear window washer pump	467
3. Wiper motor control unit, Onboard supply control unit, Windscreen washer pump control unit, Headlight washer system pump	468
4. Windscreen washer pump control unit, Washer pump, Left washer jet heater element, Right washer jet heater element	469
071 - Trailer coupling , (1D4),(1D8),(1D9)	470-473
1. Trailer coupling , (1D4),(1D8),(1D9)	470
2. Trailer detector control unit, Brake servo	471
3. Towing bracket release button, Trailer detector control unit, Towing bracket warning lamp, Hinged tow attachment ball head motor	472
4. Trailer detector control unit, Trailer socket, Trailer towing coupling	473
072 - Active steering (dynamic steering) , (1N8)	474-476
1. Active steering (dynamic steering) , (1N8)	474
2. Active steering control unit	475
3. Active steering control unit, Active steering motor	476
073 - Roof modules	477-479
1. Roof modules	477
2. Onboard supply control unit, Front roof module, Front left reading light, Front right reading light	478
3. Rear interior light, Front roof module, Rear left reading light, Rear right reading light	479
074 - MMI navigation plus , (I8T)	480-499
1. MMI navigation plus , (I8T)	480
2. Control unit 1 for information electronics	481
3. Driver side volume regulator, Additional display and operating unit 1, Control unit 1 for information electronics	482
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	483
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	484
6. Control unit 1 for information electronics	485
7. Control unit 1 for information electronics	486
8. Control unit 1 for information electronics, Microphone unit in front roof module	487
9. Control unit 1 for information electronics	488
10. Control unit 1 for information electronics, USB hub, USB connection 1	489
11. Onboard supply control unit, Control unit 1 for information electronics, DVD player, USB hub, USB connection 1	490
12. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Dedicated short-range communication aerial	491
13. Reversing camera system control unit, Control unit 1 for information electronics, Aerial amplifier 2, Aerial amplifier 3	492
14. Control unit 1 for information electronics, Aerial amplifier 2	493
15. Control unit 1 for information electronics	494

16. Control unit 1 for information electronics, GPS aerial, Aerial filter for GPS	495
17. Control unit 1 for information electronics, Remote control receiver for auxiliary heater	496
18. Control unit 1 for information electronics	497
19. Control unit 1 for information electronics, LTE aerial 1	498
20. Control unit 1 for information electronics, LTE aerial 2, Internal vehicle communication aerial	499
075 - Dual tone horn	500-501
1. Dual tone horn	500
2. Treble horn, Bass horn	501
076 - MMI with radio , (I8E),(I8V)	502-521
1. MMI with radio , (I8E),(I8V)	502
2. Control unit 1 for information electronics	503
3. Driver side volume regulator, Additional display and operating unit 1, Control unit 1 for information electronics	504
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	505
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	506
6. Control unit 1 for information electronics	507
7. Control unit 1 for information electronics	508
8. Control unit 1 for information electronics, Microphone unit in front roof module	509
9. Control unit 1 for information electronics	510
10. Control unit 1 for information electronics, USB hub, USB connection 1	511
11. Onboard supply control unit, Control unit 1 for information electronics, DVD player, USB hub, Coupling point for toll collection device, USB connection 1	512
12. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Dedicated short-range communication aerial	513
13. Reversing camera system control unit, Control unit 1 for information electronics, Aerial amplifier 2, Aerial amplifier 3	514
14. Control unit 1 for information electronics, Aerial amplifier 2	515
15. Control unit 1 for information electronics	516
16. Control unit 1 for information electronics, GPS aerial, Aerial filter for GPS	517
17. Control unit 1 for information electronics, Remote control receiver for auxiliary heater	518
18. Control unit 1 for information electronics	519
19. Control unit 1 for information electronics, LTE aerial 1	520
20. Control unit 1 for information electronics, LTE aerial 2, Internal vehicle communication aerial	521
077 - Front seat heating , (L0L),(Q1D)	522-524
1. Front seat heating , (L0L),(Q1D)	522
2. Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater, Heated seat extension for driver seat	523
3. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater, Heated seat extension for front passenger seat	524
078 - Illuminated vanity mirrors	525-526
1. Illuminated vanity mirrors	525
2. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	526
079 - Air conditioning system , (KH5)	527-537
1. Air conditioning system , (KH5)	527
2. Fresh air blower control unit, Onboard supply control unit	528
3. Function unit for fragrance diffuser system, Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system	529
4. Air conditioner sensor for fine particle concentration, Onboard supply control unit, Central rear vent illumination bulb	530
5. Dash panel temperature sensor, Front right chest vent temperature sensor, Vent temperature sender for rear left footwell, Onboard supply control unit	531
6. High-pressure sender, Air quality sensor, Onboard supply control unit	532
7. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Air recirculation flap control motor, Rear air distribution flap control motor, Fresh air flap control motor	533
8. Onboard supply control unit, Defroster flap control motor, Right centre vent control motor, Right temperature flap control motor, Rear air distribution flap control motor	534
9. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Rear temperature flap control motor, Left temperature flap control motor	535
10. Operating and display unit for rear air conditioning system, Onboard supply control unit	536
11. Operating and display unit for rear air conditioning system	537
080 - Air conditioning svstem . (9AK)	538-546

1. Air conditioning system , (9AK)	538
2. Fresh air blower control unit, Onboard supply control unit	539
3. Function unit for fragrance diffuser system, Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system	540
4. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Air conditioner sensor for fine particle concentration, Onboard supply control unit	541
5. Dash panel temperature sensor, High-pressure sender, Front right chest vent temperature sensor, Onboard supply control unit	542
6. Air quality sensor, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Air recirculation flap control motor	543
7. Onboard supply control unit, Right centre vent control motor, Right temperature flap control motor, Rear air distribution flap control motor, Fresh air flap control motor	544
8. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Right centre vent control motor, Left temperature flap control motor	545
9. Onboard supply control unit, Rear temperature flap control motor	546
081 - Air conditioning system , (9AQ)	547-561
1. Air conditioning system , (9AQ)	547
2. Fresh air blower control unit, Onboard supply control unit, Fresh air blower	548
3. Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system	549
4. Front left chest vent temperature sensor, Front right chest vent temperature sensor, Onboard supply control unit	550
5. Dash panel temperature sensor, Potentiometer in left side vent, Onboard supply control unit	551
6. Potentiometer in left centre dash panel vent, Onboard supply control unit	552
7. High-pressure sender, External air quality and air humidity sensor, Onboard supply control unit, Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor	553
8. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Air recirculation flap control motor, Fresh air flap control motor	554
9. Onboard supply control unit, Right footwell flap control motor, Right temperature flap control motor, Right side vent control motor, Rear right air distribution control motor	555
10. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Right centre vent control motor, Rear right air quantity flap control motor, Right side vent control motor	556
11. Onboard supply control unit, Left centre vent control motor, Left temperature flap control motor, Rear left air quantity flap control motor, Left side vent control motor	557
12. Rear left chest vent temperature sender, Onboard supply control unit, Left footwell flap control motor, Rear left air quantity flap control motor, Rear left air distribution control motor	558
13. Potentiometer in rear left chest vent, Potentiometer in rear right chest vent, Rear right chest vent temperature sender, Vent temperature sender for rear left footwell, Vent temperature sender for rear right footwell, Onboard supply control unit	559
14. Operating and display unit for rear air conditioning system, Central rear vent illumination bulb, Rear left vent illumination bulb, Rear right vent illumination bulb	560
15. Operating and display unit for rear air conditioning system	561
082 - Auxiliary heater , (9M9)	562-565
1. Auxiliary heater , (9M9)	562
2. Auxiliary heater control unit, Heater coolant shut-off valve	563
3. Auxiliary heater control unit, Remote control receiver for auxiliary heater, Metering pump	564
4. Remote control receiver for auxiliary heater	565
083 - Panoramic sliding sunroof , (3FB),(3FU)	566-570
1. Panoramic sliding sunroof , (3FB),(3FU)	566
2. Sliding sunroof adjustment control unit, Data bus diagnostic interface	567
3. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	568
4. Sliding sunroof adjustment, Button 1 for roof roller blind, Sliding sunroof adjustment control unit, Rear sliding sunroof control unit	569
5. Rear sliding sunroof control unit, Sunroof roller blind motor 2	570
084 - LED headlights , (8G0),(8G1)	571-577
1. LED headlights , (8G0),(8G1)	571
2. Onboard supply control unit	572
3. Output module 1 for left LED headlight, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight main beam bulb, Front left side marker bulb	573
4. Output module 1 for left LED headlight, Front left headlight, Left headlight main beam bulb, Left static cornering light, Left headlight range control motor	574
5. Output module 1 for right LED headlight, Right LED module for daytime running light and side light. Front right headlight. Front right turn signal bulb. Right headlight main beam bulb. Front	575

left side marker bulb	
6. Output module 1 for right LED headlight, Front right headlight, Right headlight main beam bulb, Right static cornering light, Right headlight range control motor	576
7. Rear left vehicle level sender, Convenience system central control unit	577
085 - LED matrix beam headlights , (8G4)	578-588
1. LED matrix beam headlights , (8G4)	578
2. Onboard supply control unit	579
3. Output module 1 for left LED headlight, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Front left side marker bulb, Left static cornering light	580
4. Output module 1 for left LED headlight, Output module 2 for left LED headlight, Front left headlight, Left headlight main beam bulb	581
5. Output module 1 for left LED headlight, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb	582
6. Output module 1 for left LED headlight, Front left headlight, Left headlight range control motor	583
7. Output module 1 for right LED headlight, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Front right side marker bulb, Right static cornering light	584
8. Output module 1 for right LED headlight, Output module 2 for right LED headlight, Front right headlight, Right headlight main beam bulb	585
9. Output module 1 for right LED headlight, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	586
10. Output module 1 for right LED headlight, Front right headlight, Right headlight range control motor	587
11. Rear left vehicle level sender, Front left vehicle level sender, Convenience system central control unit	588
086 - Emergency call module , (IV1),(IV2),(IV3),(IV4),(IV5),(IV6),(IV7),(IV8)	589-594
1. Emergency call module , (IV1),(IV2),(IV3),(IV4),(IV5),(IV6),(IV7),(IV8)	589
2. Convenience system central control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	590
3. Airbag control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	591
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit	592
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Microphone unit in front roof module, Internal vehicle communication aerial	593
6. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial, LTE aerial 1, LTE aerial 2	594
087 - Front seat heating , (L0L),(Q1A),(Q2J)	595-598
1. Front seat heating , (L0L),(Q1A),(Q2J)	595
2. Heated seat cushion for driver seat, Driver seat cushion lateral support heater	596
3. Heated backrest for driver seat, Heated seat cushion for front passenger seat	597
4. Heated backrest for front passenger seat, Front passenger seat lateral support heater	598
088 - Fuel system , (1VG)	599-600
1. Fuel system , (1VG)	599
2. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	600
089 - Avant, rear	601-606
1. Avant, rear	601
2. Convenience system central control unit	602
3. Convenience system central control unit, Rear window wiper motor, Left luggage compartment light, Right luggage compartment light, Rear lid light	603
4. Suppression capacitor for high-level brake light bulb, Convenience system central control unit, High-level brake light bulb, Left number plate light, Right number plate light	604
5. Rear lid handle release button, Convenience system central control unit, Rear lid lock unit	605
6. Window aerial suppression filter, Glass breakage sensor for rear window, Heated rear window relay, Convenience system central control unit, Rear window	606
090 - 2.0l diesel engine , DESA	607-624
1. 2.0l diesel engine , DESA	607
2. Main relay, Fuse holder A	608
3. Automatic glow period control unit, Fuse holder A, Glow plug fuse, Terminal 30a wiring junction	609
4. Automatic glow period control unit	610
5. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Engine/motor control unit	611
6. Engine/motor control unit, Starter relay 2	612
7. Accelerator pedal module. Engine/motor control unit	613

8. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 4	614
9. Air mass meter, Engine/motor control unit, Heater element for crankcase breather, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	615
10. Engine/motor control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Valve for oil pressure control, Coolant valve for cylinder head	616
11. Charge pressure sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Engine/motor control unit	617
12. Throttle valve module, Exhaust gas recirculation valve 2, Pressure differential sender, Engine/motor control unit	618
13. Engine speed sender, Hall sender, Fuel temperature sender, Exhaust gas temperature sender 1, Engine/motor control unit	619
14. Coolant temperature sender, Charge air temperature sender before charge air cooler, Engine/motor control unit, Exhaust flap control unit	620
15. Lambda probe 1 before catalytic converter, Water level sender, Exhaust gas temperature sender 3, Engine/motor control unit	621
16. Engine/motor control unit, Radiator fan, Radiator fan 2, Charge air cooling pump, Auxiliary pump for heating	622
17. Brake pedal switch, ABS control unit, Data bus diagnostic interface, Engine/motor control unit	623
18. Convenience system central control unit, Onboard supply control unit, Air conditioner compressor	624
091 - 2.0l petrol engine , DKNA,DLHA,DLHB,DLHC	625-645
1. 2.0l petrol engine , DKNA,DLHA,DLHB,DLHC	625
2. Main relay, Engine component power supply relay, Fuse holder A, Fuse holder B, Fuse holder C	626
3. Fuse holder A	627
4. Engine/motor control unit, Radiator fan single fuse, Fuse holder A, Terminal 30 wiring junction	628
5. Automatic gearbox control unit, Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	629
6. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	630
7. Oil level and oil temperature sender, Engine/motor control unit	631
8. Hall sender 3, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Pressure differential sender for particulate filter, Engine/motor control unit	632
9. Intake manifold pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	633
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 4	634
11. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	635
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Engine/motor control unit, Exhaust camshaft control valve 1, Piston cooling jet control valve	636
13. Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Knock sensor 1, Coolant temperature sender, Engine/motor control unit	637
14. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	638
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Throttle valve module, Engine speed sender, Engine/motor control unit, Fuel pressure regulating valve	639
16. Charge pressure sender, Tank breather pressure sensor 1, Engine/motor control unit, Charge pressure positioner	640
17. Starter-alternator, Fuel tank leak detection module, Data bus diagnostic interface, Engine/motor control unit, Actuator for engine temperature regulation	641
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	642
19. Radiator outlet coolant temperature sender, Engine/motor control unit, Continued coolant circulation pump, Circulation pump, Radiator fan	643
20. Brake pedal switch, ABS control unit, Fuel pump control unit, Engine/motor control unit	644
21. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	645
092 - 2.0l diesel engine , DEZD,DEZF,DFBA	646-666
1. 2.0l diesel engine , DEZD,DEZF,DFBA	646
2. Main relay, Fuse holder A	647
3. Automatic glow period control unit, Fuse holder A, Glow plug fuse, Terminal 30a wiring junction	648
4. Automatic glow period control unit	649
5. Engine/motor control unit	650
6. Engine/motor control unit, Starter relay 2	651
7. Accelerator pedal module. Engine/motor control unit	652

8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	653
9. Engine/motor control unit, Heater element for crankcase breather, Left electrohydraulic engine mounting solenoid valve, Injector for reducing agent	654
10. Engine/motor control unit, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	655
11. Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	656
12. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Air mass meter, Fuel pressure sender, Engine/motor control unit	657
13. Engine temperature regulation module, Hall sender, Engine/motor control unit, Turbocharger 1 control unit	658
14. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	659
15. Throttle valve module, Oil pressure sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit	660
16. Exhaust gas temperature sender 1, Exhaust gas temperature sender 4, Temperature sender for engine temperature regulation, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	661
17. Coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Coolant temperature sender 2, Engine/motor control unit	662
18. Coolant circuit control unit, Engine/motor control unit, Exhaust flap control unit	663
19. Control unit for NOx sender, Control unit 2 for NOx sender, Data bus diagnostic interface, Engine/motor control unit	664
20. Brake pedal switch, Engine/motor control unit, Radiator fan, Radiator fan 2	665
21. Engine/motor control unit, Air conditioner compressor	666
093 - 2.9l petrol engine , DKMB	667-694
1. 2.9l petrol engine , DKMB	667
2. Main relay, Engine component power supply relay, Fuse holder B, Fuse holder C, Fuse holder E, Terminal 30a wiring junction	668
3. Fuse holder A	669
4. Fuse holder A, Starter-alternator coolant pump	670
5. Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	671
6. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	672
7. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	673
8. Charge pressure sender, Oil level and oil temperature sender, Engine/motor control unit, Coolant valve for cylinder block, Switch valve for mechanical coolant pump	674
9. Oil pressure switch, Oil temperature sender, Coolant temperature sender, Engine outlet coolant temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit	675
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1	676
11. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug 4	677
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 5, Injector, cylinder 6, Fuel metering valve	678
13. Inlet cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Engine/motor control unit	679
14. Map-controlled engine cooling system thermostat, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Engine/motor control unit, Continued coolant circulation pump	680
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 2, Exhaust camshaft control valve 2, Overrun air recirculation valve for bank 1, Overrun air recirculation valve for bank 2	681
16. Throttle valve module, Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	682
17. Hall sender, Hall sender 2, Hall sender 3, Hall sender 4, Engine/motor control unit, Coolant circulation pump	683
18. Engine speed sender, Knock sensor 1, Fuel pressure sender, Fuel pressure sender for low pressure, Tank breather pressure sensor 1, Engine/motor control unit	684
19. Knock sensor 2, Radiator outlet coolant temperature sender, Charge pressure sender 2, Temperature sender 1 for charge air cooler, Temperature sender 2 for charge air cooler, Temperature sender for engine cover panel, Engine/motor control unit	685
20. Oil pressure sender, Intake manifold pressure sender, Engine/motor control unit, Electric compressor bypass flap valve, Charge air cooling pump	686
21. Pressure differential sender for particulate filter, Pressure differential sender 2 for particulate filter, Automatic gearbox control unit, Engine/motor control unit	687
22. Lambda probe 1 before catalytic converter, Lambda probe 2 before catalytic converter, Engine/motor control unit	688

23. Lambda probe 1 after catalytic converter, Lambda probe 2 after catalytic converter, Engine/motor control unit	689
24. Fuel tank leak detection module, Engine/motor control unit, Radiator fan, Radiator fan 2	690
25. Starter-alternator, Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit	691
26. Brake pedal switch, ABS control unit, Fuel pump control unit, Engine/motor control unit, Exhaust flap control unit 2	692
27. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Control unit for electric compressor, Air conditioner compressor	693
28. Control unit for structure-borne sound, Actuator for structure-borne sound	694
094 - Battery, starter and alternator , (OK0)	695-699
1. Battery, starter and alternator , (OK0)	695
2. Battery, Battery monitor control unit, Power steering control unit, Data bus diagnostic interface, Battery isolation igniter	696
3. Airbag control unit, Battery isolation igniter, Wiring junction, Terminal 30 wiring junction	697
4. Starter, Alternator with voltage regulator	698
5. Engine/motor control unit, Starter relay 2, Fuse holder C, Fuse holder E, Relay and fuse carrier 1	699
095 - Auxiliary heater , (7E6)	700-701
1. Auxiliary heater , (7E6)	700
2. Low heat output relay, High heat output relay, Relay and fuse carrier 3, Auxiliary air heater element	701
096 - Fuse assignment , (L0R)	702-736
1. Fuse assignment , (L0R)	702
2. Power steering control unit, Battery isolation igniter	703
3. Battery isolation igniter	704
4. Automatic glow period control unit, Secondary air pump relay, Terminal 30 wiring junction, Terminal 30a wiring junction, Radiator fan, Radiator fan 2	705
5. Starter, Terminal 30 wiring junction	706
6. Heated windscreen control unit, Rear wheel steering control unit, Brake servo, Wiring junction	707
7. Starter relay 1, Starter relay 2, Relay and fuse carrier 1	708
8. Main relay, Terminal 15 voltage supply relay, Relay and fuse carrier 2	709
9. Engine component power supply relay, Relay and fuse carrier 2, Driver seat adjustment thermal fuse 1, Automatic gearbox control unit fuse	710
10. Fuse holder B, Relay and fuse carrier 2, ABS control unit fuse 1, ABS control unit fuse 2	711
11. Onboard supply control unit, Fuse holder B	712
12. Onboard supply control unit, Fuse holder B	713
13. Second battery, Onboard supply control unit, Fuse holder B	714
14. Fuse holder C	715
15. Fuse holder C	716
16. Fuse holder C, Fuse holder D	717
17. Fuse holder D	718
18. Fuse holder E	719
19. Fuse holder E	720
20. Fuse holder E	721
21. Low heat output relay, High heat output relay, Fuse holder F, Relay and fuse carrier 3	722
22. Fuse holder F	723
23. Fuse holder F, Fuse holder G	724
24. Fuse holder G	725
25. Heated rear window relay, Heated rear window fuse, Front passenger seat adjustment thermal fuse 1	726
26. Fuse holder H, Levelling system fuse	727
27. Fuse holder H	728
28. Convenience system central control unit, Fuse holder H	729
29. Fuse holder J	730
30. Fuse holder J, Fuse holder M	731
31. Fuse holder M	732
32. Fuse holder M	733
33. Fuse holder M, Fuse holder N	734
34. Fuse holder N	735
35. Fuse holder N	736
097 - Convenience system, right-hand drive , (L0R)	737-751
1. Convenience system, right-hand drive , (L0R)	737
2. Onboard supply control unit	738
3. Onboard supply control unit	739
4. Bonnet contact switch. Bonnet contact switch 2. Onboard supply control unit	740

5. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	741
6. Glove compartment light switch, Onboard supply control unit, Front left footwell illumination bulb, Glove compartment light	742
7. Onboard supply control unit, Front right footwell illumination bulb, Light 1 for dash panel contour lighting, Light 3 for dash panel background lighting	743
8. Onboard supply control unit, Light 1 for dash panel background lighting, Light 2 for dash panel background lighting	744
9. Onboard supply control unit, Light 3 for front centre console background lighting, Right centre armrest illumination bulb	745
10. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 4 for front centre console background lighting	746
11. Light 1 for centre console contour lighting, Light 2 for centre console contour lighting	747
12. Convenience system central control unit, Left luggage compartment light, Right luggage compartment light	748
13. Convenience system central control unit, High-level brake light bulb, Left number plate light, Right number plate light	749
14. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Tank filler flap locking motor	750
15. Convenience system central control unit, Central locking and anti-theft alarm system aerial, Rear roller blind motor	751
098 - Driver door , (LOR)	752-764
1. Driver door , (LOR)	752
2. Driver door control unit, Driver assist systems control unit, Light for sill panel moulding background lighting, driver side	753
3. Driver door control unit, Light for exterior door handle illumination, driver side, Driver door power latching motor	754
4. Driver door control unit, Driver door lock unit, Driver side window regulator motor	755
5. Operating unit for window regulator in driver door, Driver door control unit	756
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit	757
7. Exterior mirror adjuster, Driver operating unit for memory settings, Driver door control unit, Light for driver side interior door handle illumination, Exit warning lamp, driver side	758
8. Driver door control unit, Central locking SAFELOCK function warning lamp, Light 1 for front right door background lighting, Light for driver side door loudspeaker trim, Light for front right door contour lighting, Light for driver door background lighting	759
9. Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Light for front right door contour lighting, Light for right door storage compartment illumination	760
10. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver side exterior mirror, Driver side entry light	761
11. Driver door control unit, Driver side exterior mirror	762
12. Driver door control unit, Onboard supply control unit, Driver side exterior mirror	763
13. Front passenger door control unit, Rear driver side door control unit, Rear passenger side door control unit	764
099 - Front passenger door , (LOR)	765-774
1. Front passenger door , (LOR)	765
2. Front passenger door control unit, Driver assist systems control unit, Fuse holder D, Light for sill panel moulding background lighting, front passenger side	766
3. Front passenger door control unit, Light for exterior door handle illumination, front passenger side, Front passenger door power latching motor	767
4. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor	768
5. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Light for passenger side interior door handle illumination, Passenger side entry light	769
6. Front passenger operating unit for memory settings, Front passenger door control unit, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Exit warning lamp, front passenger side	770
7. Front passenger door control unit, Light 1 for front left door background lighting, Light for front left door contour lighting, Light for left door storage compartment illumination, Passenger side exterior mirror	771
8. Front passenger door control unit, Passenger side exterior mirror	772
9. Front passenger door control unit, Onboard supply control unit, Passenger side exterior mirror	773
10. Driver door control unit, Onboard supply control unit, Rear driver side door control unit, Rear passenger side door control unit	774

100 - Rear right door , (L0R)	775-781
1. Rear right door , (L0R)	775
2. Onboard supply control unit, Rear driver side door control unit, Light for rear sill panel moulding background lighting, driver side	776
3. Rear driver side door control unit, Rear door lock unit, driver side, Rear door power latching motor, driver side	777
4. Operating unit in rear door, driver side, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear exterior door handle illumination, driver side, Rear driver side window regulator motor	778
5. Rear driver side door control unit, Light for rear driver side door loudspeaker trim, Rear driver side entry light, Light for rear door background lighting, driver side, Rear exit warning lamp, driver side	779
6. Light 1 for rear right door background lighting, Light for rear right door contour lighting, Light for rear right door storage compartment illumination	780
7. Driver door control unit, Front passenger door control unit, Rear passenger side door control unit	781
101 - Rear left door , (L0R)	782-788
1. Rear left door , (L0R)	782
2. Rear passenger side door control unit, Light for rear sill panel moulding background lighting, passenger side	783
3. Rear passenger side door control unit, Rear door lock unit, passenger side, Rear door power latching motor, passenger side	784
4. Operating unit in rear door, passenger side, Button for longitudinal adjustment of front passenger seat, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear passenger side window regulator motor	785
5. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Light for rear passenger side door loudspeaker trim, Rear passenger side entry light, Light for rear door background lighting, passenger side, Rear exit warning lamp, passenger side	786
6. Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear left door storage compartment illumination	787
7. Driver door control unit, Front passenger door control unit, Rear driver side door control unit	788
102 - Airbag systems for RHD vehicles , (4UE),(4UF),(L0R)	789-804
1. Airbag systems for RHD vehicles , (4UE),(4UF),(L0R)	789
2. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	790
3. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	791
4. Airbag control unit, Onboard supply control unit, Warning lamp for airbag deactivated on front passenger side, Front passenger airbag unit	792
5. Driver side belt switch, Key-operated switch to deactivate airbag on front passenger side, Driver side seat position sensor, Airbag control unit	793
6. Driver side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on driver side	794
7. Front passenger side belt switch, Twin belt buckle, Airbag control unit, Side airbag igniter on front passenger side	795
8. Twin belt buckle, Passenger side belt buckle, seat row 2, Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Airbag control unit	796
9. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Rear seat occupied sensor, centre, Airbag control unit	797
10. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	798
11. Second battery, Battery, 48 V, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	799
12. Airbag control unit, Front left seat belt	800
13. Airbag control unit, Control unit for rear right belt tensioner, Front right seat belt	801
14. Front pressure hose sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Control unit for rear left belt tensioner	802
15. Hybrid battery unit, Airbag control unit, Coupling point on high-voltage battery	803
16. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Lane change assist control unit 2	804
103 - Front seat heating , (4A3),(4A4),(L0R)	805-808
1. Front seat heating , (4A3),(4A4),(L0R)	805
2. Onboard supply control unit	806

3. Onboard supply control unit	807
4. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	808
104 - Front seat heating , (L0R),(Q4Q)	809-811
1. Front seat heating , (L0R),(Q4Q)	809
2. Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat lateral support heater, Heated seat extension for driver seat	810
3. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater, Heated seat extension for front passenger seat	811
105 - Front seat heating , (L0R),(Q1D)	812-814
1. Front seat heating , (L0R),(Q1D)	812
2. Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat lateral support heater, Heated seat extension for driver seat	813
3. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater, Heated seat extension for front passenger seat	814
106 - Front seat heating , (L0R),(Q1A),(Q2J)	815-818
1. Front seat heating , (L0R),(Q1A),(Q2J)	815
2. Heated seat cushion for driver seat, Driver seat lateral support heater	816
3. Heated backrest for driver seat, Heated seat cushion for front passenger seat	817
4. Heated backrest for front passenger seat, Front passenger seat lateral support heater	818
107 - Rear seat heating , (4A4),(L0R)	819-821
1. Rear seat heating , (4A4),(L0R)	819
2. Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	820
3. Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	821
108 - Adjustable driver and front passenger seats , (3L3),(L0R),(Q1A),(Q1D)	822-825
1. Adjustable driver and front passenger seats , (3L3),(L0R),(Q1A),(Q1D)	822
2. Driver seat lumbar support adjustment switch, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Rear right footwell light	823
3. Front passenger seat lumbar support adjustment switch, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor, Rear left footwell light	824
4. Onboard supply control unit	825
109 - Adjustable driver and front passenger seats , (3L4),(4D0),(4V0),(L0R)	826-833
1. Adjustable driver and front passenger seats , (3L4),(4D0),(4V0),(L0R)	826
2. Control unit for seat and steering column adjustment with memory function, Rear right footwell light	827
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function	828
4. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	829
5. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	830
6. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit, Rear left footwell light	831
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	832
8. Front passenger seat lumbar support adjustment switch, Onboard supply control unit, Data bus diagnostic interface, Front passenger seat lumbar support height adjustment motor	833
110 - Adjustable driver and front passenger seats , (4V1),(L0R),(Q1A),(Q1D),(Q4Q)	834-843
1. Adjustable driver and front passenger seats , (4V1),(L0R),(Q1A),(Q1D),(Q4Q)	834
2. Control unit for seat and steering column adjustment with memory function, Rear right footwell light	835
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function	836
4. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	837
5. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	838
6. Control unit for front passenger seat adjustment with memory function, Rear left footwell light	839
7. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function	840

8. Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	841
9. Front passenger seat lumbar support adjustment switch, Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	842
10. Onboard supply control unit, Data bus diagnostic interface	843
111 - Adjustable driver and front passenger seats , (3L4),(4D3),(4V0),(L0R)	844-851
1. Adjustable driver and front passenger seats , (3L4),(4D3),(4V0),(L0R)	844
2. Control unit for seat and steering column adjustment with memory function, Rear right footwell light	845
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	846
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat rake adjustment motor	847
5. Driver seat lumbar support adjustment switch, Driver seat lumbar support height adjustment motor, Rear left footwell light	848
6. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	849
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	850
8. Onboard supply control unit, Data bus diagnostic interface	851
112 - Adjustable driver and front passenger seats , (L0R),(Q2J)	852-865
1. Adjustable driver and front passenger seats , (L0R),(Q2J)	852
2. Control unit for seat and steering column adjustment with memory function, Rear right footwell light	853
3. Control unit for seat and steering column adjustment with memory function, Valve block 1 in driver seat, Valve block 2 in driver seat	854
4. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	855
5. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat depth adjustment motor	856
6. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Compressor for multicontour driver seat	857
7. Coupling point for driver seat backrest	858
8. Control unit for front passenger seat adjustment with memory function, Rear left footwell light	859
9. Control unit for front passenger seat adjustment with memory function, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat	860
10. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor	861
11. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat rake adjustment motor, Front passenger seat depth adjustment motor	862
12. Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Compressor for multicontour front passenger seat	863
13. Coupling point for front passenger seat backrest	864
14. Onboard supply control unit	865
113 - Emergency call module , (IV0),(IW1),(IW3),(IW5),(L0R)	866-870
1. Emergency call module , (IV0),(IW1),(IW3),(IW5),(L0R)	866
2. Airbag control unit, Data bus diagnostic interface	867
3. Data bus diagnostic interface, Control unit 1 for information electronics, Loudspeaker for emergency call module	868
4. Data bus diagnostic interface, Control unit 1 for information electronics, Front left microphone, Front right microphone, Microphone unit in front roof module	869
5. Data bus diagnostic interface, Control unit 1 for information electronics, Roof aerial, Emergency call module aerial, LTE aerial 2	870
114 - Airbag systems (US equipment) , (4UH)	871-886
1. Airbag systems (US equipment) , (4UH)	871
2. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	872
3. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and	873

communication unit	
4. Airbag control unit, Onboard supply control unit, Warning lamp for airbag deactivated on front passenger side, Front passenger airbag unit	874
5. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	875
6. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit	876
7. Seat occupied sensor on front passenger side, Airbag control unit, Seat occupied recognition control unit, Side airbag igniter on front passenger side, Heater element with seat occupied recognition, front passenger side	877
8. Twin belt buckle, Passenger side belt buckle, seat row 2, Airbag control unit	878
9. Passenger side belt buckle, seat row 2, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	879
10. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	880
11. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Lane change assist control unit 2, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	881
12. Second battery, Battery, 48 V, Airbag control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	882
13. Airbag control unit, Control unit for rear left belt tensioner, Control unit for rear right belt tensioner	883
14. Airbag control unit, Front left seat belt	884
15. Airbag control unit, Front right seat belt	885
16. Hybrid battery unit, Fuse holder H, Fuse holder M	886
115 - Battery, starter and alternator , (0K4),(1VH),(1VJ)	887-892
1. Battery, starter and alternator , (0K4),(1VH),(1VJ)	887
2. Battery, Battery monitor control unit, Power steering control unit, Data bus diagnostic interface, Battery isolation igniter	888
3. Starter, Airbag control unit, Battery isolation igniter, Wiring junction, Terminal 30 wiring junction	889
4. Engine/motor control unit, Starter relay 2, Fuse holder C, Fuse holder E, Relay and fuse carrier 1	890
5. Starter-alternator, Fuse holder A, Terminal 40 wiring junction	891
6. Starter-alternator coolant pump	892
116 - Tail light clusters with LEDs, only models with US equipment , (8SQ)	893-895
1. Tail light clusters with LEDs, only models with US equipment , (8SQ)	893
2. Convenience system central control unit, Left tail light cluster, Fuse holder H, Fuse holder M	894
3. Convenience system central control unit, Right tail light cluster, Left tail light cluster 2, Right tail light cluster 2	895
117 - Tail light clusters with LEDs, only models with US equipment , (8SP)	896-898
1. Tail light clusters with LEDs, only models with US equipment , (8SP)	896
2. Convenience system central control unit, Left tail light cluster, Fuse holder H, Fuse holder M	897
3. Convenience system central control unit, Right tail light cluster, Left tail light cluster 2, Right tail light cluster 2	898
118 - 2.0l petrol engine , DKYA	899-919
1. 2.0l petrol engine , DKYA	899
2. Fuse holder A, Terminal 30 wiring junction	900
3. Fuse holder A, Fuse holder B	901
4. Main relay, Engine component power supply relay, Fuse holder C	902
5. Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	903
6. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	904
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plug 1, Spark plug 4	905
8. Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	906
9. Oil level and oil temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	907
10. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	908
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure. Engine/motor control unit	909

12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Engine/motor control unit, Regulating flap control unit, Piston cooling jet control valve	910
13. Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	911
14. Intake manifold pressure sender, Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	912
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine speed sender, Knock sensor 1, Hall sender 3, Engine/motor control unit	913
16. Throttle valve module, Engine temperature regulation module, Tank breather pressure sensor 1, Engine/motor control unit, Actuator for engine temperature regulation	914
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Charge pressure sender, Engine/motor control unit	915
18. Starter-alternator, Fuel tank leak detection module, Air mass meter, Engine/motor control unit, Radiator fan	916
19. Automatic gearbox control unit, Engine/motor control unit, Coolant circulation pump, Circulation pump	917
20. Brake pedal switch, ABS control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	918
21. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	919
119 - 3.0l diesel engine , DEWA	920-944
1. 3.0l diesel engine , DEWA	920
2. Main relay, Fuse holder A, Terminal 30a wiring junction	921
3. Fuse holder A	922
4. Starter, Automatic glow period control unit, Fuse holder A, Fuse holder E	923
5. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	924
6. Automatic gearbox control unit, Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	925
7. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	926
8. Engine/motor control unit, Fuel pressure regulating valve	927
9. Air mass meter, Charge air temperature sender after charge air cooler, Engine/motor control unit, Injector for reducing agent	928
10. Exhaust gas recirculation valve 1, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Fuel metering valve	929
11. Coolant temperature sender, Fuel temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Coolant valve for cylinder head, Coolant circulation pump	930
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	931
13. Engine speed sender, Hall sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit	932
14. Fuel pressure sender, Fuel pressure sender for low pressure, Pressure differential sender 2, Oil temperature sender 2, Sender 1 for turbocharger speed, Engine/motor control unit	933
15. Oil pressure sender, Charge pressure sender, Pressure differential sender, Pressure sender for exhaust gas recirculation, Temperature sender for engine temperature regulation, Engine/motor control unit	934
16. Throttle valve module, Intake manifold flap control unit, Charge air temperature sender before charge air cooler, Engine/motor control unit, Valve for oil pressure control	935
17. Exhaust gas recirculation valve 2, ABS control unit, Engine/motor control unit, Turbocharger 1 control unit	936
18. Lambda probe 1 before catalytic converter, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	937
19. Data bus diagnostic interface, Engine/motor control unit, Radiator fan, Radiator fan 2	938
20. Control unit for NOx sender, Control unit 2 for NOx sender, Particulate sensor, Data bus diagnostic interface, Engine/motor control unit	939
21. Starter-alternator, Engine/motor control unit, Control unit for electric compressor, Starter-alternator coolant pump	940
22. Brake pedal switch, Fuel pump control unit, Engine/motor control unit	941
23. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor	942
24. Control unit for structure-borne sound, Actuator for structure-borne sound	943
25. Engine sound generator control unit. Actuator 1 for engine sound generator	944

120 - 2.0l petrol engine , DKUA	945-967
1. 2.0l petrol engine , DKUA	945
2. Fuse holder A, Terminal 30 wiring junction	946
3. Fuse holder A	947
4. Main relay, Engine component power supply relay	948
5. Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	949
6. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	950
7. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit	951
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	952
9. Knock sensor 1, Automatic gearbox control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Fuel pressure regulating valve	953
10. Air mass meter, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	954
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	955
12. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	956
13. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit, Piston cooling jet control valve	957
14. Oil pressure switch, Cam adjustment actuator 3, Cam adjustment actuator 4, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Intake manifold pressure sender, Engine/motor control unit	958
15. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	959
16. Engine speed sender, Hall sender 2, Pressure differential sender for particulate filter, Engine/motor control unit, Actuator for engine temperature regulation	960
17. Throttle valve module, Engine/motor control unit, Regulating flap control unit	961
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Charge pressure sender, Engine/motor control unit	962
19. Tank breather pressure sensor 1, Engine/motor control unit, Radiator fan, Radiator fan 2	963
20. Starter-alternator, Fuel tank leak detection module, ABS control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	964
21. Engine/motor control unit, Coolant circulation pump, Circulation pump	965
22. Brake pedal switch, Fuel pressure sender for low pressure, Engine/motor control unit	966
23. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor regulating valve	967
121 - 2.0l petrol engine , DKWB,DKWC,DKWD	968-988
1. 2.0l petrol engine , DKWB,DKWC,DKWD	968
2. Fuse holder A, Fuse holder B, Terminal 30 wiring junction	969
3. Fuse holder A	970
4. Main relay, Engine component power supply relay, Fuse holder C	971
5. Engine/motor control unit, Starter relay 2, Relay and fuse carrier 1	972
6. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	973
7. Oil level and oil temperature sender, Engine/motor control unit	974
8. Automatic gearbox control unit, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	975
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector, Spark plug 1, Spark plug 4	976
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Intake manifold flap valve, Valve for oil pressure control	977
11. Cam adjustment actuator 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Piston cooling jet control valve	978
12. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	979
13. Engine speed sender, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	980
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Knock sensor 1. Coolant temperature sender. Radiator outlet coolant temperature sender. Hall sender	981

2, Engine/motor control unit, Fuel pressure regulating valve	
15. Throttle valve module, Engine/motor control unit, Regulating flap control unit	982
16. Charge pressure sender, Engine temperature regulation module, Intake manifold pressure sender, Engine/motor control unit, Actuator for engine temperature regulation	983
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Tank breather pressure sensor 1, Engine/motor control unit	984
18. Fuel tank leak detection module, ABS control unit, Fuel pump control unit, Engine/motor control unit, Radiator fan	985
19. Starter-alternator, Engine/motor control unit, Coolant circulation pump, Circulation pump	986
20. Brake pedal switch, Convenience system central control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	987
21. Coolant shortage indicator sender, Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor regulating valve	988
122 - Reducing agent metering system , (FK1),(FK2)	989-992
1. Reducing agent metering system , (FK1),(FK2)	989
2. Data bus diagnostic interface, Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	990
3. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1)	991
4. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent, Heater 2 for reducing agent tank (heater circuit 3)	992
123 - Operating unit for rear seats , (QW5)	993-995
1. Operating unit for rear seats , (QW5)	993
2. Onboard supply control unit, Seat heating control unit	994
3. Additional display and operating unit 1, Seat heating control unit	995
124 - Adjustable rear seat , (5KF),(QW5)	996-1001
1. Adjustable rear seat , (5KF),(QW5)	996
2. Data bus diagnostic interface, Fuse holder J	997
3. Rear seat backrest adjustment sender, driver side, Control unit for rear seat adjustment, driver side, Backrest adjustment motor for left seat, row 2	998
4. Control unit for rear seat adjustment, driver side, Valve block 1 in driver side rear seat, Valve block 2 in driver side rear seat, Compressor for rear driver side multicontour seat	999
5. Control unit for rear seat adjustment, passenger side	1000
6. Rear seat backrest adjustment sender, passenger side, Control unit for rear seat adjustment, passenger side, Valve block 1 in rear seat, passenger side, Valve block 2 in rear seat, passenger side, Backrest adjustment motor for right seat, row 2, Compressor for rear passenger side multicontour seat	1001
125 - Driver seat , (3L5)	1002-1006
1. Driver seat , (3L5)	1002
2. Driver seat adjustment operating unit, Rear left footwell light	1003
3. Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1004
4. Driver seat lumbar support adjustment switch, Light 1 for front left seat contour lighting, Light 2 for front left seat contour lighting, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	1005
5. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	1006
126 - Driver seat , (Q2J)	1007-1013
1. Driver seat , (Q2J)	1007
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	1008
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Valve block 1 in driver seat, Valve block 2 in driver seat	1009
4. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1010
5. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat depth adjustment motor, Compressor for multicontour driver seat	1011
6. Control unit for seat and steering column adjustment with memory function, Light 1 for front left seat contour lighting, Light 2 for front left seat contour lighting, Driver seat backrest adjustment motor	1012
7. Onboard supply control unit, Earth point under seat on front left	1013
127 - Rear left door	1014-1021
1. Rear left door	1014

2. Onboard supply control unit, Rear driver side door control unit, Light for rear sill panel moulding background lighting, driver side	1015
3. Rear driver side door control unit, Rear door lock unit, driver side, Rear door power latching motor, driver side	1016
4. Operating unit in rear door, driver side, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side, Rear driver side window regulator motor	1017
5. Operating unit in rear door, driver side, Rear driver side door control unit, Light for rear driver side interior door handle illumination	1018
6. Rear driver side door control unit, Light for rear driver side door loudspeaker trim, Rear driver side entry light, Light for rear door background lighting, driver side, Rear exit warning lamp, driver side	1019
7. Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear left door storage compartment illumination	1020
8. Driver door control unit, Front passenger door control unit, Rear passenger side door control unit	1021
128 - Rear right door	1022-1029
1. Rear right door	1022
2. Onboard supply control unit, Rear passenger side door control unit, Light for rear sill panel moulding background lighting, passenger side	1023
3. Rear passenger side door control unit, Rear door lock unit, passenger side, Rear door power latching motor, passenger side	1024
4. Operating unit in rear door, passenger side, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear passenger side window regulator motor	1025
5. Operating unit in rear door, passenger side, Button for longitudinal adjustment of front passenger seat, Rear passenger side door control unit	1026
6. Backrest adjustment button, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Light for rear passenger side door loudspeaker trim, Rear passenger side entry light, Light for rear door background lighting, passenger side	1027
7. Rear passenger side door control unit, Light 1 for rear right door background lighting, Light for rear right door contour lighting, Light for rear right door storage compartment illumination, Rear exit warning lamp, passenger side	1028
8. Driver door control unit, Front passenger door control unit, Rear driver side door control unit	1029
129 - Front passenger seat , (Q1A),(Q1D),(3L4),(3L5),(4V0)	1030-1034
1. Front passenger seat , (Q1A),(Q1D),(3L4),(3L5),(4V0)	1030
2. Front passenger seat adjustment operating unit, Rear right footwell light	1031
3. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	1032
4. Front passenger seat lumbar support adjustment switch, Light 1 for front right seat contour lighting, Light 2 for front right seat contour lighting, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	1033
5. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	1034
130 - Driver seat , (Q1A),(Q1D),(3L4)	1035-1041
1. Driver seat , (Q1A),(Q1D),(3L4)	1035
2. Control unit for seat and steering column adjustment with memory function	1036
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Rear left footwell light	1037
4. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1038
5. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	1039
6. Light 1 for front left seat contour lighting, Light 2 for front left seat contour lighting	1040
7. Onboard supply control unit, Data bus diagnostic interface	1041
131 - Front passenger seat , (Q1A),(3L4),(4V1)	1042-1048
1. Front passenger seat , (Q1A),(3L4),(4V1)	1042
2. Control unit for front passenger seat adjustment with memory function	1043
3. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Rear right footwell light	1044
4. Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	1045

5. Front passenger seat lumbar support adjustment switch, Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	1046
6. Light 1 for front right seat contour lighting, Light 2 for front right seat contour lighting	1047
7. Onboard supply control unit, Data bus diagnostic interface	1048
132 - Front passenger seat , (Q2J)	1049-1055
1. Front passenger seat , (Q2J)	1049
2. Control unit for front passenger seat adjustment with memory function, Rear right footwell light	1050
3. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat	1051
4. Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	1052
5. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat depth adjustment motor, Compressor for multicontour front passenger seat	1053
6. Control unit for front passenger seat adjustment with memory function, Light 1 for front right seat contour lighting, Light 2 for front right seat contour lighting, Front passenger seat backrest adjustment motor	1054
7. Onboard supply control unit, Earth point, on right A-pillar	1055
133 - Adjustable rear seat , (5KF),(QW6)	1056-1059
1. Adjustable rear seat , (5KF),(QW6)	1056
2. Onboard supply control unit	1057
3. Rear seat backrest adjustment sender, driver side, Rear seat backrest adjustment sender, passenger side, Backrest adjustment motor for left seat, row 2, Backrest adjustment motor for right seat, row 2	1058
4. Operating unit for rear seat adjustment	1059
134 - 2.0l petrol engine , DLGA,DPMA	1060-1085
1. 2.0l petrol engine , DLGA,DPMA	1060
2. Main relay, Engine component power supply relay, Fuse holder A, Fuse holder B, Fuse holder C	1061
3. Fuse holder A	1062
4. Fuse holder A, Terminal 30a wiring junction	1063
5. Engine/motor control unit	1064
6. Automatic gearbox control unit, Engine/motor control unit, Continued coolant circulation pump	1065
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector	1066
8. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1067
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1068
10. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	1069
11. Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	1070
12. Engine speed sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	1071
13. Charge pressure sender, Engine/motor control unit, Fuel pressure regulating valve, Actuator for engine temperature regulation	1072
14. Throttle valve module, Knock sensor 1, Engine/motor control unit, Charge pressure positioner	1073
15. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1074
16. Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	1075
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Sender 1 for secondary air pressure, Engine/motor control unit, Secondary air inlet valve, Piston cooling jet control valve	1076
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	1077
19. Engine/motor control unit, Exhaust flap control unit, Brake servo, Fuel tank shut-off valve	1078
20. ABS control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	1079
21. Fuel tank leak detection module, Engine/motor control unit	1080
22. Tank breather pressure sensor 1, Engine/motor control unit	1081
23. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Engine/motor control unit	1082
24. Secondary air pump relav. Thermal management control unit. Radiator fan. Secondary air pump	1083

motor, Radiator fan 2	
25. Power unit mounting sender 1, Power unit mounting sender 2, Power steering control unit, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	1084
26. Power unit mounting control unit	1085
135 - 3.0l diesel engine , CVMD	1086-1104
1. 3.0l diesel engine , CVMD	1086
2. Main relay, Fuse holder A, Fuse holder B, Terminal 30a wiring junction	1087
3. Fuse holder A	1088
4. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Fuel pressure regulating valve, Glow plug 1, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	1089
5. Air mass meter, Automatic glow period control unit, Engine/motor control unit	1090
6. Automatic gearbox control unit, Engine/motor control unit, Relay and fuse carrier 1	1091
7. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1092
8. Intake air temperature sender, Exhaust gas temperature sender 4, Engine/motor control unit, Air conditioner compressor	1093
9. Map-controlled engine cooling system thermostat, Exhaust gas recirculation valve 1, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Fuel metering valve	1094
10. Coolant temperature sender, Fuel temperature sender, Coolant temperature sender 2, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Coolant valve for cylinder head	1095
11. Oil level and oil temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1096
12. Engine speed sender, Hall sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Temperature sender for engine temperature regulation, Engine/motor control unit	1097
13. Oil pressure sender, Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit	1098
14. Throttle valve module, Intake manifold flap control unit, Engine/motor control unit, Valve for oil pressure control	1099
15. Lambda probe 1 before catalytic converter, ABS control unit, Engine/motor control unit, Turbocharger 1 control unit	1100
16. Water level sender, Pressure differential sender, Engine/motor control unit, Radiator fan, Radiator fan 2	1101
17. Data bus diagnostic interface, Engine/motor control unit, Air filter bypass flap valve, Coolant circulation pump	1102
18. Brake pedal switch, Charge pressure sender, Oil temperature sender 2, Fuel pump control unit, Engine/motor control unit	1103
19. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Engine/motor control unit	1104