

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when handling gas discharge bulbs	2
2 Repair notes	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attaching lines and wiring	5
3 Battery	6
3.1 Battery - general notes	6
3.2 Battery types	6
27 - Starter, current supply, CCS	7
1 Battery	7
1.1 Exploded view - battery	7
1.2 Disconnecting and connecting battery	8
1.3 Removing and installing earth cable with battery monitor control unit J367	9
1.4 Removing and installing battery	10
1.5 Checking battery	12
1.6 Charging battery	12
1.7 Removing and installing battery cut-off relay/battery isolation igniter	13
2 Jump start terminal	14
2.1 Overview - jump start terminal	14
2.2 Removing and installing jump start terminal	15
3 Alternator	18
3.1 Exploded view - alternator	18
3.2 Removing and installing alternator	22
3.3 Checking alternator	33
4 Starter	34
4.1 Exploded view - starter	34
4.2 Removing and installing starter	36
5 Start/stop system	43
5.1 Overview of fitting locations - start/stop system	43
5.2 Removing and installing voltage stabiliser	44
6 Adaptive cruise control	45
6.1 Overview of fitting locations - adaptive cruise control	45
6.2 Removing and installing adaptive cruise control unit	46
6.3 Calibrating adaptive cruise control	49
90 - Gauges, instruments	50
1 Dash panel insert	50
1.1 Exploded view - dash panel insert	50
1.2 Exploded view - head-up display	52
1.3 Removing and installing dash panel insert with control unit in dash panel insert J285	52
1.4 Pin assignment on multi-pin connectors in dash panel insert	55
1.5 Pin assignment on fuel gauge senders	56
1.6 Pin assignment on coolant temperature sender	56
1.7 Removing and installing ambient temperature sensor	57
1.8 Removing and installing control unit for head-up display	58

1.9	Calibrating control unit for head-up display	58
2	Horn	60
2.1	Exploded view - horn	60
2.2	Removing and installing treble horn H2 / bass horn H7	62
92	- Windscreen wash/wipe system	67
1	Windscreen wiper system	67
1.1	Overview of fitting locations - windscreen wiper system	67
1.2	Exploded view - windscreen wiper system	68
1.3	Moving windscreen wipers to service position	70
1.4	Removing and installing wiper blade	70
1.5	Removing and installing wiper arms	71
1.6	Adjusting wiper arms	72
1.7	Removing and installing wiper motor V	74
1.8	Removing and installing rain and light sensor	75
2	Windscreen washer system	83
2.1	Exploded view - windscreen washer system	83
2.2	Removing and installing washer fluid reservoir	84
2.3	Removing and installing windscreen washer fluid level sender	86
2.4	Removing and installing washer pump	87
2.5	Removing and installing washer jets	87
2.6	Adjusting washer jets	87
3	Headlight washer system	89
3.1	Exploded view - headlight washer system	89
3.2	Removing and installing washer fluid reservoir	90
3.3	Removing and installing headlight washer system pump V11	90
3.4	Removing and installing washer jets	91
3.5	Adjusting washer jets	93
4	Washer fluid hoses	94
4.1	Repairing washer fluid hoses	94
94	- Lights, bulbs, switches - exterior	95
1	Headlights	96
1.1	Exploded view - headlights	96
1.2	Removing and installing headlights	106
1.3	Adjusting headlights	114
1.4	Calibrating headlights	131
1.5	Installing repair kit for headlight housing	139
1.6	Adapting headlights for driving on the left side of the road	139
1.7	Adapting headlights for driving on the right side of the road	139
1.8	Removing and installing front turn signal bulb M5 / M7	140
1.9	Removing and installing gas discharge bulb L13 / L14	140
1.10	Removing and installing LED module for daytime running light and side light L176 / L177	141
1.11	Removing and installing dip beam screen motor V294 / V295	141
1.12	Removing and installing static cornering light L148 / L149	141
1.13	Removing and installing fog light bulb L22 / L23 - all-weather light	142
1.14	Removing and installing gas discharge bulb control unit J343 / J344	143
1.15	Removing and installing control unit for daytime running light and side light J860 / J861	144
1.16	Removing and installing output module for headlight J667 / J668	144
1.17	Removing and installing output module for headlight	145
1.18	Removing and installing dynamic cornering light control motor V318 / V319	150
1.19	Removing and installing headlight range control motor V48 / V49	151
1.20	Removing and installing headlight fan	154

2	Side marker lights	159
2.1	Overview - side marker lights	159
2.2	Removing and installing front side marker light	160
2.3	Removing and installing rear side marker light	160
2.4	Removing and installing front side marker bulb	160
3	Lights in exterior mirror	161
3.1	Exploded view - lights in exterior mirror	161
3.2	Removing and installing exterior mirror turn signal bulb L131 / L132	162
4	Lights in exterior door handle	163
4.1	Exploded view - lights in exterior door handle	163
4.2	Removing and installing exterior door handle illumination bulb	163
5	Lights in sill panel trim	166
5.1	Overview - entry lights	166
5.2	Removing and installing entry light	166
6	Tail light cluster	168
6.1	Exploded view - tail light cluster on body	168
6.2	Exploded view - tail light cluster on rear lid	170
6.3	Removing and installing tail light cluster	171
6.4	Correcting installation position of tail light cluster	172
6.5	Removing and installing bulb carrier	172
6.6	Removing and installing tail light cluster on rear lid	173
7	High-level brake light	176
7.1	Exploded view - high-level brake light	176
7.2	Removing and installing high-level brake light bulb	177
8	Number plate light	179
8.1	Overview of fitting locations - number plate light	179
8.2	Removing and installing number plate light X4 / X5	180
9	Entry and start authorisation	181
9.1	Overview of fitting locations - entry and start authorisation system	181
9.2	Overview of fitting locations - keyless entry system	183
9.3	Exploded view - exterior door handle for keyless entry system	185
9.4	Exploded view - rear lid power opening senders	186
9.5	Removing and installing front exterior door handle switches	186
9.6	Removing and installing rear exterior door handle switches	187
9.7	Removing and installing microswitch for lowering window E621 / E622	189
9.8	Removing and installing interior aerial 1 for entry and start authorisation R138	189
9.9	Removing and installing aerial for entry and start authorisation R200 / R201	190
9.10	Removing and installing luggage compartment aerial for entry and start system R137 ..	190
9.11	Removing and installing rear lid power opening control unit J938	190
9.12	Removing and installing rear lid power opening senders G750 / G760	191
10	Steering column switch module	193
10.1	Exploded view - steering column switch module	193
10.2	Removing and installing steering column switch module	194
10.3	Removing and installing steering column electronics control unit J527	195
10.4	Removing and installing steering column combination switch	196
10.5	Pin assignment on steering column electronics control unit	196
11	Parking aid	198
11.1	Overview - parking aid	198
11.2	Removing and installing parking aid control unit J446	200
11.3	Removing and installing front parking aid warning buzzer H22	200
11.4	Removing and installing rear parking aid warning buzzer H15	201
11.5	Removing and installing front parking aid senders	201
11.6	Removing and installing rear parking aid senders	202
12	Park assist steering	203



12.1	Overview - park assist steering	203
12.2	Removing and installing front sender	204
12.3	Removing and installing rear sender	205
13	Automatic headlight range control	206
13.1	Overview - automatic headlight range control	206
13.2	Removing and installing headlight range control unit	207
96	Lights, bulbs, switches - interior	208
1	Lights	209
1.1	Overview of fitting locations - lights in dash panel	210
1.2	Overview of fitting locations - lights in front doors	211
1.3	Overview of fitting locations - lights in rear doors	212
1.4	Overview of fitting locations - background lighting in doors	213
1.5	Overview of fitting locations - lights in centre console	214
1.6	Overview of fitting locations - lights in luggage compartment	215
1.7	Overview of fitting locations - lights in roof trim	216
1.8	Removing and installing glove compartment light W6	217
1.9	Renewing bulb for glove compartment light W6	217
1.10	Removing and installing footwell illumination bulb (front) L151 / L152	218
1.11	Removing and installing central locking SAFELock function warning lamp K133	218
1.12	Removing and installing door opener illumination bulb L108 / L109	219
1.13	Removing and installing front entry light W31 / W32	219
1.14	Removing and installing door warning lamp W30 / W36	219
1.15	Removing and installing door opener illumination bulb L110 / L111	220
1.16	Removing and installing rear entry light W33 / W34	220
1.17	Removing and installing rear door warning lamp W37 / W38	221
1.18	Removing and installing front door ambient lighting bulb L164 / L165	222
1.19	Removing and installing door storage compartment illumination bulb L160 / L161	222
1.20	Removing and installing rear door ambient lighting bulb L166 / L167	223
1.21	Removing and installing rear ashtray illumination bulb L48 / L49	223
1.22	Removing and installing rear door storage compartment illumination bulb L170 / L171	224
1.23	Removing and installing selector lever position display Y26	224
1.24	Removing and installing bulb for illuminated centre armrest L157	225
1.25	Removing and installing rear footwell light W45 / W46	225
1.26	Removing and installing luggage compartment light W3	225
1.27	Removing and installing illuminated vanity mirror W20 / W14	226
1.28	Renewing bulb for front interior light W1 / W13 / W19	227
1.29	Renewing bulb for rear interior light W47 / W48	228
1.30	Removing and installing LED for background lighting	228
2	Controls	230
2.1	Overview of fitting locations - controls in dash panel	231
2.2	Overview of fitting locations - controls in front doors	233
2.3	Overview of fitting locations - controls in rear doors	234
2.4	Overview of fitting locations - controls in centre console	235
2.5	Overview of fitting locations - controls in luggage compartment	236
2.6	Overview of fitting locations - controls in roof trim	237
2.7	Removing and installing light switch E1	238
2.8	Removing and installing steering column adjustment switch E167 / steering wheel heater button E522	239
2.9	Removing and installing display unit button E462 / E506	239
2.10	Removing and installing switches in dash panel	239
2.11	Removing and installing hazard warning lights button E229	241
2.12	Removing and installing valet parking button E536	241
2.13	Removing and installing glove compartment light switch E26	241
2.14	Removing and installing mirror adjustment switch E43 / E168	242
2.15	Removing and installing operating unit for window regulator in driver door E512	242

2.16	Removing and installing window regulator switch in front passenger door E107	243
2.17	Removing and installing interior locking switch E150 / E198	243
2.18	Removing and installing driver seat/front passenger seat memory operating unit E97 / E277	243
2.19	Removing and installing rear lid remote release button E233	244
2.20	Removing and installing alarm system off switch E217	245
2.21	Removing and installing rear window regulator button in rear door E700 / E705	245
2.22	Removing and installing rear interior locking switch E273 / E274	245
2.23	Removing and installing electromechanical parking brake button E538 / auto-hold button E540	246
2.24	Removing and installing entry and start authorisation button E408	246
2.25	Removing and installing heated rear seat switch with regulator E128 / E129	247
2.26	Removing and installing release button for rear lid lock cylinder F248	248
2.27	Removing and installing button to close rear lid in luggage compartment E406	248
2.28	Removing and installing rear lid contact switch	249
2.29	Removing and installing contact switch for vanity mirror F147 / F148	249
2.30	Removing and installing sunroof button E325	250
2.31	Removing and installing interior light/reading light (front)	250
2.32	Removing and installing interior light/reading light (rear)	251
2.33	Removing and installing front reading light button E633 / E634	252
2.34	Removing and installing garage door operating unit E284	253
3	Further lights and controls in vehicle interior	254
3.1	Overview of fitting locations - further lights and controls in vehicle interior	254
3.2	Removing and installing humidity sender G355	255
4	Anti-theft alarm system	258
4.1	Overview - interior monitoring	258
4.2	Removing and installing alarm horn H12	259
4.3	Removing and installing anti-theft alarm sensor G578	260
5	Immobiliser	261
5.1	Removing and installing immobiliser reader coil	261
6	Lane change assist	262
6.1	Overview - lane change assist	262
6.2	Removing and installing button for lane change assist E530	263
6.3	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	263
6.4	Removing and installing lane change assist control unit J769 / J770	264
6.5	Calibrating lane change assist	264
7	Front camera for driver assist systems	272
7.1	Overview of fitting locations - front camera for driver assist systems	272
7.2	Removing and installing front camera for driver assist systems	273
7.3	Removing and installing image processing control unit J851	275
8	Towing bracket	277
8.1	Overview - trailer socket, trailer detector control unit	277
8.2	Removing and installing LED warning lamp	278
8.3	Trailer socket	278
8.4	Removing and installing trailer detector control unit J345	278
9	Cigarette lighter, socket	279
9.1	Exploded view - cigarette lighter, 12 V socket	279
9.2	Removing and installing cigarette lighter U1	280
9.3	Removing and installing socket illumination bulb L42	282
9.4	Removing and installing rear cigarette lighter illumination bulb L32	287
9.5	Removing and installing 12 V socket 3 U19	289
9.6	Renewing 12 V socket 3 U19	289
97 - Wiring		291



1	Relay carriers, fuse carriers, electronics boxes	291
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	291
1.2	Removing and installing electronics box	298
1.3	Removing and installing relay and fuse holder in electronics box	300
1.4	Removing and installing suppression filter C24	304
1.5	Removing and installing wiring junction	304
1.6	Removing and installing fuse holders in dash panel	305
1.7	Removing and installing relay and fuse carrier behind dash panel (driver's side)	308
1.8	Removing and installing relay and fuse holder in luggage compartment (right-side)	312
1.9	Removing and installing retaining frame for control units	315
2	Control units	317
2.1	Overview of fitting locations - control units	317
2.2	Exploded view - data bus diagnostic interface	318
2.3	Removing and installing onboard supply control unit J519	318
2.4	Removing and installing garage door operation control unit	320
2.5	Removing and installing data bus diagnostic interface J533	320
2.6	Pin assignment of multi-pin connector on data bus diagnostic interface J533	322
3	Connectors	324
3.1	Overview of fitting locations - connectors	324
3.2	Removing and installing CAN separating connector	325
3.3	Unplugging door disconnecter	326
3.4	Removing and installing connector point at A-pillar (left-side)	327
3.5	Removing and installing connector point at A-pillar (right-side)	328
3.6	Repairing electrical wiring harnesses and electrical connectors	328
4	Releasing and dismantling connector housings	329
5	Cleaning contact surfaces	330
6	Repairing aerial wires	331
7	Fibre optic cables	332
8	Vehicle diagnostic, testing and information systems	333