

## Contents

<b>91 - Communication</b>	<b>1</b>
<b>1 Infotainment system</b>	<b>1</b>
1.1 Layout - infotainment system	1
1.2 Overview of fitting locations - infotainment system	7
1.3 Removing and installing infotainment system display	10
1.4 Removing and installing control unit 1 for information electronics J794	16
1.5 Removing and installing multimedia system operating unit E380	18
1.6 Pin assignment	19
<b>2 Sound system</b>	<b>26</b>
2.1 Layout - sound system	26
2.2 Overview of fitting locations - sound system	34
2.3 Overview of fitting locations - ANC microphones	42
2.4 Removing and installing digital sound package control unit/amplifier	43
2.5 Removing and installing rear treble loudspeakers R14 / R16	54
2.6 Removing and installing front treble loudspeakers R20 / R22	55
2.7 Removing and installing front mid-range loudspeakers	56
2.8 Removing and installing rear mid-range and bass loudspeakers	58
2.9 Removing and installing rear bass loudspeakers R15 / R17	60
2.10 Removing and installing front bass loudspeakers R21 / R23	62
2.11 Removing and installing subwoofer R211	63
2.12 Removing and installing effect loudspeakers	64
2.13 Removing and installing centre loudspeaker	65
2.14 Removing and installing ANC microphones	66
2.15 Pin assignment	67
<b>3 Aerial systems</b>	<b>74</b>
3.1 Layout - aerial systems	74
3.2 Overview of fitting locations - aerial systems	76
3.3 Removing and installing aerial amplifiers	81
3.4 Removing and installing window aerial suppression filter C18	83
3.5 Removing and installing traffic data aerial	84
3.6 Removing and installing dedicated short-range communication aerial	85
3.7 Removing and installing emergency call module aerial	86
3.8 Removing and installing roof aerial	86
3.9 Removing and installing bumper aerials	87
3.10 Pin assignment	88
<b>4 Radio</b>	<b>91</b>
4.1 Layout - radio	91
4.2 Overview of fitting locations - radio	99
4.3 Removing and installing radio	101
4.4 Pin assignment	103
<b>5 DVD/CD changer</b>	<b>113</b>
5.1 Pin assignment	113
5.2 Removing and installing CD changer	115
5.3 Removing and installing DVD changer	116
<b>6 Telephone system</b>	<b>118</b>
6.1 Layout - telephone	118
6.2 Overview of fitting locations - telephone system	132
6.3 Exploded view - microphone unit	134
6.4 Removing and installing microphone unit in front roof module R164	134
6.5 Removing and installing aerial amplifier for mobile telephone R86	135
6.6 Removing and installing telephone bracket R126	137
6.7 Pin assignment	140

<b>7</b>	<b>Navigation system</b>	<b>159</b>
7.1	Layout - navigation system	159
7.2	Overview of fitting locations - navigation system	168
7.3	Pin assignment	171
7.4	Removing and installing chip card reader control unit	176
<b>8</b>	<b>TV system</b>	<b>177</b>
8.1	Layout - TV system	177
8.2	Overview of fitting locations - TV system	182
8.3	Pin assignment	186
8.4	Removing and installing TV tuner	192
8.5	Removing and installing TV card reader	197
<b>9</b>	<b>Reversing camera system</b>	<b>199</b>
9.1	Layout - reversing camera system	199
9.2	Overview of fitting locations - reversing camera system	201
9.3	Removing and installing reversing camera R189	201
9.4	Calibrating reversing camera system	202
9.5	Removing and installing reversing camera system control unit J772	208
<b>10</b>	<b>Multi-function steering wheel</b>	<b>211</b>
10.1	Layout - multi-function steering wheel	211
10.2	Exploded view - multi-function steering wheel	211
10.3	Removing and installing multifunction buttons in steering wheel E441 / E440	213
10.4	Removing and installing tiptronic switches in steering wheel E439 / E438	219
<b>11</b>	<b>Speech dialogue system</b>	<b>221</b>
11.1	Layout - speech dialogue system	221
11.2	Removing and installing speech dialogue system	222
<b>12</b>	<b>Connection for external multimedia devices</b>	<b>223</b>
12.1	Layout - external multimedia devices	223
12.2	Connectors on connection for external multimedia devices	225
12.3	Removing and installing connection for external audio sources R199	228
<b>13</b>	<b>Night vision system</b>	<b>230</b>
13.1	Overview of fitting locations - night vision system	230
13.2	Removing and installing camera for night vision system	233
13.3	Removing and installing control unit for night vision system	235
<b>14</b>	<b>Overhead view camera</b>	<b>237</b>
14.1	Layout - overhead view camera system	237
14.2	Overview of fitting locations - overhead view camera	239
14.3	Removing and installing control unit for overhead view camera J928	239
14.4	Removing and installing rear overhead view camera R246	240
14.5	Removing and installing front overhead view camera R243	241
14.6	Calibrating overhead view camera system	242
<b>15</b>	<b>Mobile online services</b>	<b>259</b>
15.1	Layout - mobile online services	259
15.2	Overview of fitting locations - mobile online services	262
15.3	Removing and installing emergency call module control unit and communication unit J949	262
15.4	Removing and installing emergency assistance call button E276	263
15.5	Removing and installing loudspeaker for emergency call module R335	263