

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair notes	2
2.1 Routing and attaching lines and wiring	2
2.2 Contact corrosion	2
2.3 Bonding surfaces for adhesive strips	2
50 - Body - front	3
1 Lock carrier	3
1.1 Exploded view - lock carrier	3
1.2 Removing and installing lock carrier	5
2 Wing	11
2.1 Exploded view - wing	11
2.2 Removing and installing wing	12
3 Bulkhead	15
3.1 Exploded view - plenum chamber partition panel	15
3.2 Exploded view - plenum chamber cover	16
3.3 Removing and installing plenum chamber partition panel	16
3.4 Removing and installing plenum chamber cover	19
55 - Bonnet, rear lid	21
1 Bonnet	21
1.1 Exploded view - bonnet	21
1.2 Exploded view - Bowden cable	25
1.3 Removing and installing bonnet	26
1.4 Adjusting bonnet	27
1.5 Removing and installing bonnet lock	29
1.6 Removing and installing operating lever for bonnet lock	30
1.7 Removing and installing striker	32
1.8 Removing and installing hinges	34
1.9 Removing and installing insulation	35
1.10 Removing and installing gas strut	35
1.11 Releasing gas from gas strut	36
1.12 Removing and installing Bowden cable	36
2 Rear lid	39
2.1 Exploded view - rear lid	39
2.2 Adjusting rear lid	41
2.3 Removing and installing rear lid lock	45
2.4 Removing and installing actuating mechanism	47
2.5 Removing and installing hinges	56
2.6 Removing and installing rear lid seal	58
2.7 Removing and installing gas strut	58
2.8 Releasing gas from gas strut	60
3 Tank flap unit	63
3.1 Exploded view - tank flap unit	63
3.2 Removing and installing tank flap unit	64
57 - Front doors, door components, central locking	69
1 Door	69
1.1 Exploded view - door	69
1.2 Exploded view - door seals	70



1.3	Removing and installing door	72
1.4	Removing and installing door arrester	72
1.5	Adjusting door	73
1.6	Removing and installing inner door seal	76
1.7	Removing and installing outer door seal	78
2	Door components	83
2.1	Exploded view - window regulator	83
2.2	Exploded view - door handle and door lock	86
2.3	Exploded view - window guides and window slot trim strips	90
2.4	Removing and installing window regulator motor	90
2.5	Removing and installing window regulator	91
2.6	Removing and installing power latching motor	94
2.7	Removing and installing inner door cover	95
2.8	Removing and installing striker	96
2.9	Removing and installing door handle	96
2.10	Removing and installing mounting bracket	99
2.11	Removing and installing door lock	101
2.12	Removing and installing outer window slot trim strip	104
3	Central locking system	107
3.1	Overview of fitting locations - central locking system	107
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	108
3.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	108
3.4	Removing and installing convenience system central control unit J393	108
3.5	Removing and installing interface control unit for vehicle location system J843	109
3.6	Removing and installing tank filler flap locking motor V155	109
58	Rear doors, door components	112
1	Door	112
1.1	Exploded view - door	112
1.2	Exploded view - door seals	113
1.3	Removing and installing door	115
1.4	Adjusting door	115
1.5	Removing and installing door arrester	117
1.6	Removing and installing inner door seal	118
1.7	Removing and installing outer door seal	120
1.8	Removing and installing striker	124
2	Door components	125
2.1	Exploded view - window regulator	125
2.2	Exploded view - door handle and door lock	129
2.3	Exploded view - window guides and window slot trim strips	131
2.4	Removing and installing window regulator motor	132
2.5	Removing and installing window regulator	133
2.6	Removing and installing power latching motor	135
2.7	Removing and installing inner door cover	136
2.8	Removing and installing door handle	138
2.9	Removing and installing mounting bracket	140
2.10	Removing and installing door lock	142
2.11	Removing and installing window slot trim strip	145
60	Sunroof	147
1	Sliding sunroof	147
1.1	Exploded view - sliding sunroof	147
1.2	Removing and installing sunroof panel	149
1.3	Removing and installing wind deflector	152

1.4	Adjusting sunroof panel	153
1.5	Removing and installing sunroof seals	153
2	Water drain hoses	154
2.1	Overview - water drain hoses	154
2.2	Cleaning water drain hoses	154
2.3	Removing and installing water drain hoses	156
63	- Bumpers	158
1	Bumper (front)	158
1.1	Exploded view - bumper cover	158
1.2	Exploded view - impact bar	164
1.3	Removing and installing bumper cover	165
1.4	Removing and installing impact bar	172
1.5	Removing and installing attachments	178
2	Bumper (rear)	191
2.1	Exploded view - bumper cover	191
2.2	Exploded view - impact bar	197
2.3	Removing and installing bumper cover	200
2.4	Removing and installing cable mounting bracket	205
2.5	Removing and installing impact bar	206
2.6	Removing and installing attachments	209
64	- Glazing	215
1	Repair notes	215
1.1	Minimum drying times for bonded windows	215
1.2	Repairing windows	215
1.3	Notes on installing flush-bonded windows	216
1.4	Preparing undamaged windows for installation	219
1.5	Preparing new windows for installation	219
1.6	Preparing body flange for installation	221
1.7	Cleaning off adhesive sealant	221
1.8	Re-sealing windows	222
2	Windscreen	223
2.1	Exploded view - windscreen	223
2.2	Removing and installing windscreen	224
3	Rear window	229
3.1	Exploded view - rear window	229
3.2	Removing and installing rear window	230
4	Side windows	237
4.1	Exploded view - rear side window	237
4.2	Removing and installing rear side window	238
5	Door windows	240
5.1	Exploded view - front door window	240
5.2	Exploded view - rear door window	241
5.3	Removing and installing front door window	242
5.4	Adjusting front door window	243
5.5	Removing and installing rear door window	247
5.6	Adjusting rear door window	248
66	- Exterior equipment	253
1	Radiator grille/front trim panel	253
1.1	Exploded view - radiator grille	253
1.2	Removing and installing radiator grille	257
2	Spoiler	264
2.1	Exploded view - spoiler	264



2.2	Removing and installing spoiler	267
2.3	Removing and installing adjustable rear spoiler control unit J223	273
3	Strips / trim panels / extensions	274
3.1	Exploded view - trim strip and covers	274
3.2	Exploded view - sill panel trim	275
3.3	Exploded view - heat shield	276
3.4	Removing and installing trim strip	278
3.5	Removing and installing sill panel trim	280
3.6	Removing and installing side member trim	282
3.7	Removing and installing water deflector strip	285
3.8	Removing and installing trim panel for A-pillar	286
3.9	Removing and installing trim panel for B-pillar	287
3.10	Removing and installing heat shield for floor	289
3.11	Removing and installing heat shield for plenum chamber partition panel	299
4	Noise insulation	301
4.1	Exploded view - noise insulation	301
4.2	Removing and installing noise insulation	302
5	Underbody trim	303
5.1	Exploded view - underbody trim	303
5.2	Exploded view - underbody struts	304
5.3	Removing and installing underbody trim	305
5.4	Removing and installing diagonal struts	307
5.5	Removing and installing tunnel cross-piece	308
6	Decorative film / protective film	309
6.1	Exploded view - protective film	309
6.2	Renewing protective film	310
7	Exterior mirrors	311
7.1	Exploded view - exterior mirror	311
7.2	Removing and installing exterior mirror	312
7.3	Removing and installing mirror glass	314
7.4	Removing and installing mirror adjustment unit	315
7.5	Removing and installing cover for mirror	315
8	Wheel housing liners	317
8.1	Exploded view - wheel housing liner (front)	317
8.2	Exploded view - wheel housing liner (rear)	320
8.3	Removing and installing wheel housing liner (front)	321
8.4	Removing and installing wheel housing liner (rear)	325
9	Model badges and brand emblems	327
9.1	General notes	327
9.2	Dimensions - model badges and brand emblems on rear lid	327
9.3	Dimensions - model badges and brand emblems on wings	330
9.4	Removing and installing front emblem	332
9.5	Removing and installing emblems	333