

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety briefing/employee qualification</b>	<b>1</b>
1.1 Qualification	1
<b>2 Safety precautions</b>	<b>2</b>
2.1 Safety precautions	2
2.2 Work that requires high-voltage system to be de-energised	4
2.3 Safety precautions when working on the high-voltage system	4
2.4 Safety precautions when working in the vicinity of high-voltage components	5
2.5 Safety precautions when working on the cooling system	6
2.6 Safety precautions when using testers and measuring instruments during a road test	6
<b>3 Repair instructions</b>	<b>7</b>
3.1 Important notes	7
3.2 Information on handling fine dust, aluminium dust and steel dust	8
3.3 Routing and attachment of pipes, hoses and wiring	9
3.4 Contact corrosion	9
3.5 Bonding surfaces for adhesive strips	9
3.6 Self-locking bolts	9
3.7 Identification plates	9
3.8 Impact wrenches	9
3.9 Moulded foam inserts	10
3.10 Bonded joints	12
3.11 Galvanised body panels, high-strength and extra-high-strength steel	13
3.12 Matching the surface contour	20
3.13 Dent removal	21
3.14 Straightening and re-alignment of body parts	22
<b>4 Vehicle identification data</b>	<b>23</b>
4.1 Vehicle identification number	23
4.2 Type plate	23
4.3 Vehicle data sticker	24
<b>5 Body panel gaps/shut lines</b>	<b>25</b>
<b>6 Body dimensions</b>	<b>28</b>
6.1 Body - front	28
6.2 Body - centre	30
6.3 Floor group	36
6.4 Body - rear	38
<b>7 Processing body structure adhesive D 180 004 M2</b>	<b>41</b>
7.1 Preparing bonding surfaces	42
<b>8 Using edge milling unit -VAS 882 005-</b>	<b>56</b>
8.1 General information	56
8.2 Assembling unit/changing milling tool	59
8.3 Separating flanged edges	69
8.4 Separating panels at corners and along surfaces	75
8.5 Separating outer edges	78
8.6 Roof - Renewal	81
8.7 Separating laser weld seams using round head milling unit	83
8.8 Aluminium panels	85
<b>9 Overview of riveting attachments (pairs of tools)</b>	<b>88</b>
<b>10 Overview of rivets and tools</b>	<b>89</b>
10.1 Overview of rivets used for repair measures	94
10.2 Rivets accessible from one side only	94
<b>11 Tools</b>	<b>96</b>



12	<b>Straightening jig</b> .....	101
12.1	Procedure for repairing structural body damage on Audi vehicles .....	101
<b>50</b>	<b>- Body - front</b> .....	<b>103</b>
1	<b>Safety precautions</b> .....	<b>103</b>
2	<b>Intermediate piece - Renewal</b> .....	<b>104</b>
2.1	Tools .....	104
2.2	Procedure .....	105
3	<b>Front bumper bracket - Renewal</b> .....	<b>110</b>
3.1	Tools .....	110
3.2	Procedure .....	111
4	<b>Wing mounting flange - Renewal</b> .....	<b>113</b>
4.1	Tools .....	114
4.2	Procedure .....	114
5	<b>Suspension turret - Renewal</b> .....	<b>123</b>
5.1	Tools .....	123
5.2	Procedure .....	124
6	<b>Front longitudinal member - Renewal</b> .....	<b>134</b>
6.1	Tools .....	135
6.2	Procedure .....	136
7	<b>Front longitudinal member - Partial renewal (part sections 1 + 2)</b> .....	<b>150</b>
7.1	Tools .....	150
7.2	Procedure .....	151
8	<b>Repairing threads for attachment of subframe</b> .....	<b>162</b>
8.1	Tools .....	162
<b>51</b>	<b>- Body - centre</b> .....	<b>170</b>
1	<b>Safety precautions</b> .....	<b>170</b>
2	<b>Permitted separating cuts on side panel</b> .....	<b>171</b>
3	<b>Roof - Renewal</b> .....	<b>172</b>
3.1	Tools .....	172
3.2	Procedure .....	178
4	<b>Roof - Renewal (version with tilting sunroof)</b> .....	<b>196</b>
4.1	Tools .....	196
4.2	Procedure .....	202
5	<b>Roof cross member (front) - Renewal</b> .....	<b>217</b>
5.1	Tools .....	217
5.2	Procedure .....	218
6	<b>Roof cross member (rear) - Renewal</b> .....	<b>221</b>
6.1	Tools .....	221
6.2	Procedure .....	222
7	<b>Outer A-pillar - Renewal</b> .....	<b>228</b>
7.1	Tools .....	228
7.2	Procedure .....	229
8	<b>Upper inner A-pillar - Partial renewal</b> .....	<b>235</b>
8.1	Tools .....	235
8.2	Procedure .....	236
9	<b>Lower inner A-pillar - Partial renewal</b> .....	<b>247</b>
9.1	Tools .....	247
9.2	Procedure .....	248
10	<b>Outer B-pillar - Renewal</b> .....	<b>253</b>
10.1	Tools .....	253
10.2	Procedure .....	254

<b>11</b>	<b>Inner B-pillar - Renewal</b> .....	<b>259</b>
11.1	Tools .....	260
11.2	Procedure .....	261
<b>12</b>	<b>Outer side member - Renewal</b> .....	<b>269</b>
12.1	Tools .....	269
12.2	Procedure .....	270
<b>13</b>	<b>Inner side member - Renewal</b> .....	<b>275</b>
13.1	Tools .....	275
13.2	Procedure .....	276
<b>14</b>	<b>Inner side member reinforcement - Renewal</b> .....	<b>281</b>
14.1	Tools .....	281
14.2	Procedure .....	282
<b>53 - Body - rear</b> .....		<b>287</b>
<b>1</b>	<b>Safety precautions</b> .....	<b>287</b>
<b>2</b>	<b>Permitted separating cuts on side panel</b> .....	<b>288</b>
<b>3</b>	<b>Rear upper cross panel - Renewal</b> .....	<b>289</b>
3.1	Tools .....	289
3.2	Procedure .....	290
<b>4</b>	<b>Rear cross panel - Renewal</b> .....	<b>293</b>
4.1	Tools .....	293
4.2	Procedure .....	294
<b>5</b>	<b>Rear longitudinal member - Partial renewal</b> .....	<b>297</b>
5.1	Tools .....	297
5.2	Procedure .....	298
<b>6</b>	<b>Side panel - Renewal</b> .....	<b>304</b>
6.1	Tools .....	304
6.2	Procedure .....	305
<b>7</b>	<b>C-pillar reinforcement - Renewal</b> .....	<b>312</b>
7.1	Tools .....	313
7.2	Procedure .....	313
<b>8</b>	<b>Rear wheel housing - Partial renewal</b> .....	<b>319</b>
8.1	Tools .....	319
8.2	Procedure .....	320
<b>9</b>	<b>Spare wheel well - Renewal</b> .....	<b>324</b>
9.1	Tools .....	324
9.2	Procedure .....	325