

Contents

00 - Technical data	1
1 General notes	1
1.1 Type plates	1
1.2 Notes on operation of auxiliary/supplementary heater on vehicles with diesel engine	2
1.3 Starting conditions for auxiliary/supplementary heater	2
1.4 Notes on auxiliary/supplementary heater	2
1.5 Operating sequence for auxiliary heater	4
1.6 Checking operation of coolant shut-off valve	16
1.7 Rules for cleanliness when working on the auxiliary/supplementary heater and fuel system	19
1.8 Overview of components for auxiliary heater in vehicle	20
2 Safety precautions	21
2.1 Safety precautions when working on the fuel system	21
2.2 Safety precautions when working on vehicles with start/stop system	21
2.3 Safety precautions when using testers and measuring instruments during a road test	22
2.4 Safety precautions when working on the cooling system	22
2.5 Safety precautions when working on vehicles with auxiliary/supplementary heater	22
3 Repair instructions	24
3.1 Rules for cleanliness	24
3.2 General notes	24
3.3 General repair instructions	25
3.4 Contact corrosion	25
3.5 Checking heating output	26
3.6 Routing and attaching pipes, hoses and wiring	26
3.7 Notes on general repairs	26
82 - Auxiliary heating	27
1 Overview of fitting locations - auxiliary/supplementary heater	27
1.1 Overview of fitting locations - components not located in passenger compartment	27
1.2 Overview of fitting locations - components in passenger compartment (front)	31
2 Auxiliary/supplementary heater	37
2.1 Overview of fitting locations - auxiliary/supplementary heater	37
2.2 Exploded view - components inside auxiliary/supplementary heater	41
2.3 Removing and installing auxiliary/supplementary heater	45
2.4 Dismantling and assembling auxiliary/supplementary heater	50
2.5 Removing and installing air intake silencer	59
2.6 Removing and installing circulation pump V55	60
2.7 Removing and installing exhaust system	63
2.8 Removing and installing bracket for auxiliary/supplementary heater	64
2.9 Removing and installing flame monitor G64	64
2.10 Removing and installing temperature sensor G18	65
2.11 Removing and installing temperature sensor 2 for supplementary and auxiliary heating G587	67
2.12 Pin assignment for auxiliary/supplementary heater	69
2.13 Checking electrical components on auxiliary/supplementary heater	70
3 Coolant circuit with auxiliary/supplementary heater	76
3.1 Connection diagram - coolant hoses	76
3.2 Removing and installing heater coolant shut-off valve	78
3.3 Bleeding coolant circuit	81
4 Fuel supply system	82
4.1 Overview of fitting locations - fuel supply system	82
4.2 Fuel take-off from fuel tank	85
4.3 Checking fuel delivery rate	90

4.4	Removing and installing metering pump V54	94
4.5	Routing of fuel line to auxiliary heater	96
4.6	Checking CO ₂ content in auxiliary heater exhaust gas	98
5	Auxiliary/supplementary heater control	103
5.1	Functional description	103
5.2	Switching auxiliary/supplementary heater on and off	104
6	Further control components	110
6.1	Removing and installing ambient temperature sensor	110
6.2	Removing and installing remote control receiver for auxiliary heater R64	110
6.3	Functional description of remote control for auxiliary/supplementary heater	111
6.4	Adaption of remote control for auxiliary heater	119