

## Contents

|  |           |
|--|-----------|
| <b>00 - Technical data</b> .....   | <b>1</b>  |
| <b>1 Identification</b> .....  | <b>1</b>  |
| 1.1 Gearbox identification .....   | 1         |
| <b>2 Safety precautions</b> .....  | <b>2</b>  |
| 2.1 Safety precautions when working on high-voltage vehicles .....                           | 2         |
| 2.2 Safety precautions when working on vehicles with start/stop system .....                 | 6         |
| 2.3 Safety precautions when using testers and measuring instruments during a road test ..... | 7         |
| 2.4 Safety precautions when working on subframe .....  | 7         |
| 2.5 Safety precautions when tow-starting and towing .....                                    | 7         |
| <b>3 Repair instructions</b> .....   | <b>8</b>  |
| 3.1 Rules for cleanliness .....  | 8         |
| 3.2 General notes .....  | 8         |
| 3.3 General repair instructions .....  | 9         |
| 3.4 Contact corrosion .....  | 11        |
| 3.5 Routing and attaching lines and wiring .....   | 11        |
| <b>4 Technical data</b> .....  | <b>12</b> |
| 4.1 Capacities .....   | 12        |
| 4.2 Allocation of gearbox to engine .....  | 12        |
| <b>32 - Torque converter</b> .....   | <b>14</b> |
| 1 Torque converter .....   | 14        |
| <b>37 - Controls, housing</b> .....  | <b>15</b> |
| <b>1 Selector mechanism</b> .....  | <b>15</b> |
| 1.1 Exploded view - selector lever handle .....  | 15        |
| 1.2 Exploded view - selector mechanism .....   | 16        |
| 1.3 Exploded view - selector lever cable .....   | 18        |
| 1.4 Manual release from position P .....   | 19        |
| 1.5 Removing and installing selector lever handle .....                                      | 19        |
| 1.6 Removing and installing selector mechanism .....   | 22        |
| 1.7 Checking selector mechanism .....  | 24        |
| 1.8 Removing and installing selector lever cable .....                                       | 26        |
| 1.9 Checking and adjusting selector lever cable .....  | 32        |
| 1.10 Removing and installing selector lever lock solenoid N110 .....                         | 36        |
| 1.11 Removing and installing selector lever sensors control unit J587 .....                  | 38        |
| 1.12 Removing and installing gear selector position P switch F305 .....                      | 38        |
| 1.13 Renewing selector shaft oil seal .....  | 38        |
| <b>2 Removing and installing gearbox</b> .....   | <b>41</b> |
| 2.1 Removing gearbox .....   | 41        |
| 2.2 Installing gearbox .....   | 54        |
| 2.3 Tightening torques for gearbox .....   | 62        |
| <b>3 Assembly mountings</b> .....  | <b>64</b> |
| 3.1 Exploded view - assembly mountings .....   | 64        |
| 3.2 Removing and installing tunnel cross member .....  | 64        |
| <b>4 Transporting gearbox</b> .....  | <b>67</b> |
| <b>5 Securing to engine and gearbox support</b> .....  | <b>69</b> |
| <b>6 ATF circuit</b> .....   | <b>70</b> |
| 6.1 Exploded view - ATF circuit .....  | 70        |
| 6.2 Removing and installing ATF cooler .....   | 71        |
| 6.3 Removing and installing ATF lines .....  | 74        |
| <b>7 ATF</b> .....   | <b>79</b> |



|           |  |            |
|-----------|--|------------|
| 7.1       | Checking ATF level   | 79         |
| 7.2       | Draining and filling ATF                                   | 82         |
| <b>38</b> | <b>- Gears, control</b>                                    | <b>87</b>  |
| <b>1</b>  | <b>ATF system</b>  | <b>87</b>  |
| 1.1       | Removing and installing oil pan                            | 87         |
| 1.2       | Removing and installing ATF strainer                       | 90         |
| <b>2</b>  | <b>Mechatronic unit</b>                                    | <b>92</b>  |
| <b>3</b>  | <b>Electric drive motor</b>                                | <b>93</b>  |
| 3.1       | Exploded view - electric drive motor                       | 93         |
| 3.2       | General description - electric drive motor                 | 94         |
| 3.3       | Performing basic setting for electric drive motor          | 94         |
| 3.4       | Removing and installing electric drive motor               | 95         |
| 3.5       | Checking hub of electric drive motor                       | 102        |
| 3.6       | Renewing oil seal for electric drive motor                 | 102        |
| <b>39</b> | <b>- Final drive - differential</b>                        | <b>104</b> |
| <b>1</b>  | <b>Final drive</b>   | <b>104</b> |
| 1.1       | Exploded view - final drive                                | 104        |
| 1.2       | Removing and installing gearbox end cover                  | 107        |
| <b>2</b>  | <b>Gear oil</b>  | <b>111</b> |
| 2.1       | Overview of fitting locations - drain and inspection plugs | 111        |
| 2.2       | Checking gear oil level                                    | 112        |
| 2.3       | Draining and filling gear oil                              | 115        |
| <b>3</b>  | <b>Oil seals</b>   | <b>125</b> |
| 3.1       | Overview of fitting locations - oil seals                  | 125        |
| 3.2       | Renewing oil seal (left-side)                              | 125        |
| 3.3       | Renewing oil seal (right-side)                             | 129        |
| 3.4       | Renewing O-ring on cover for front final drive             | 130        |
| <b>4</b>  | <b>Differential</b>  | <b>132</b> |
| 4.1       | Removing and installing flange shaft (left-side)           | 132        |
| 4.2       | Removing and installing flange shaft (right-side)          | 133        |
| 4.3       | Renewing ball bearing for flange shaft (left-side)         | 136        |
| <b>5</b>  | <b>Gearbox control system</b>                              | <b>139</b> |
| 5.1       | Overview of fitting locations - gearbox control system     | 139        |