

Contents

00 - Technical data	1
1 Identification	1
2 Technical data	2
2.1 Capacities	2
3 Safety information	3
3.1 General safety regulations	3
3.2 Safety precautions when working on vehicles with start/stop system	4
3.3 Safety precautions when using testers and measuring instruments during a road test	4
3.4 Safety precautions when tow-starting and towing	4
4 Repair instructions	6
4.1 Rules for cleanliness	6
4.2 General repair instructions	6
4.3 Deactivating ATF pump and discharging hydraulic accumulator	8
4.4 Contact corrosion	8
4.5 Safety functions of gearbox control unit	8
5 Electrical components	10
5.1 Overview of fitting locations - electrical components	10
30 - Clutch	11
1 Clutch	11
34 - Controls, housing	12
1 Selector mechanism	12
1.1 Assembly overview - selector cables	12
1.2 Assembly overview - selector lever handle	13
1.3 Assembly overview - selector mechanism	14
1.4 Manual release from position P	16
1.5 Removing and installing selector lever handle	17
1.6 Bringing interlock button in handle into installation position	21
1.7 Removing and installing selector mechanism	23
1.8 Checking selector mechanism	26
1.9 Removing and installing selector lever cable	28
1.10 Checking and adjusting selector lever cable	34
1.11 Removing and installing selector lever lock solenoid N110	39
1.12 Removing and installing selector lever sensors control unit J587	42
1.13 Removing and installing gear sensor	43
1.14 Renewing selector shaft oil seal	45
2 Removing and installing gearbox	49
2.1 Removing gearbox	49
2.2 Installing gearbox	79
2.3 Tightening torques for gearbox	90
3 Transporting gearbox	93
4 Securing to engine and gearbox support	94
5 Assembly mountings	95
5.1 Assembly overview - assembly mountings	95
5.2 Removing and installing tunnel cross member	95
5.3 Removing and installing gearbox support with gearbox mounting	98
5.4 Removing and installing gearbox mounting	98
6 Gear oil circuit	100
6.1 Assembly overview - gear oil circuit	100
6.2 Removing and installing gear oil pump	100



7	ATF circuit	103
7.1	Assembly overview - ATF circuit	103
7.2	Removing and installing ATF cooler	105
8	Gear oil	110
8.1	Checking gear oil level	110
8.2	Draining and filling gear oil	111
9	ATF	115
9.1	Checking ATF level	115
9.2	Draining and filling ATF	120
10	Mechatronic unit	125
10.1	Assembly overview - mechatronic unit	125
10.2	Removing and installing oil pan	127
10.3	Removing and installing mechatronic unit	130
35 - Gears, shafts		132
1	Dismantling and assembling gears and shafts	132
39 - Final drive - differential		133
1	Gearbox control system	133
1.1	Overview of fitting locations - gearbox control system	133
2	Oil seals	135
2.1	Overview of fitting locations - oil seals	135
2.2	Renewing left oil seal	135
2.3	Renewing right oil seal	135
3	Differential	141
3.1	Assembly overview - differential	141
3.2	Removing and installing left flange shaft	143
3.3	Removing and installing right flange shaft	148