

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Repair instructions</b>	<b>1</b>
1.1 General repair instructions	1
1.2 Contact corrosion	2
1.3 Rules for cleanliness	3
1.4 Common faults	3
<b>37 - Controls, housing</b>	<b>4</b>
<b>1 ATF</b>	<b>4</b>
1.1 Purging ATF	4
<b>2 Transporting gearbox</b>	<b>14</b>
<b>3 Securing to engine and gearbox support</b>	<b>15</b>
<b>38 - Gears, control</b>	<b>17</b>
<b>1 Dismantling and assembling gearbox</b>	<b>17</b>
1.1 Exploded view - dual-mass flywheel	17
1.2 Exploded view - end cover	18
1.3 Exploded view - input shaft	20
1.4 Exploded view - intermediate housing	21
1.5 Exploded view - pulley set I and II	22
1.6 Exploded view - suction-jet pump, bearing flange	23
1.7 Exploded view - ATF filter, valve unit	25
1.8 Removing and installing dual-mass flywheel	26
1.9 Removing and installing end cover	28
1.10 Cleaning selector shaft	29
1.11 Modifying thrust piece T40099 for use with multitronic gearbox 0AW, front-wheel drive	30
1.12 Removing and installing input shaft	31
1.13 Removing and installing input shaft cover	37
1.14 Renewing ball bearing for input shaft	42
1.15 Removing and installing pulley set I and II	45
1.16 Removing and installing bearings	58
1.17 Removing and installing suction-jet pump	72
1.18 Wear assessment	73
<b>2 Clutch</b>	<b>78</b>
2.1 Exploded view - reverse gear clutch	78
2.2 Exploded view - input shaft with friction plates	79
2.3 Removing and installing reverse gear clutch and determining shim thicknesses	79
2.4 Dismantling and assembling input shaft	86
2.5 Adjusting input shaft and checking clearance	93
2.6 Assessing wear on input shaft	99
<b>39 - Final drive - differential</b>	<b>102</b>
<b>1 Final drive</b>	<b>102</b>
1.1 Exploded view - final drive	102
<b>2 Oil seals</b>	<b>105</b>
2.1 Renewing oil seal (left-side)	105
2.2 Renewing oil seal (right-side)	108
2.3 Renewing oil seal for input shaft	109
2.4 Renewing selector shaft oil seal	110
<b>3 Differential</b>	<b>114</b>
3.1 Removing and installing flange shaft (left-side)	114
3.2 Removing and installing flange shaft (right-side)	117



3.3	Preload of ball bearing for flange shaft (left-side) .....	118
3.4	Renewing mounting bracket and ball bearing for flange shaft (left-side) .....	124
<b>4</b>	<b>Gearbox control system</b> .....	<b>127</b>
4.1	Removing and installing gearbox control unit .....	127
4.2	Removing and installing hydraulic control unit .....	129