

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions when working on the high-voltage system .....	2
2.2 Safety precautions when working in the vicinity of high-voltage components .....	3
2.3 Safety precautions for all vehicles .....	3
<b>3 Repair instructions</b> .....	<b>4</b>
<b>10 - Removing and installing engine</b> .....	<b>5</b>
<b>1 Removing and installing engine</b> .....	<b>5</b>
1.1 Removing engine .....	5
1.2 Securing engine to engine and gearbox support .....	32
1.3 Installing engine .....	32
<b>2 Assembly mountings</b> .....	<b>39</b>
2.1 Exploded view - assembly mountings .....	39
2.2 Supporting engine in installation position .....	42
2.3 Removing and installing engine mountings .....	43
2.4 Removing and installing torque reaction support and cross member .....	44
2.5 Removing and installing gearbox mounting .....	47
<b>3 Engine cover panel</b> .....	<b>50</b>
<b>13 - Crankshaft group</b> .....	<b>51</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>51</b>
1.1 Exploded view - cylinder block (pulley end) .....	51
1.2 Removing and installing poly V-belt .....	51
1.3 Removing and installing tensioner for poly V-belt .....	51
1.4 Removing and installing vibration damper .....	51
1.5 Removing and installing bracket for ancillaries .....	51
<b>2 Cylinder block (gearbox end)</b> .....	<b>55</b>
<b>3 Crankshaft</b> .....	<b>56</b>
<b>4 Balance shaft</b> .....	<b>57</b>
<b>5 Pistons and conrods</b> .....	<b>58</b>
<b>15 - Cylinder head, valve gear</b> .....	<b>59</b>
<b>1 Timing chain cover</b> .....	<b>59</b>
<b>2 Chain drive</b> .....	<b>60</b>
2.1 Exploded view - camshaft timing chains .....	60
2.2 Exploded view - drive chain for balance shaft .....	60
2.3 Removing and installing bearing saddle .....	60
2.4 Removing camshaft timing chain from camshafts .....	60
2.5 Removing and installing camshaft timing chain .....	60
2.6 Removing and installing drive chain for balance shaft .....	61
2.7 Checking valve timing .....	61
<b>3 Cylinder head</b> .....	<b>62</b>
3.1 Exploded view - cylinder head .....	62
3.2 Removing and installing cylinder head .....	62
3.3 Checking compression .....	66
<b>4 Valve gear</b> .....	<b>67</b>
4.1 Exploded view - valve gear .....	67
4.2 Installing ball for slider .....	67
4.3 Removing and installing actuators for camshaft adjustment .....	67



4.4	Removing and installing camshaft	67
4.5	Removing and installing camshaft control valve 1 N205	68
4.6	Removing and installing valve stem oil seals	68
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>69</b>
<b>17</b>	<b>- Lubrication</b>	<b>70</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>70</b>
1.1	Exploded view - sump/oil pump	70
1.2	Engine oil	70
1.3	Removing and installing sump (bottom section)	70
1.4	Removing and installing oil pump	70
1.5	Removing and installing sump (top section)	70
1.6	Removing and installing oil level and oil temperature sender G266	71
<b>2</b>	<b>Engine oil cooler</b>	<b>72</b>
<b>3</b>	<b>Crankcase breather</b>	<b>73</b>
3.1	Exploded view - crankcase breather system	73
3.2	Removing and installing oil separator	73
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>75</b>
<b>19</b>	<b>- Cooling</b>	<b>76</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>76</b>
1.1	Connection diagram - coolant hoses	76
1.2	Checking cooling system for leaks	83
1.3	Draining and filling cooling system	83
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>90</b>
2.1	Exploded view - coolant pump/thermostat	90
2.2	Exploded view - electric coolant pump	90
2.3	Removing and installing electric coolant pump	95
2.4	Removing and installing coolant pump	103
2.5	Removing and installing toothed belt for coolant pump	104
2.6	Removing and installing thermostat	105
2.7	Checking thermostat	105
2.8	Removing and installing coolant temperature sender G62	105
2.9	Removing and installing coolant valves	106
<b>3</b>	<b>Coolant pipes</b>	<b>108</b>
3.1	Exploded view - coolant pipes	108
3.2	Removing and installing coolant pipes	111
<b>4</b>	<b>Radiator/radiator fans</b>	<b>118</b>
4.1	Exploded view - radiator/radiator fans	118
4.2	Exploded view - radiator cowl and radiator fans	120
4.3	Removing and installing radiator	120
4.4	Removing and installing radiator cowl	124
4.5	Removing and installing radiator fan V7	127
4.6	Removing and installing radiator fan control unit J293 / J671	128
4.7	Removing and installing auxiliary radiator	128
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>130</b>
<b>1</b>	<b>Turbocharger</b>	<b>130</b>
1.1	Exploded view - turbocharger	130
1.2	Removing and installing turbocharger	130
1.3	Checking vacuum unit for turbocharger	132
<b>2</b>	<b>Charge air system</b>	<b>133</b>
2.1	Exploded view - charge air system	133
2.2	Exploded view - hose connections for charge air system	136

2.3	Removing and installing charge air cooler	136
2.4	Removing and installing charge pressure sender G31	139
2.5	Checking charge air system for leaks	140
<b>24</b>	<b>Mixture preparation - injection</b>	<b>141</b>
<b>1</b>	<b>Injection system</b>	<b>141</b>
1.1	Overview of fitting locations - injection system	141
1.2	Checking fuel system for leaks	149
<b>2</b>	<b>Vacuum system</b>	<b>150</b>
<b>3</b>	<b>Air cleaner</b>	<b>151</b>
3.1	Exploded view - air cleaner housing	151
3.2	Removing and installing air cleaner housing	152
<b>4</b>	<b>Intake manifold</b>	<b>154</b>
4.1	Exploded view - intake manifold	154
4.2	Removing and installing intake manifold	154
4.3	Removing and installing throttle valve module J338	164
4.4	Cleaning throttle valve module	165
4.5	Checking intake manifold change-over function	165
<b>5</b>	<b>Injectors</b>	<b>166</b>
<b>6</b>	<b>Senders and sensors</b>	<b>167</b>
6.1	Removing and installing intake air temperature sender G42	167
6.2	Removing and installing air mass meter G70	167
6.3	Removing and installing fuel pressure sender G247	167
6.4	Checking fuel pressure sender G247	167
<b>7</b>	<b>High-pressure pump</b>	<b>168</b>
<b>8</b>	<b>Lambda probe</b>	<b>169</b>
8.1	Exploded view - Lambda probe	169
8.2	Removing and installing Lambda probe	169
<b>9</b>	<b>Engine control unit</b>	<b>172</b>
9.1	Removing and installing engine/motor control unit J623	172
9.2	Wiring and component check	174
<b>26</b>	<b>Exhaust system</b>	<b>175</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>175</b>
1.1	Exploded view - silencers	175
1.2	Separating exhaust pipes/silencers	179
1.3	Removing and installing front silencer	181
1.4	Stress-free alignment of exhaust system	182
1.5	Checking exhaust system for leaks	183
<b>2</b>	<b>Emission control system</b>	<b>184</b>
2.1	Exploded view - emission control system	184
2.2	Removing and installing catalytic converter	184
2.3	Removing and installing exhaust flap control unit J883	187
<b>3</b>	<b>Secondary air system</b>	<b>189</b>
3.1	Exploded view - secondary air system	189
3.2	Removing and installing secondary air pump motor V101	190
3.3	Removing and installing secondary air inlet valve N112	190
3.4	Removing and installing sender 1 for secondary air pressure G609	191
<b>4</b>	<b>Exhaust manifold</b>	<b>193</b>
<b>28</b>	<b>Ignition system</b>	<b>194</b>
<b>1</b>	<b>Ignition system</b>	<b>194</b>
1.1	Exploded view - ignition system	194
1.2	Removing and installing ignition coils with output stages	194



1.3	Removing and installing knock sensor 1 G61 .....	194
1.4	Removing and installing Hall sender .....	194
1.5	Removing and installing engine speed sender G28 .....	195