

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Securing engine to engine and gearbox support	26
1.3 Installing engine	26
2 Assembly mountings	35
2.1 Assembly overview - assembly mountings	35
2.2 Supporting engine in installation position	39
2.3 Removing and installing engine mountings	40
2.4 Removing and installing gearbox mounting	42
3 Engine cover panel	47
13 - Crankshaft group	48
1 Cylinder block (pulley end)	48
1.1 Assembly overview - cylinder block (pulley end)	48
1.2 Removing and installing poly V-belt	48
1.3 Removing and installing poly V-belt tensioner	48
1.4 Removing and installing vibration damper	48
1.5 Removing and installing bracket for ancillaries	48
2 Cylinder block (gearbox end)	50
3 Crankshaft	51
4 Balance shaft	52
5 Pistons and conrods	53
15 - Cylinder head, valve gear	54
1 Timing chain cover	54
2 Chain drive	55
3 Cylinder head	56
3.1 Assembly overview - cylinder head	56
3.2 Removing and installing cylinder head	56
3.3 Checking compression	60
4 Valve gear	61
4.1 Assembly overview - valve gear	61
4.2 Removing and installing camshaft	61
4.3 Installing ball for slider	64
4.4 Removing and installing cam adjustment actuators	64
4.5 Removing and installing camshaft control valve 1 N205	64
4.6 Removing and installing valve stem oil seals	64
5 Inlet and exhaust valves	65
17 - Lubrication	66
1 Sump/oil pump	66
1.1 Assembly overview - sump/oil pump	66
1.2 Engine oil	66
1.3 Removing and installing lower part of sump	66
1.4 Removing and installing oil pump	67

1.5	Removing and installing upper part of sump	67
1.6	Removing and installing oil level and oil temperature sender G266	67
2	Engine oil cooler	68
3	Crankcase breather	69
4	Oil filter/oil pressure switches	70
19 - Cooling		71
1	Cooling system/coolant	71
1.1	Connection diagram - coolant hoses	71
1.2	Checking cooling system for leaks	74
1.3	Draining and filling cooling system	75
2	Coolant pump/thermostat assembly	83
2.1	Assembly overview - coolant pump/thermostat	83
2.2	Assembly overview - electric coolant pump	83
2.3	Assembly overview - coolant temperature senders	84
2.4	Assembly overview - coolant valve for gearbox	85
2.5	Removing and installing electric coolant pump	86
2.6	Removing and installing coolant pump	89
2.7	Removing and installing toothed belt for coolant pump	90
2.8	Removing and installing actuator for engine temperature regulation N493	90
2.9	Removing and installing coolant temperature sender G62	91
2.10	Removing and installing radiator outlet coolant temperature sender G83	91
2.11	Removing and installing coolant valves	92
3	Coolant pipes	95
3.1	Assembly overview - coolant pipes	95
3.2	Removing and installing coolant pipes	97
4	Radiator/radiator fans	108
4.1	Assembly overview - radiator/radiator fans	108
4.2	Assembly overview - radiator cowl and radiator fans	110
4.3	Removing and installing radiator	111
4.4	Removing and installing radiator cowl	115
4.5	Removing and installing radiator fan V7	119
21 - Turbocharging/supercharging		122
1	Turbocharger	122
1.1	Assembly overview - turbocharger	122
1.2	Removing and installing turbocharger	122
2	Charge air system	124
2.1	Assembly overview - charge air system	124
2.2	Assembly overview - hose connections for charge air system	126
2.3	Removing and installing charge air cooler	126
2.4	Removing and installing charge pressure sender G31	128
2.5	Checking charge air system for leaks	128
24 - Mixture preparation - injection		130
1	Injection system	130
1.1	Overview of fitting locations - injection system	130
2	Air filter	141
2.1	Assembly overview - air filter housing	141
2.2	Removing and installing air filter housing	141
3	Intake manifold	144
3.1	Assembly overview - intake manifold	144
3.2	Removing and installing intake manifold	144
3.3	Removing and installing throttle valve module J338	148

3.4	Cleaning throttle valve module	148
3.5	Checking intake manifold change-over function	148
4	Injectors	149
4.1	Assembly overview - fuel rail with injectors	149
4.2	Removing and installing fuel rail	149
4.3	Removing and installing injectors	149
4.4	Cleaning injectors	150
5	Senders and sensors	151
6	High-pressure pump	152
7	Lambda probe	153
8	Engine control unit	154
8.1	Removing and installing engine/motor control unit J623	154
26 - Exhaust system		158
1	Exhaust pipes/silencers	158
1.1	Assembly overview - silencers	158
1.2	Separating exhaust pipes/silencers	161
1.3	Removing and installing front silencers	163
1.4	Stress-free alignment of exhaust system	164
1.5	Checking exhaust system for leaks	165
2	Emission control system	166
2.1	Assembly overview - emission control system	166
2.2	Removing and installing catalytic converter	166
2.3	Removing and installing exhaust flap control unit J883	168
28 - Ignition system		169
1	Ignition system	169